
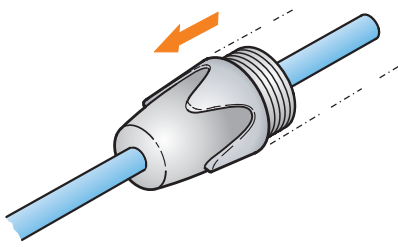
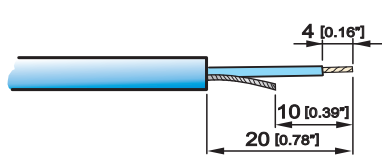
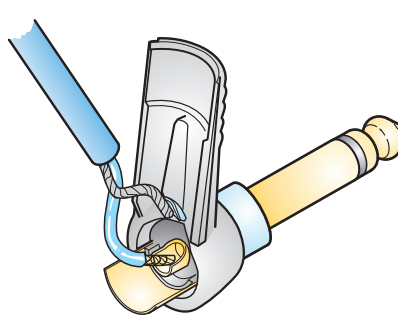
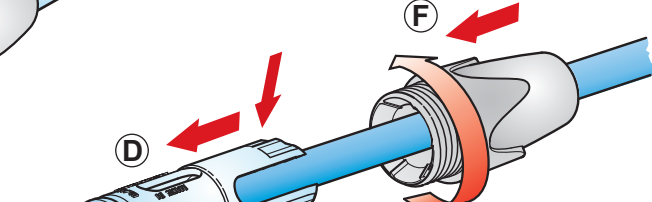
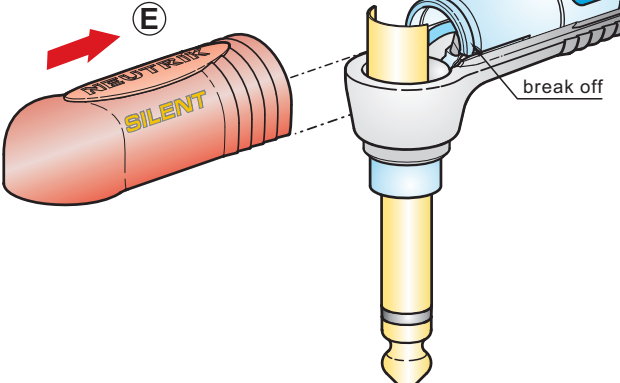


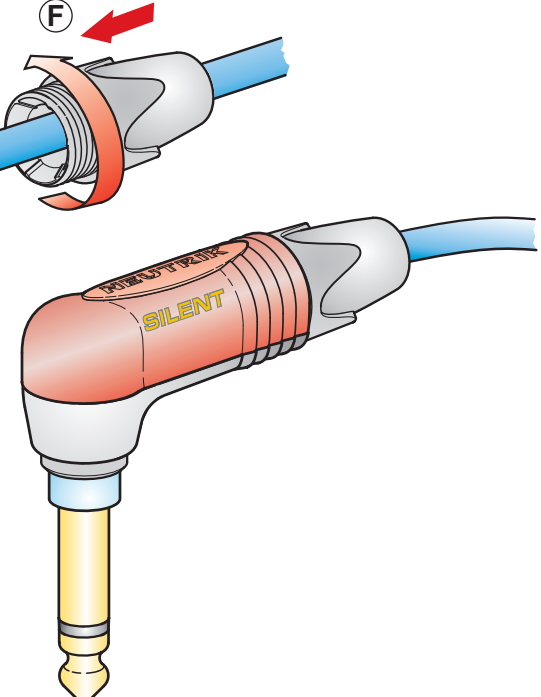

ASSEMBLY INSTRUCTION

NP2RX-AU-SILENT | 1/4" Professional Right Angle Phone Plug

- A** Slide the boot onto the cable.
- B** Prepare cable as shown.
- C** Solder the wire ends in the order Sleeve and Ring.
- D** Position the chuck onto the cable and align chuck with plugfinger.
- E** Push the cover to the stop position on the shell.
- F** Finish the installation by tighten the bushing onto the connector.
- Attention:**
If using a cable with O.D. > 5.50 mm [0.216"] break off marked part of the chuck.
- 
- 
- 
- 
- 
- 

NEUTRIK AG LI T: +423 / 237 24 24 F: +423 / 232 53 93
NEUTRIK Zürich AG CH T: +41 44 / 736 5010 F: +41 44 / 736 5011
NEUTRIK USA Inc. USA T: +1 732 / 901 9488 F: +1 732 / 901 9608
NEUTRIK (UK) Ltd. UK T: +44 1983 / 811 441 F: +44 1983 / 811 439

NEUTRIK Vertriebs GmbH DE/NL/AT T: +49 8131 / 280 890 F: +49 8131 / 280 830
NEUTRIK France FR T: +33 1 / 4131 6750 F: +33 1 / 4131 0511
NEUTRIK Tokyo Ltd. JP T: +81 3 / 3663 4733 F: +81 3 / 3663 4796
NEUTRIK Hong Kong Ltd. HK T: +852 / 2687 6055 F: +852 / 2687 6052

Draft. Nr.: BDA 181/ 3102M1521 | Update: 28.09.2009 | Data subject to change without prior notice. ©2009NEUTRIK®. ALL RIGHTS RESERVED.