

CAJON PEDAL MILLENIUM CP-777

You need the included drum key to assemble the cajon pedal. Proceed as follows:

Unscrew the locking screw (1) for the cajon holder a few millimeters from the base frame (Fig. 1). Attach the cajon holder (2) to the base frame and (3) and fix it with the locking screw (1) (Fig. 2).



Fig. 1

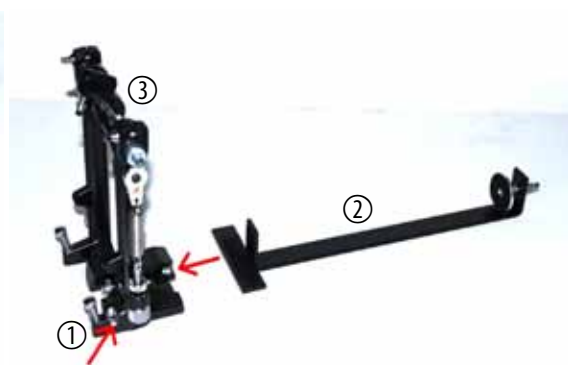


Fig. 2

Attach the cardan shaft (4) to the swivel joint of the beater (5) on the base frame (Fig. 3) and to the drive shaft (6) of the pedal (Fig. 4).



Fig. 3



Fig. 4

Fig. 5 shows the complete assembly of the cajon pedal. Place the cajon on the cajon holder and fix it with the hand screw. Fig. 6 shows the complete setup of a cajon with the cajon pedal.



Fig. 5



Fig. 6