

MOUNTING INSTRUCTIONS

GLUEING ABSORBERS

These instructions are for the following products: Highline series (A1, A2, A3) WAS-7, WAW-7, WAW-7 Flock, HiLo products (N25, N40, N70, N80 etc.) Melamine products (Wave, Wedges, Pyramid, Nook Sets etc.), SA products (N30, N80, N50, N65 etc.) and other modules made of acoustic foam.



TOOLS


The following tools are needed for installation:

- ✓ Box Cutter
- ✓ Level
- ✓ Caulk Gun
- ✓ Folding ruler or tape measure
- ✓ Pencil
- ✓ **t.akustik glue**

We recommend using our t.akustik glue for installation.

UNBOXING

Open the package carefully! Inserting sharp objects into the package can damage the absorber. Avoid using long, sharp tools for opening the package!

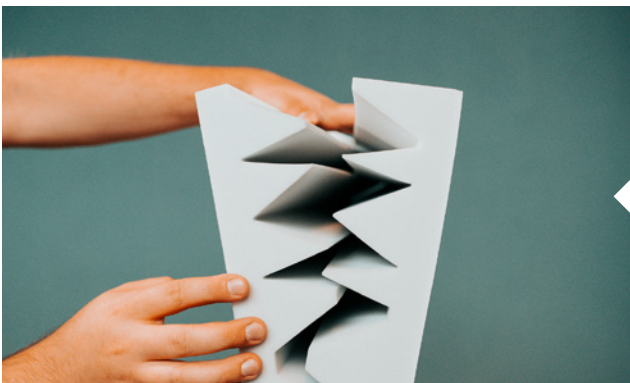

REMOVE PRODUCTS FROM PACKAGING

Carefully remove the absorbers from the package. Type WAS-7 elements are nested in the package. Carefully separate the two absorbers. This is especially important for melamine variants.

DETERMINE THE MOUNTING POSITION

While determining the mounting positions, it helps to mark the walls and ceiling using a level and tape measure, in order to achieve even spacing in relation to corners and sound sources.







PREPARE THE CAULK GUN

Carefully open the glue cartridge using a utility knife. Take care to point the knife away from your body. Thread the included nozzle onto the opening. Insert the cartridge into the caulk gun. For thicker lines of glue, you can use the knife to enlarge the opening of the nozzle.

APPLY THE GLUE

Apply the glue to the back of the absorber in an even line along the outer edge. It also helps to apply some glue to the center of the absorber in an X pattern, in order to hold the center firmly in place. Depending on the condition of the walls, we recommend using a generous amount of glue along the outer edges.

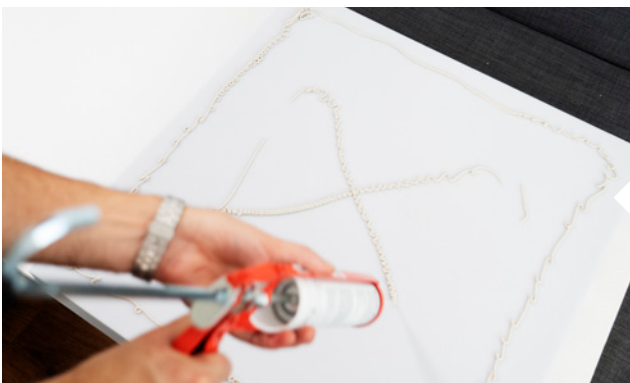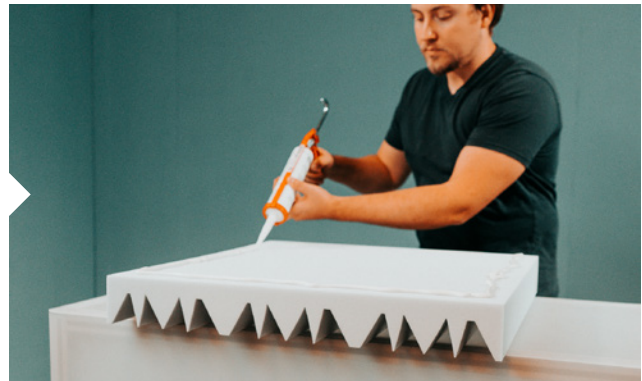

LET GLUE SET FOR 5 MINUTES

Before mounting the absorber on the wall, let the glue set for 5 minutes on the element. This ensures that it can develop its full holding strength.

INSTALL THE ABSORBER

Press the absorber onto the wall or ceiling in the marked position and apply even pressure along the lines of glue for 2 minutes. We recommend checking the alignment using a level and making necessary adjustments by slightly rotating the element. That's it!



TIP:

Depending on the condition of the wall, it is recommended to apply a thicker line of glue by enlarging the nozzle of the cartridge using a utility knife.



Find more solutions for your room on our website:
www.takustik.com



Share your installation with us on Instagram:
www.takustik.com/instagram



Find more installation guides on YouTube:
www.takustik.com/youtube

This product is intended to be used to optimise the room acoustics. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.



Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!



When opening the glue cartridge using a knife or a cutter, pay attention not to injure your fingers/hands. Risk of cutting!



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling. Ensure that plastic bags, packaging, etc. are properly disposed of. Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.