





StudioLive Joining Adapter Installation Instructions

Step 1:

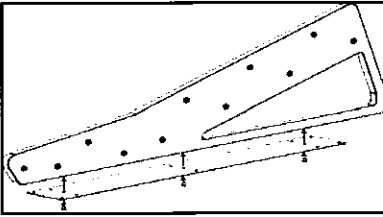


Align the 3 screw holes in the middle of the Bottom Mount piece with screw holes on the bottom of the Joining Adapter. The end of the Bottom Mount labeled "Front" should be at the narrow end of the Joining Adapter. Using a Philips screw driver, attach the Bottom Mount piece to the Joining Adapter with the included screws.

Step 2:

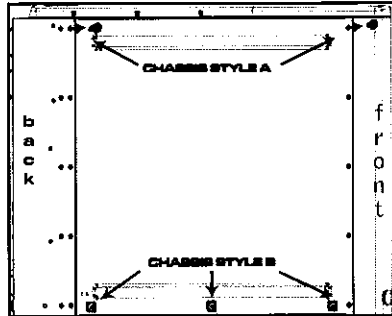



There are two different chassis styles for the StudioLive. Chassis Style B has 3 threaded screw holes on each side of the bottom of the unit. Chassis Style A does not have these threaded holes. If either one of your mixers has Chassis Style A, you will need to remove the two screws closest to the front of the unit on the side that will be joined, leaving the screw closest to back of the unit in place.

Step 3:

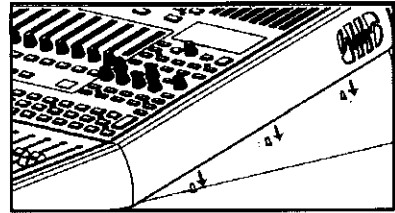


Using a Philips screwdriver, remove the 3 screws beneath the decorative plastic side panel on the right side of the mixer that you will be placing on the left. Set these screws aside. You will need them should you want to reinstall the right side panel at some point in the future.

Step 4:

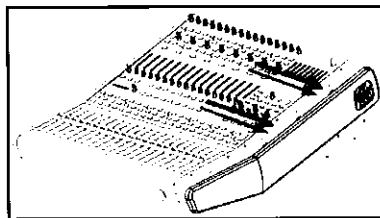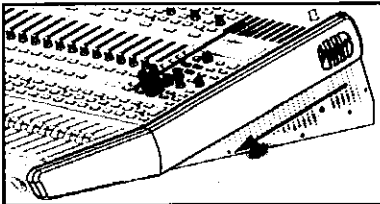


Gently slide the plastic side panel toward the front of your StudioLive until you hear a click. Pull the side panel toward you to remove it.

Step 5:

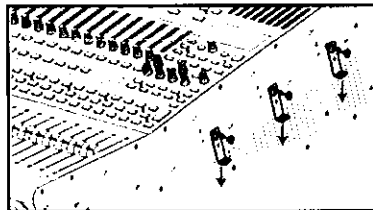


Once the side panel is removed, you will see 3 metal clips. Remove the screw that attaches each of these clips to your StudioLive. Attach the clips back to the decorative side panel using the screws you removed in Step 1 to store them. Both the clips and screws are necessary to reattach the side panel. Repeat Steps 3-5 with the Left side of the StudioLive that will be placed on the right.

Step 6:

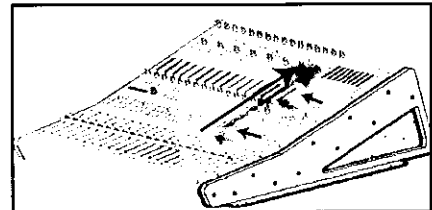


Align the left side of the Joining Adapter with the key holes on the right side of the StudioLive that will be placed on the left and gently slide the Joining Adapter toward the back of the mixer until it locks in place. You will hear a click and the Joining Adapter will be in line with the front of the StudioLive.

Step 7:

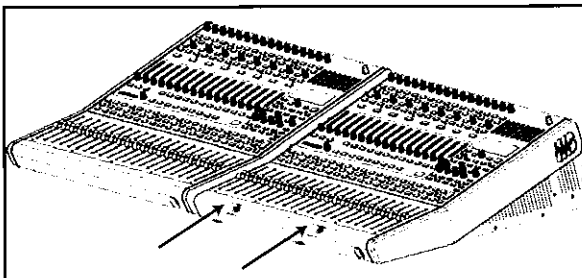

Align the key holes on the left side of the mixer that will be placed on the right with the studs on the available side of the Joining Adapter. Push the unattached StudioLive towards the other unit until there is no space between them and slide the right side unit toward the back until it locks into place. You will hear a click and the front both units should be aligned with on another.

Step 8:

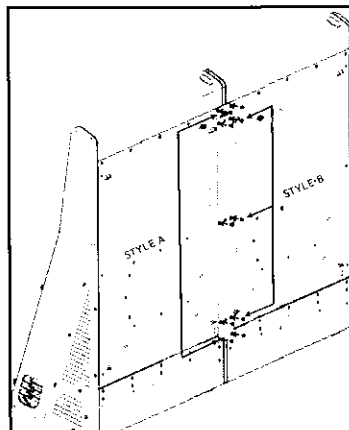

Gently rest your joined StudioLives on their back panel. If one of your mixers has Chassis Style A, you will only attach the screw at the front and the screw at the back on its side. Chassis Style B mixers should be connected with the 3 screws in the middle.