



Pyrit 10, 12, 15

Passive Speaker

Thomann GmbH

Hans-Thomann-Straße 1

96138 Burgebrach

Germany

Telephone: +49 (0) 9546 9223-0

Internet: www.thomann.de

10.10.2024, ID: 299642, 299643, 299646 (V3)

Table of contents

1	General information	5
	1.1 Symbols and signal words.....	5
2	Safety instructions	7
3	Features	9
4	Installation	10
	4.1 Tips on handling speakers.....	13
	4.2 Suspending the speaker.....	14
	4.3 Connections.....	14
5	Technical specifications	15
6	Plug and connection assignment	25
7	Protecting the environment	26





1 General information

This document contains important instructions for the safe operation of the product. Read and follow the safety instructions and all other instructions. Keep the document for future reference. Make sure that it is available to all those using the product. If you sell the product to another user, be sure that they also receive this document.

Our products and documentation are subject to a process of continuous development. They are therefore subject to change. Please refer to the latest version of the documentation, which is ready for download under www.thomann.de.

1.1 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this document.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – suspended load.
	Warning – danger zone.

2 Safety instructions

Intended use

This device is designed for sound reinforcement. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Risk of injury and choking hazard for children!

Children can suffocate on packaging material and small parts. Children can injure themselves when handling the device. Never allow children to play with the packaging material and the device. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the device without supervision. Keep small parts away from children and make sure that the device does not shed any small parts (such as knobs) that children could play with.



WARNING!

Possible hearing damage due to operating the device at a high volume!

The device can produce volume levels that, when operated at a high volume, may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage. Avoid operating the device at excessively high volumes over an extended period of time. Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use adequate ear-muffs.



CAUTION!

Risk of injury due to heavy weight!

The device is heavy. Lifting and dropping it during transport and installation can cause injuries. Make sure at least two people work together when transporting and installing the device.



NOTICE!

Damage to the device if operated in unsuitable ambient conditions!

The device can be damaged if it is operated in unsuitable ambient conditions. Only operate the device indoors within the ambient conditions specified in the "Technical specifications" chapter of this user manual. Avoid operating it in environments with direct sunlight, heavy dirt and strong vibrations. Avoid operating it in environments with strong temperature fluctuations. If temperature fluctuations cannot be avoided (for example after transport in low outside temperatures), do not switch on the device immediately. Never subject the device to liquids or moisture. Never move the device to another location while it is in operation. In environments with increased dirt levels (for example due to dust, smoke, nicotine or mist): Have the device cleaned by qualified specialists at regular intervals to prevent damage due to overheating and other malfunctions.



NOTICE!

Possible staining due to plasticiser in rubber feet!

The plasticiser contained in the rubber feet of this product may react with the coating of the floor and cause permanent dark stains after some time. If necessary, use a suitable mat or felt slide to prevent direct contact between the product's rubber feet and the floor.

3 Features

Special features of this passive 2-way full-range speaker:

Special features of the device:

- item no. 299642: 1 × 10-inch woofer, 1 × 1.4-inch tweeter
- item no. 299643: 1 × 12-inch woofer, 1 × 1.7-inch tweeter
- Item no. 299646: 1 × 15-inch woofer, 1 × 1.7-inch tweeter
- 2 × lockable Speaker Twist socket
- Beam angle: 60° × 90°
- item no. 299642: M6 rigging points
- Item no. 299643 and 299646: M8 rigging points
- Built-in feet for monitor applications
- Double pole mounting flange (vertical and 5° inclination)
- Ceiling mounting possible for item no. 299643 (with optionally available mounting bracket, item no. 310126)
- Powder-coated front grille

4 Installation

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

You can install the device standing or hanging. When in use, the device must be mounted at a solid surface or clamped to an approved truss.

Work from a stable platform whenever you install or move the device or when you perform any kind of maintenance. Block access under the work area.



WARNING!

Risk of injury from falling devices that were inadequately secured!

If devices are not properly secured during assembly, they can cause severe injury and considerable damage by falling.

When installing and operating, make sure to follow the standards and regulations that apply in your country.

Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.



WARNING!

Risk of injury due to improper installation!

Improper mounting can lead to serious injuries and significant damage to property.

When installing and operating, make sure to follow the standards and regulations that apply in your country. In Germany, this is DGUV regulation 17 “Staging and Production Facilities for the Entertainment Industry”.

Ensure that speakers are only mounted by trained specialists.



CAUTION!

Risk of injury due to heavy weight!

The device is heavy. Lifting and dropping it during transport and installation can cause injuries.

Make sure at least two people work together when transporting and installing the device.



NOTICE!

Possible property damage to adjacent devices due to magnetic fields.

Speakers generate a static magnetic field. This magnetic field can affect other neighbouring units and in unfavourable cases damage them.

Ensure that speakers are always a sufficient distance away from sensitive equipment that may be affected by an external magnetic field.



NOTICE!

Potential property damage due to unsuitable stands!

If the device is mounted on an unsuitable stand, there is a risk that the stand will fall over and cause damage.

Only use stands whose maximum bearing capacity is at least as high as the weight of the device. Always ensure that the stand is stable.

4.1 Tips on handling speakers

We recommend you to set up the speakers in a way, that the sound signals can reach the audience unobstructedly. It will often be helpful to mount the speakers on tripods. Thus, the sound will be evenly spread with maximum range throughout the audience area.

Always use high grade cable to connect your equipment. Otherwise you won't reach maximum sound quality.


For optimum results both impedance and power handling of the speakers must match the requirements of the amplifier. Always follow the technical specifications of the speakers! The overall impedance of the connected loudspeakers must not exceed the minimum output impedance of the amp. The amp's max. RMS output power should be 50 % above the power handling capacity of the connected speakers.

If you notice distortion during operation, either the amp or the speaker is overloaded. This may permanently damage the amp or the speaker. Always reduce the volume when you hear distortion.

4.2 Suspending the speaker

The speaker is equipped with M6 threads (item no. 299642) or M8 threads (item no. 299643 and 299646) at the top, bottom and sides, which allow it to be suspended from special holders (known as “flying” in the event technology business). Safety eyes can be screwed into these threads. Check the secure connection of the safety eyelets with the box carefully, before you use it in ‘flying mode’.


4.3 Connections

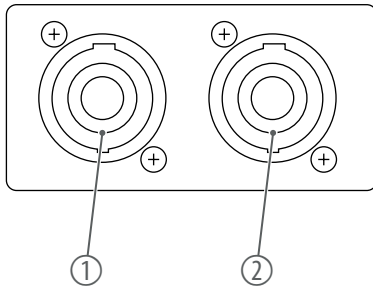

- 1 Input, designed as a lockable Speaker Twist socket
- 2 Output for another speaker, designed as a lockable Speaker Twist socket

5 Technical specifications

Pyrit 10 (item no. 299642)

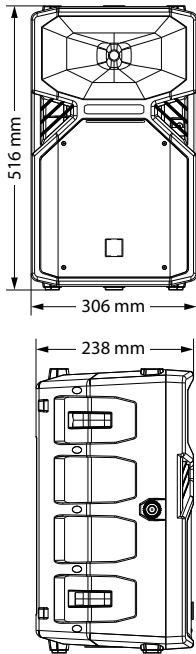


System	2-way full-range speaker	
Configuration	Woofer	1 × 10-inch speaker (ferrite) with 75-mm voice coil
	Tweeter	1 × 1.4-inch compression driver (ferrite) with 34-mm voice coil
Input connections	1 × Speaker Twist	
Output connections	1 × Speaker Twist	
Frequency range	55 Hz...20 kHz, -3 dB	
Load capacity	RMS: 250 W	
	Peak: 1000 W	
Sensitivity (1 W/1 m)	93 dB SPL	
Rated impedance	8 Ω	
Max. sound pressure level	113 dB SPL	
Max. short-term sound pressure level	123 dB SPL	


Technical specifications

Beam angle (H × V)	60° × 90°	
Dimensions (W × H × D)	306 mm × 516 mm × 238 mm	
Weight	13.2 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	20%...80% (non-condensing)

Frequency response

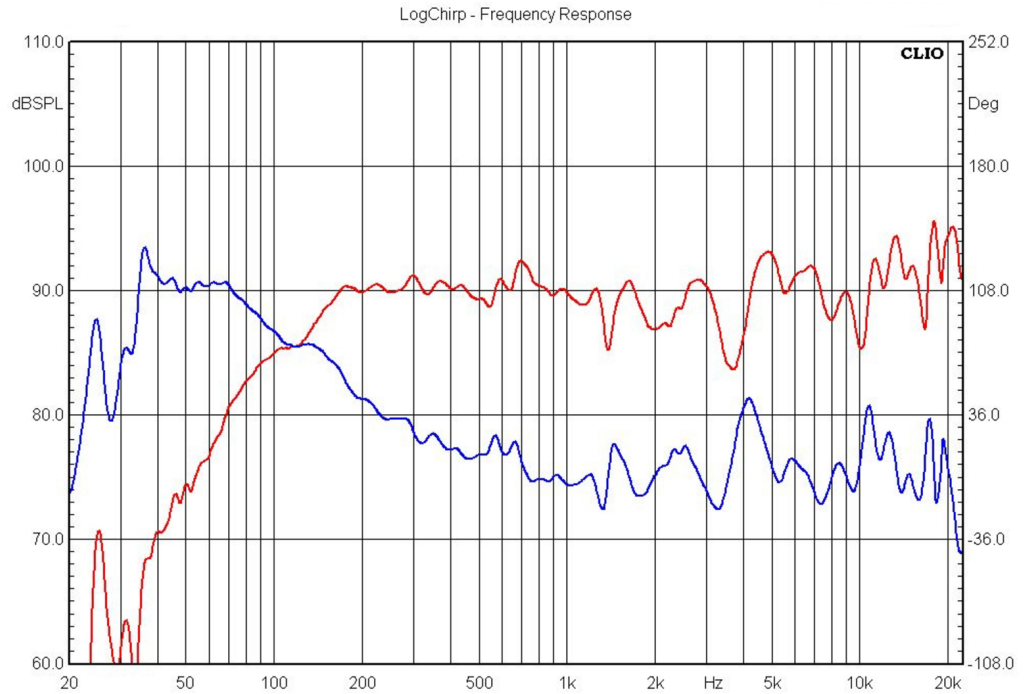


Pyrit 12 (item no. 299643)

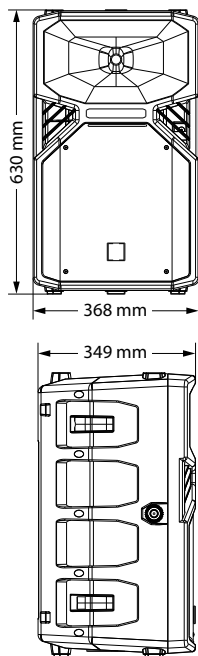


System	2-way full-range speaker	
Configuration	Woofer	1 × 12-inch speaker (ferrite) with 75-mm voice coil
	Tweeter	1 × 1.7-inch compression driver (ferrite) with 44-mm voice coil
Input connections	1 × Speaker Twist	
Output connections	1 × Speaker Twist	
Frequency range	50 Hz...20 kHz, -3 dB	
Load capacity	RMS: 300 W	
	Peak: 1200 W	
Sensitivity (1 W/1 m)	97 dB SPL	
Rated impedance	8 Ω	
Max. sound pressure level	115 dB SPL	
Max. short-term sound pressure level	126 dB SPL	
Beam angle (H × V)	60° × 90°	
Dimensions (W × H × D)	368 mm × 630 mm × 349 mm	

Weight	20 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	20%...80% (non-condensing)

Frequency response

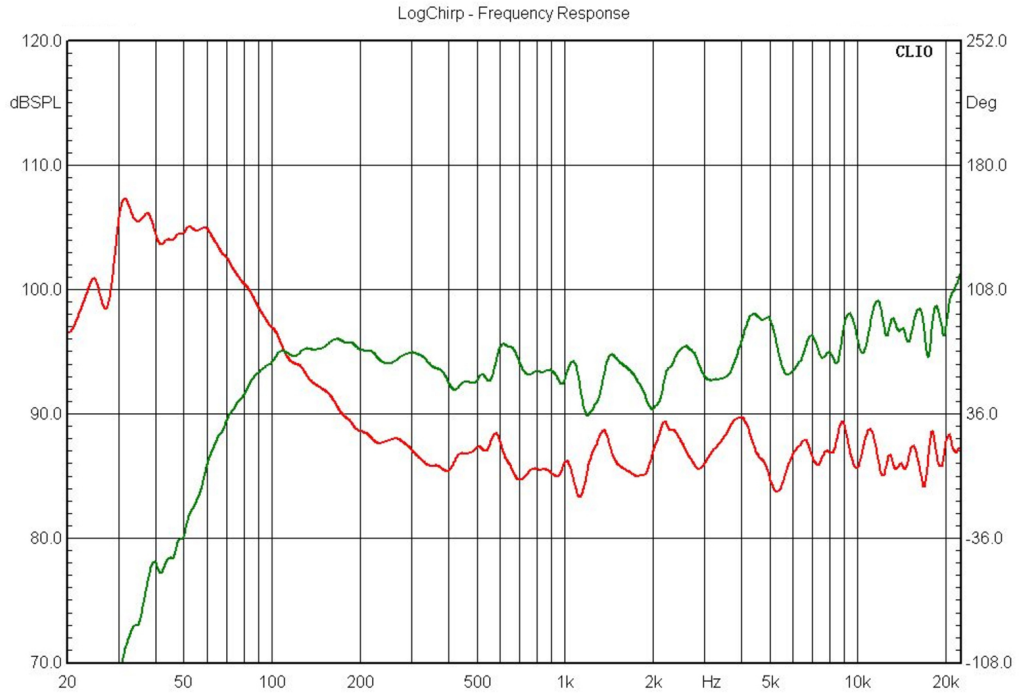

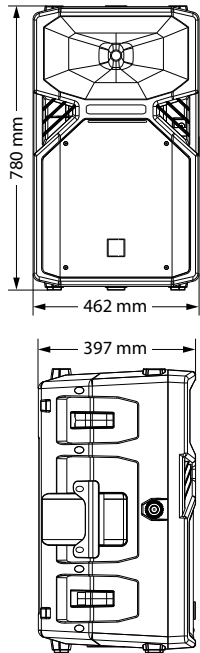
Pyrit 15 (item no. 299646)


System	2-way full-range speaker	
Configuration	Woofer	1 × 15-inch speaker (ferrite) with 75-mm voice coil
	Tweeter	1 × 1.7-inch compression driver (ferrite) with 44-mm voice coil
Input connections	1 × Speaker Twist	
Output connections	1 × Speaker Twist	
Frequency range	45 Hz...20 kHz, -3 dB	
Load capacity	RMS: 350 W	
	Peak: 1400 W	
Sensitivity (1 W/1 m)	96 dB SPL	
Rated impedance	8 Ω	
Max. sound pressure level	119 dB SPL	
Max. short-term sound pressure level	127 dB SPL	
Beam angle (H × V)	60° × 90°	
Dimensions (W × H × D)	462 mm × 780 mm × 397 mm	

Technical specifications

Weight	26.8 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	20%...80% (non-condensing)

Frequency response

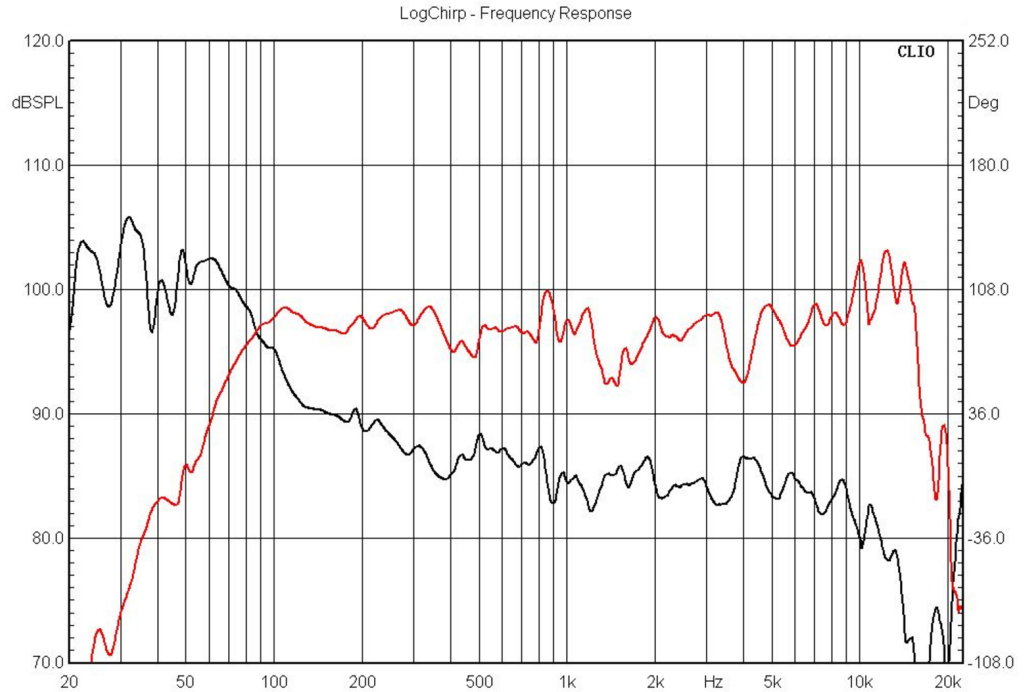

Further information

	Pyrit 10 (item no. 299642)	Pyrit 12 (item no. 299643)	Pyrit 15 (item no. 299646)
Monitor inclination	Yes	Yes	Yes
Ways	2-way	2-way	2-way
Design	Standard	Standard	Standard
Truss-capable	M6	M8	M8
Colour	Black	Black	Black
Housing	Plastic	Plastic	Plastic
Stand flange	36 mm	36 mm	36 mm
Protective cover	Optional (item no. 321394)	Optional (item no. 338000)	Optional (item no. 338001)
Mounting bracket for ceiling mounting	–	Optional (item no. 310126)	–


6 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!


Speaker Twist chassis connector

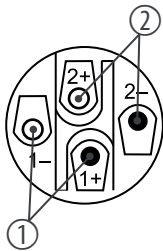

1, +	Signal 1 (in phase)
1, -	Signal 1 (out of phase)
2, +	Signal 2 (in phase)
2, -	Signal 2 (out of phase)


7 Protecting the environment

Disposal of the packing material

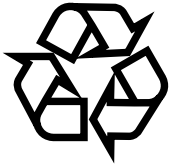


Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner.

Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.



Observe the disposal note regarding documentation in France.

Disposal of your old device

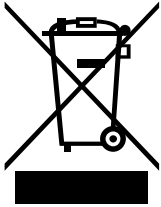

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended.

Do not dispose of your old device with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. If in doubt, consult your local waste management facility. You can also return the device to a retailer if they offer to take the device back for free or if they are legally obliged to do so. When disposing of the device, comply with the rules and regulations that apply in your country. You can also return your old device to Thomann GmbH at no charge. Check the current conditions on www.thomann.de.

Proper disposal protects the environment as well as the health of your fellow human beings. This is because the proper handling of old devices negates the potential negative effects of hazardous substances, and because it conserves resources by recycling them.

Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal.

If your old device contains personal data, delete those data before disposing of it.

