

10 MAINTENANCE AND CLEANING

The following points have to be considered during the inspection:

- 1) All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damage, material fatigue or sediments.

Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.



CAUTION

Disconnect from mains before starting maintenance operation.



In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating.

We recommend a frequent cleaning of the device. Please use a moist, lint- free cloth. Never use alcohol or solvents.


There are no serviceable parts inside the device. Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine parts from your local dealer.

EXPOLITE

TourSpot 50 Mini

Bedienungsanleitung

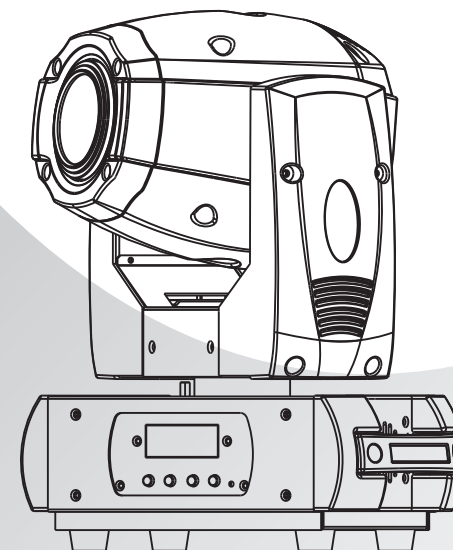

IP20: led21300

1 SICHERHEITSHINWEISE



ACHTUNG

Dieses Gerät wird mit Netzspannung betrieben. Bei unsachgemäßer Handhabung besteht die Gefahr von Stromschlägen!

Dieses Gerät wurde vor dem Versenden geprüft. Um einen sicheren und gefahrlosen Betrieb zu gewährleisten müssen die Sicherheitshinweise in der Bedienungsanleitung beachtet werden.



WICHTIG

Beschädigungen die durch falsche Handhabung oder Missachtung der Bedienungsanleitung entstehen werden nicht von der Gewährleistung abgedeckt.

Wenn das Gerät eine starke Temperaturschwankung erlitten hat darf es nicht sofort eingeschaltet werden. Dies gilt besonders für das Verladen von kalten zu warmen Orten. Es kann zu Kondenswasserbildung kommen.

Das Gerät fällt in die Schutzklasse 1. Es muss eine ausreichende Erdung sichergestellt sein.

Die Elektrische Verbindung muss von sachkundigem Personen durchgeführt werden.

Achten Sie auf eine den Angaben am Gerät entsprechende Spannungsquelle.

Die zulässige Eingangsspannung darf nicht überschritten werden.

Das Zuleitungskabel darf keine Beschädigungen wie offen liegende Kontakte oder Knickstellen aufweisen.

Die Spannungsversorgung muss getrennt werden, wenn das Gerät montiert oder gewartet wird. Das Stromkabel nur am Stecker stecken oder herausziehen. Nicht am Kabel ziehen.

Bei der ersten Inbetriebnahme kann es zu austretendem Staub oder leichter Geruchsbildung kommen. Dies ist Fertigungsbedingt und bedeutet nicht, dass das Gerät defekt ist.

Den Lichtstrahl nicht auf leicht entflammbare Oberflächen oder Materialien richten.

Das Gerät darf nicht in unmittelbarer Nähe von entflammbaren Materialien betrieben werden. Um eine ausreichende Belüftung sicher zu stellen muss das Gerät wenigstens 50cm von der nächsten Wand oder Abdeckung montiert werden.

9	7	Shutter	32-63	Shutter open
			64-95	Strobe effect slow to fast
			96-127	shutter open
			128-159	Pulse-effect in sequences slow to fast
			160-191	shutter open
			192-223	Random strobe effect slow to fast
			224-255	shutter open
10	8	Dimmer	0-255	Dimmer 0%...100%
11	9	Focus	0-255	In(near) to out(far)
12	10	Prism & Rrotating	0-5	OFF
			6-127	ON
			128-255	Rrotating from slow to fast
13	11	Special function	0-19	No function
			20-29	No function
			30-39	No function
			40-79	No function
			80-84	All Motor reset
			85-87	Scan motor reset
			88-90	Colors motor reset
			91-93	Gobo motor reset
			94-96	Shutter&Dimmer motor reset
			97-99	Other motor reset
			100-119	Internal program 1
			120-139	Internal program 2
			140-159	Internal program 3
			160-179	Internal program 4
			180-199	Internal program 5
200-219	Internal program 6			
220-239	Internal program 7			
			240-255	Internal Sound program 1

9 DMX CHANNELS


Mode/Channel	Function	Values	Description
16b	8b		
1	1	Pan	0-255 PAN Movement
2		Pan-fine	0-255 Fine control of Pan movement
3	2	Tilt	0-255 Tilt Movement
4		Tilt-fine	0-255 Fine control of Tilt movement
5	3	Speed pan/tilt	0-225 max to min speed
			226-235 blackout by movement
			236-245 blackout by all wheel changing
			246-255 no function
6	4	Color wheel	0-15 Open / white
			16-31 Color 1
			32-47 Color 2
			48-63 Color 3
			64-79 Color 4
			80-95 Color 5
			96-111 Color 6
			112-127 Color 7
			128-189 Forwards rainbow effect from fast to slow
			190-193 Color rotation stop
			194-255 Backwards rainbow effect from slow to fast
			7
10-19 gobo 1			
20-29 gobo 2			
30-39 gobo 3			
40-49 gobo 4			
50-59 gobo 5			
60-69 gobo 6			
70-89 Gobo 1 shake slow to fast			
90-109 Gobo 2 shake slow to fast			
110-129 Gobo 3 shake slow to fast			
130-149 Gobo 4 shake slow to fast			
150-169 Gobo 5 shake slow to fast			
170-189 Gobo 6 shake slow to fast			
190-255 Rot. gobo wheel cont. rotation slow to fast			
8	6	Gobo rotation	
			4-127 Forwards gobo rotation from fast to slow
			128-131 Gobo rotation stop
			132-255 Backwards gobo rotation from slow to fast
			0-31 Shutter closed

2 VERPACKUNG UND LIEFERUMFANG

Danke das Sie sich für ein Produkt von Expolite entschieden haben. Lesen Sie die Bedienungsanleitung aufmerksam bevor Sie das Gerät in Betrieb nehmen. Hier finden Sie umfangreiche Informationen zur Handhabung. Beachten Sie zur auch die Sicherheitshinweise und heben Sie diese Anleitung auf.



Der TourSpot 50 Mini hat ein Gehäuse aus temperaturbeständigen technischen Kunststoffen und Aluminium. Das Gerät und dessen Herstellung hält sich an alle Normen und erfüllt die Anforderungen zur CE-Kennzeichnung. Die Steuerung erfolgt über das DMX512 Protokoll. Der kompakte Movinghead ist für große Live-Performances, Theater, Studio, Nachtclubs und Diskotheken konzipiert.

Der TourSpot 50 Mini hat eine weiße 50W LED-Lichtquelle, die eine hohe Helligkeit bei großer Stabilität bietet. Packen Sie das Gerät sorgfältig aus und überprüfen Sie, ob es während des Transports beschädigt wurde. Kontrollieren Sie anschließend den Lieferumfang auf Vollständigkeit:

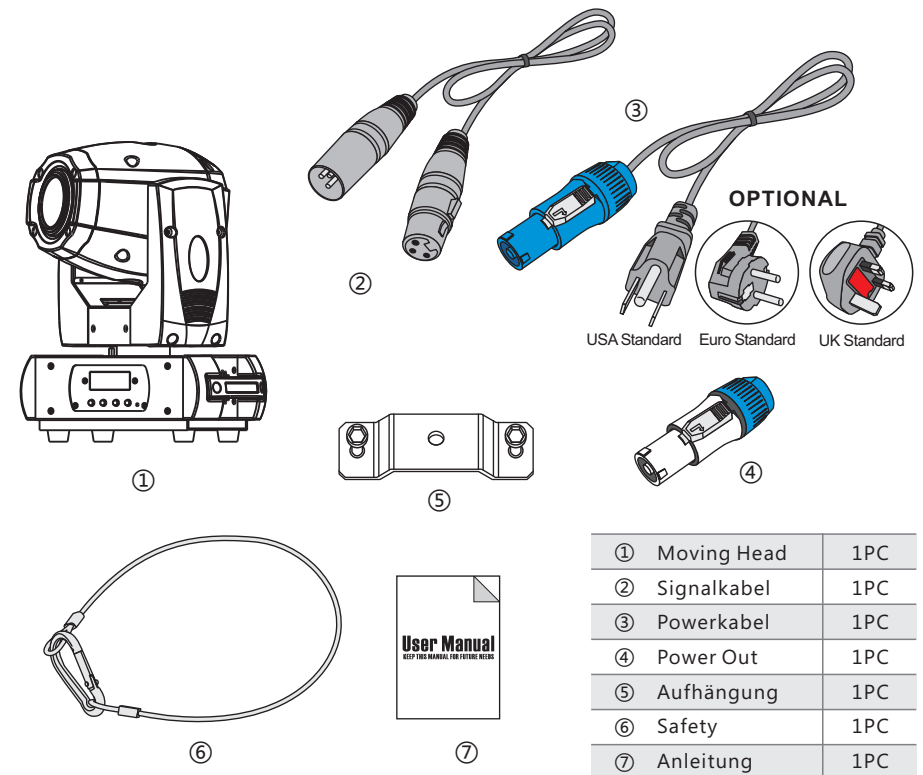


3 TECHNISCHE DATEN

- Weiße 50W LED
- Bis zu 50000 Stunden Lebenserwartung
- 8/16 bit Auflösung für PAN/TILT Bewegungen
- 360°/540°/630° PAN und 90°/180°/270° TILT
- Automatische Positionskorrektur
- 11.9° Abstrahlwinkel
- Hochwertige Optik mit sehr guter Projektion
- 1 rotierendes Goborad mit 6 Austauschbaren Gobos
- Gobo Durchmesser 21.8mm/14.5mm (Außen/Innen)
- 1 Farbrad mit 7 Farben und Weiß
- Variabler Regenbogeneffekt
- Elektronischer Fokus
- 3-Facetten Prisma
- 0-100% linearer Dimmer
- Strobe Funktion bis 25Hz
- Random Strobe Effekt und Pulse Effekt
- 2 DMX-Modi mit 11 oder 13 Kanälen
- DMX512, Master-Slave und Sound to Light sowie 7 Automatikprogramme
- Programmierbarer DMX-Rekorder
- Rot hinterleuchtetes Display
- Powercon Anschluss
- 3-pin XLR DMX in und out
- Intelligente Lüftersteuerung
- Temperaturüberwachung
- 45°C maximale Umgebungstemperatur
- Schutzklasse IP20

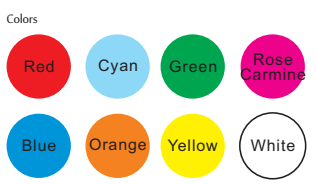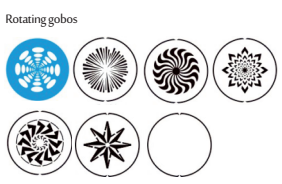


For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

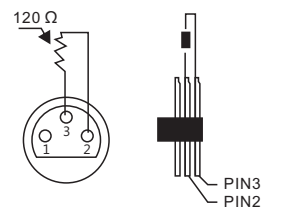

8 MENU OPERATIONS

MODE	ADDR	VALU	A001~AXXX (AXXX)	DMX address setting
		SLAV	ON/OFF (SLAV)	Slave
AUTO	IP1~8	ALON (AU-A)	Alone setting	
		MAST (AU-M)	Master setting	
	SOUN	IP1~8	ALON (SO-A)	Alone setting
			MAST (SO-M)	Master setting
SET	MIC	M-XX	Mic sensitivity	
	LODA	ON/OFF	Data reload	
	VER	V-1.0~V-9.9	Software version	
	CALI	CH1	0--255	Color calibration
		CH2	0--255	Gobo calibration
CH3		0--255	Focus calibration	
DMX	MOD1		16B mode	
	MOD2		8B Mode	
REST	ON/OFF		Reset	
SIGL	S1		Wired mode	
	S2		Wireless Mode	
	S3		Wireless IN and wired OUT	
TEMP	TXXX		Temperature reading	
DEGR	PAN	630/540/360	PAN angle options	
	TILT	270/180/90	TILT angle options	


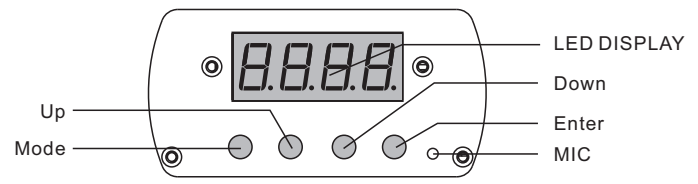


Technische Daten

- Spannung:** 90-260V 50/60Hz
- LED:** 1*50W weiß
- Steuerung:** DMX512, master-slave, sound to light und automatik
- DMX-Kanäle:** 11/13
- Leistungsaufnahme:** 55W
- Abmessungen:** 149mm x 270mm x 366mm
- Gewicht:** 6.6kg


7 DMX-512 CONTROL CONNECTIONS

Connect the provided XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the moving head. You can chain multiple Moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.
DMX-512 connection with DMX terminator

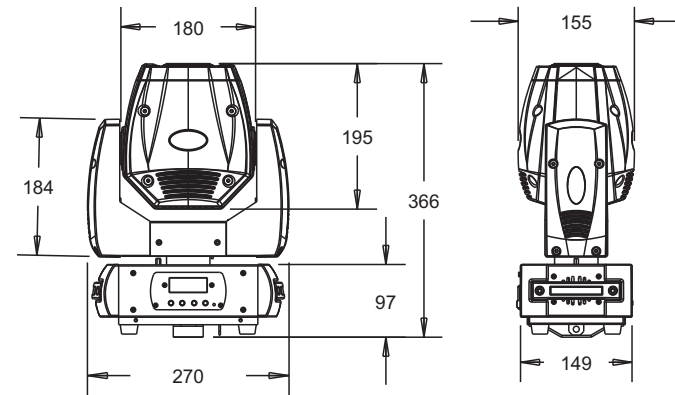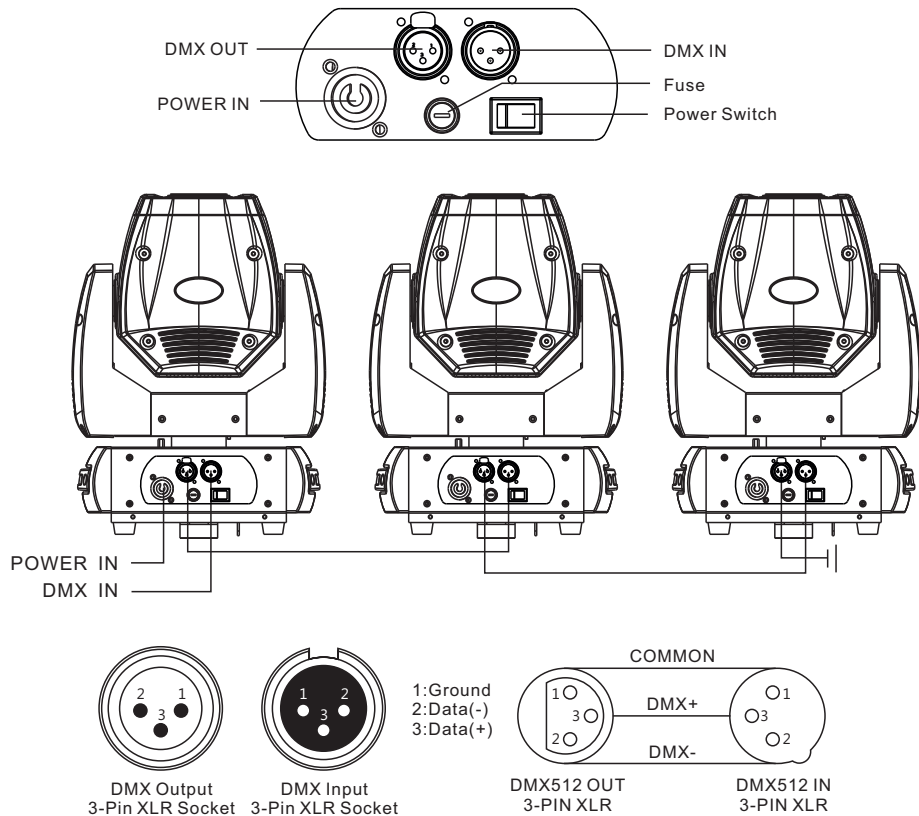

4 Fotometrische Daten

■ Daten des weißen Lichtkegels 11.9° Beam Angle $LUX \times 0.0929 = FC$

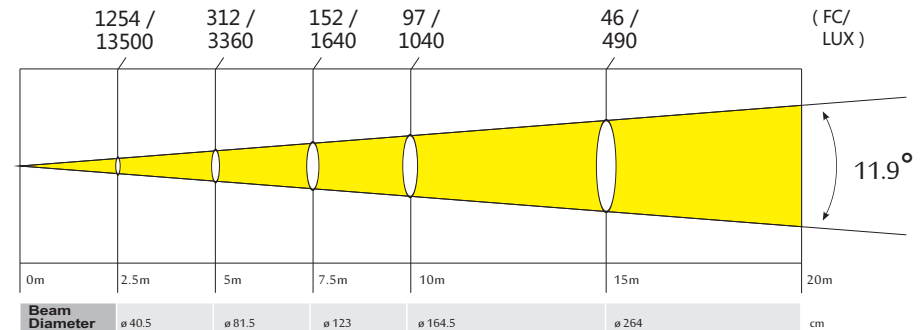

5 Anwendungshinweise

·Der TourSpot 50 Mini ist ein kompakter LED-Movinhead Spot für kleine und mittlere Venues.

Das Gerät nicht sofort einschalten, wenn es einer starken Temperaturschwankung ausgesetzt wurde. Kondenswasser kann Defekte verursachen. Das Gerät muss sich speziell beim Verladen von einer kalten in eine warme Umgebung kurz aklimatisieren.

·Das Gerät muss in einer sachgemäßen Verpackung transportiert werden, die es vor starken Erschütterungen schützt (Originalkarton oder geeignetes Flightcase).

Es muss vermieden werden, das Gerät am Kopf an zu heben.

Das Gerät nur in Umgebungen betreiben, die keine übermäßige Temperatur, Luftfeuchte oder sehr staubig sind. ·Das Gerät vor dem Betrieb auf offensichtliche Beschädigungen prüfen.

Die Erdung muss auf jeden Fall angeschlossen sein und das Gerät muss den geltenden Bestimmungen nach gesichert montiert werden.

Durch unsachgemäße Handhabung erlischt die Gewährleistung .

Never stand directly below the device when mounting, removing, or servicing the fixture.

from a ceiling, or set on a flat level surface (see illustration below). Be sure this fixture is kept at least 0.5m (1.5 ft) away from any flammable materials (decoration etc.).

Always use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

Mounting points: Overhead mounting requires extensive experience, including amongst others calculating working load limits, a fine knowledge of the installation material being used, and periodic safety inspection of all installation material and the fixture. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.


Clamp Mounting: TourSpot 50 Mini provides a unique mounting bracket assembly that integrates the bottom of the base, and the safety cable rigging point in one unit (see the illustration below). When mounting this fixture to truss be sure to secure an appropriately rated clamp to the included omega bracket using a M10 screw fitted through the center hole of the "Hanging Kit". As an added safety measure be sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the base assembly .

6 Montage

ACHTUNG: Das Gerät außerhalb der Publikumsreichweite montieren.

Es muss sicher gestellt sein, dass der vorgesehene Montagepunkt eine ausreichende Belastbarkeit aufweist.

Das Gerät muss immer mit einer zweiten unabhängigen Sicherung die den geltenden Bestimmungen entspricht abgesichert werden.

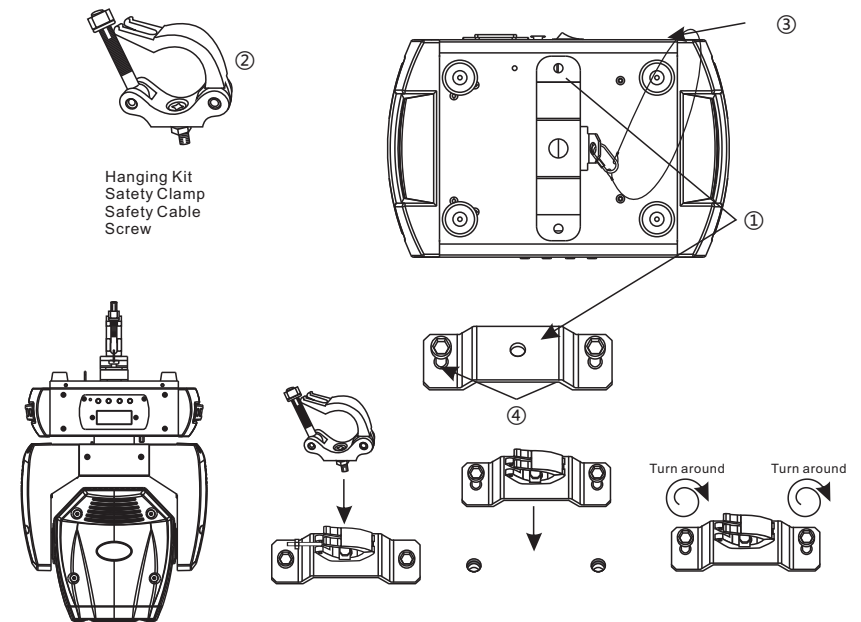

5 OPERATION INSTRUCTIONS

- The TourSpot 50 Mini is for spot effect for on-site decoration purpose.
- Don't turn on the fixture if it's been through severe temperature difference like after transportation because it might damage the light due to the environment changes. So make sure to operate the fixture until it is in normal temperature.
- This light should be keep away from strong shaking during any transportation or movement.
- Don't pull up the light by only the head, or it might cause damages to the mechanical parts.
- Don't expose the fixture in overheat, moisture or environment with too much dust when installing it. And don't lay any power cables on the floor. Or it might cause electronic shock to the people.
- Make sure the installation place is in good safety condition before installing the fixture.
- Make sure to put the safety chain and check whether the screws are screwed properly when installing the fixture.
- Make sure the lens are in good condition. It's recommended to replace the units if there are any damages or severe scratch.
- Make sure the fixture is operated by qualified personnel who knows the fixture before using.
- Keep the original packages if any second shipment is needed.
- Don't try to change the fixtures without any instruction by the manufacturer or the appointed repairing agencies.
- It is not in warranty range if there are any malfunctions from not following the user manual to operate or any illegal operation, like shock short circuit, electronic shock, lamp broke, etc.

6 INSTALLATIONS

Cautions: For added protection mount the fixtures in areas outside walking paths, seating areas, or in areas were the fixture might be reached by unauthorized personnel.

Before mounting the fixture to any surface, make sure that the installation area can hold a minimum point load of 10 times the device's weight.

Fixture installation must always be secured with a secondary safety attachment, such as an appropriate safety cable.

Es dürfen sich keine Personen unterhalb des Gerätes befinden, wenn es montiert oder gewartet wird.


Das Gerät muss wenigstens 0.5m von der nächsten entflammaren Oberfläche entfernt betrieben werden.

Das Gerät muss immer mit einem geeigneten Safety gesichert werden.

Montage: Eine hängende Montage darf nur durch sachkundige Personen durchgeführt werden. Hierbei die auf die zulässige Belastbarkeit sowie die geltenden Bestimmungen für Veranstaltungstechnik zu achten. Unter bestimmten Bedingungen ist eine Abnahme durch Sachverständige Personen oder Institutionen notwendig.

Es muss sicher gestellt sein, dass das Gerät sicher montiert ist, bevor es in Betrieb genommen wird.


Aufhängung mit Quicklock: wh Der TourSpot 50 Mini ist mit einer Quicklock Aufhängung ausgestattet, die eine schnelle und stabile Montage ermöglicht. Mittels einer M10 Schraube können verschiedene Klemmen oder Schellen an dem Bügel montiert werden. Das Sicherheitsseil wird in die separate Öse eingehängt. Bei der Montage müssen die örtlichen Vorschriften und gesetzlichen Bestimmungen beachtet werden.

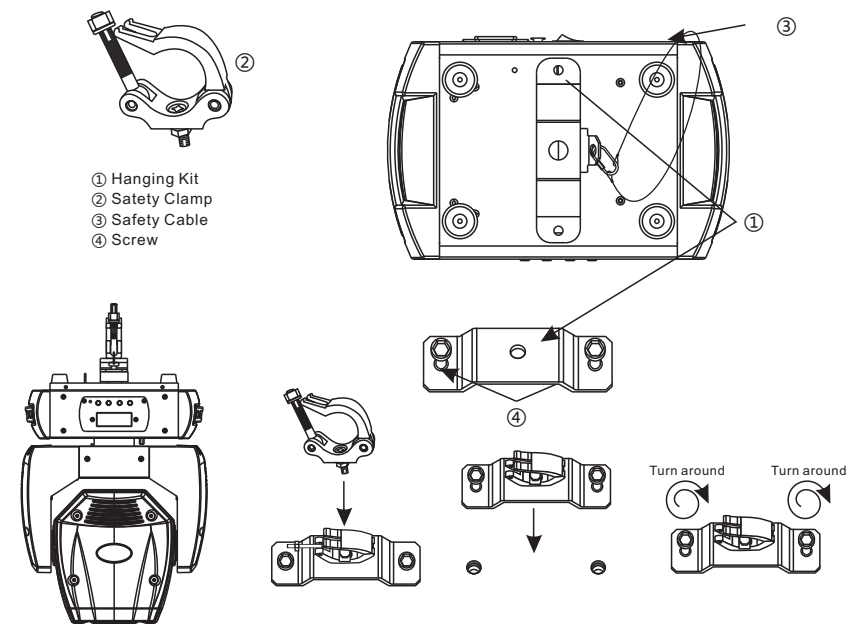

7 Steuerung über DMX 512

Verbinden Sie die Steuerung und den Movinghead mit einem DMX-Kabel. Die Verbindung am Gerät ist 3-polig ausgeführt. Es wird ein für serielle Verbindungen geeignetes Signalkabel benötigt.


Je nach Setup muss die DMX-Linie mit einem 120Ohm Widerstand terminiert werden.

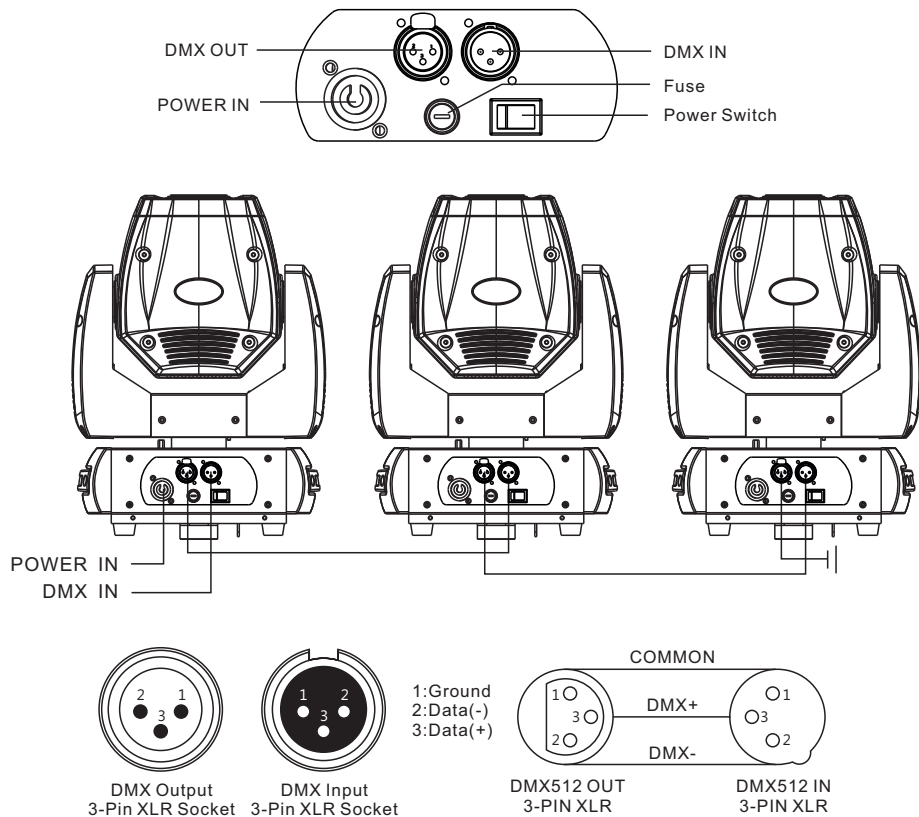

D 08


Specifications

- Input Voltage:** AC90-260V 50/60Hz
- LED Quantities:** 1*50W white LED
- Control Signal:** DMX512, master-slave and sound activated or auto operation
- Control Channel:** 11/13 DMX channels USITT DMX-512
- Power Consumption:** 55W
- Dimensions:** 149(D)*270(W)*366(H)mm
- Packing Dimensions:** 350(D)*450(W)*240(H)mm
- Net Weight:** 6.6kg
- Gross Weight:** 7.6kg

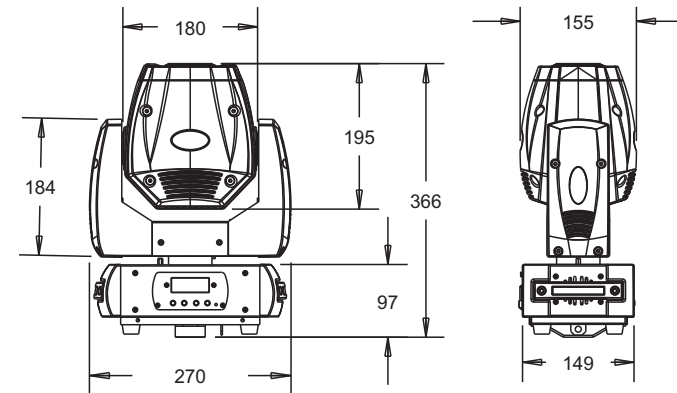

4 PHOTOMETRIC DATA

■ Photometric Beam Angle Data 11.9° Beam Angle LUX × 0.0929=FC

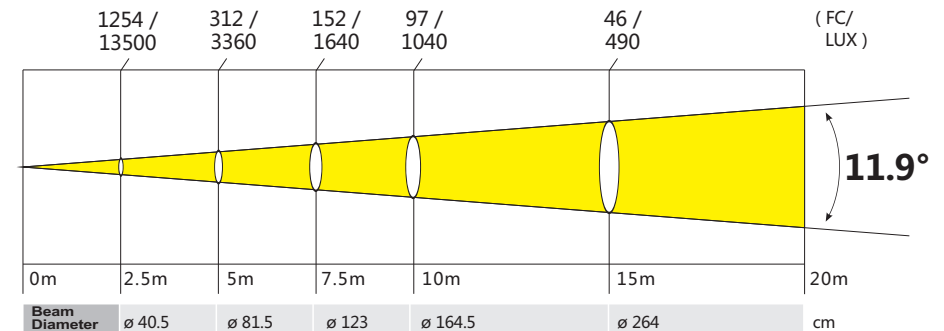


E 05

3 FEATURES & SPECIFICATIONS

Features

- A 50W white LED lamp
- 50000 hours life span and low power consumption
- 8/16 bit smooth and precise resolution for PAN/TILT movement
- 360°/540°/630° PAN and 90°/180°/270° TILT movement
- Scan position memory, auto reposition after unexpected movement
- Specific optic system with 11.9° projection angle
- Improved optics and flat beam field
- 1 rotatable gobo wheel with 6 rotatable and interchangeable gobos plus open with speed adjustable, stream effect, dithering effect and rotatable clockwise or anticlockwise
- Gobo size 21.8mm (external dimensions)/14.5mm (inner dimensions)
- 1 color wheel with 7 colors plus open
- Variable direction rainbow effect with speed adjustable
- 2 meter to infinite electric focus
- 1 3-facet prism with variable speed and direction
- 0-100% linear LED dimmer
- 25T/sec high speed LED shutter/strobe effect with variable speed
- Preset variable/random strobe and dimming pulse effect
- 11/13 DMX channels USITT DMX-512
- DMX512, master-slave, and sound activated controllable or auto operation (7 built-in programs)
- DMX recorder and edit function integrated
- Red background LED display
- Powercon connector IN
- 3-pin XLR connectors IN/OUT
- Fan cooling system
- Constant temperature readout and management function
- 45°C max ambient temperature
- IP20 protection rating
- 55dB at 3'dB rating
- 1*hanging kit


Rotating gobos

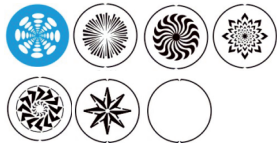

Colors




Für Anlagen mit sehr langen DMX-Kabelwegen oder hohen elektrischen Störeinflüssen, wie zum Beispiel in einer Diskothek, ist es empfehlenswert, eine DMX-Terminator zu verwenden. Der DMX-Abschlusswiderstand wird in einem XLR-Stecker als 120 Ω Widerstand zwischen Pin 2 und 3 ausgeführt der in die letzte Ausgangsbuchse der DMX-Linie gesteckt wird.

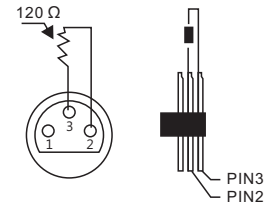

8 Menüstruktur

MODE	ADDR	VALU	A001~AXXX (AXXX)	DMX address setting
		SLAV	ON/OFF (SLAV)	Slave
AUTO	IP1~8	ALON (AU-A)	Alone setting	
		MAST (AU-M)	Master setting	
SOUN	IP1~8	ALON (SO-A)	Alone setting	
		MAST (SO-M)	Master setting	
SET	MIC	M-XX		Mic sensitivity
	LODA	ON/OFF		Data reload
	VER	V-1.0~V-9.9		Software version
	CALI	CH1	0--255	Color calibration
CH2		0--255	Gobo calibration	
CH3		0--255	Focus calibration	
DMX	MOD1			16B mode
	MOD2			8B Mode
REST	ON/OFF			Reset
SIGL	S1			Wired mode
	S2			Wireless Mode
	S3			Wireless IN and wired OUT
TEMP	TXXX			Temperature reading
DEGR	PAN	630/540/360		PAN angle options
	TILT	270/180/90		TILT angle options

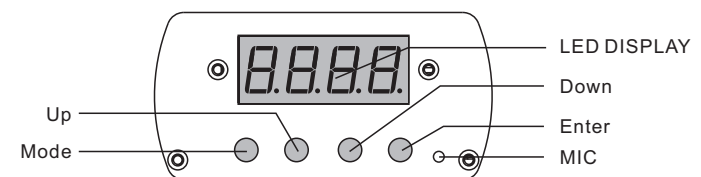

9 DMX Kanalbelegung


Mode/Channel	Function	Values	Description			
16b	8b					
1	1	Pan	0-255 PAN Movement			
2		Pan-fine	0-255 Fine control of Pan movement			
3	2	Tilt	0-255 Tilt Movement			
4		Tilt-fine	0-255 Fine control of Tilt movement			
5	3	Speed pan/tilt	0-225 max to min speed			
			226-235 blackout by movement			
			236-245 blackout by all wheel changing			
			246-255 no function			
6	4	Color wheel	0-15 Open / white			
			16-31 Color 1			
			32-47 Color 2			
			48-63 Color 3			
			64-79 Color 4			
			80-95 Color 5			
			96-111 Color 6			
			112-127 Color 7			
			128-189 Forwards rainbow effect from fast to slow			
			190-193 Color rotation stop			
			194-255 Backwards rainbow effect from slow to fast			
			7	5	Gobo wheel 1	0-9 Open
10-19 gobo 1						
20-29 gobo 2						
30-39 gobo 3						
40-49 gobo 4						
50-59 gobo 5						
60-69 gobo 6						
70-89 Gobo 1 shake slow to fast						
90-109 Gobo 2 shake slow to fast						
110-129 Gobo 3 shake slow to fast						
130-149 Gobo 4 shake slow to fast						
150-169 Gobo 5 shake slow to fast						
170-189 Gobo 6 shake slow to fast						
190-255 Rot. gobo wheel cont. rotation slow to fast						
8	6	Gobo rotation				0-3 no function
						4-127 Forwards gobo rotation from fast to slow
			128-131 Gobo rotation stop			
			132-255 Backwards gobo rotation from slow to fast			
			0-31 Shutter closed			

2 UNPACKING

Thank you for choosing our TourSpot 50 Mini. For your own safety, please read this manual before installing the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual well for future needs.

The TourSpot 50 Mini is made of a new type of high temperature strength of engineering plastics and cast aluminum casing with nice outlook. The fixture is designed and manufactured strictly following CE standards, complying with international standard DMX512 protocol. It's available independently controlled and linkable with each other for operation. And it is applicable for large-scale live performances, theater, studio, nightclubs and discos.

The TourSpot 50 Mini adopts a 50W white LED lamp which features high brightness and stability. Please carefully unpack it when you receive the fixture and check whether it is damaged during the transportation. And please check whether the following items are included inside the box:

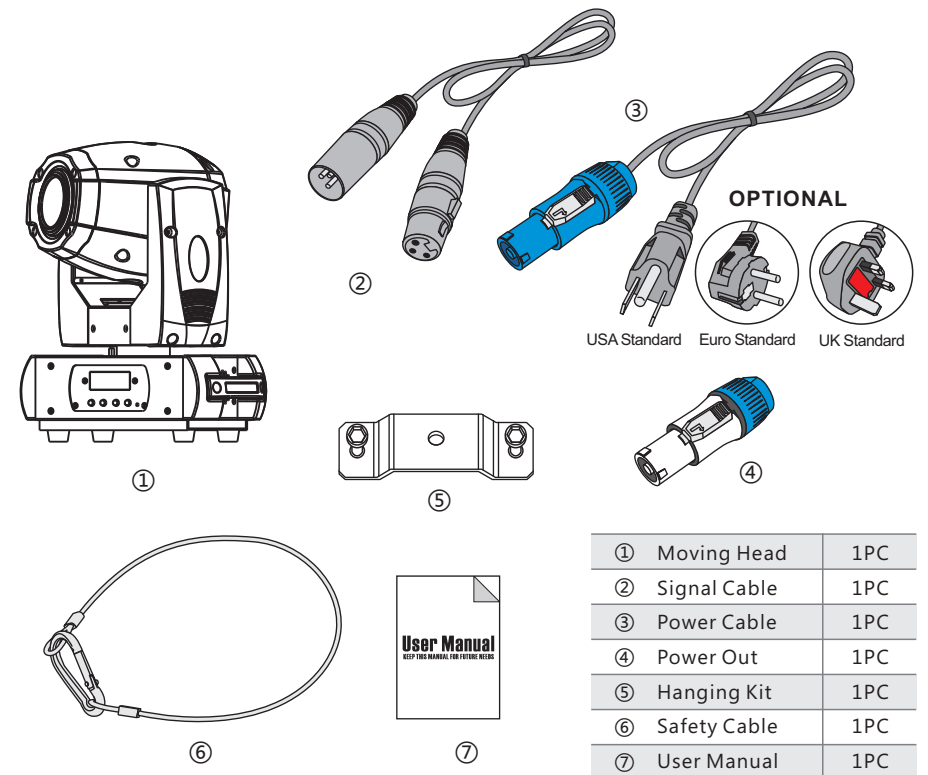

①	Moving Head	1PC
②	Signal Cable	1PC
③	Power Cable	1PC
④	Power Out	1PC
⑤	Hanging Kit	1PC
⑥	Safety Cable	1PC
⑦	User Manual	1PC

1 SAFETY INSTRUCTIONS



CAUTION

Becareful with your operations. With a dangerous voltage you can suffer a dangerous electric shock when touching wires!

This device has left the factory in perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.



IMPORTANT

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to temperature changes due to environmental changes, do not switch it on immediately. The arising condensation could damage the device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. Therefore it is essential that the device be earthed.

The electric connection must carry out by qualified person.

The device shall only be used with rate voltage and frequency.

Make sure that the available voltage is not higher than stated at the end of this manual.

Make sure the power cord is never crimped or damaged by sharp edges. If this would be the case, replacement of the cable must be done by an authorized dealer.

Always disconnect from the mains, when the device is not in use or before cleaning it. Only handle the power cord by the plug. Never pull out the plug by tugging the power cord.

During initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective, it should decrease gradually.

Please don't project the beam onto combustible substances.

Fixtures cannot be installed on combustible substances, keep more than 50cm distance with wall for smooth air flow, so there should be no shelter for fans and ventilation for heat radiation.

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

9	7	Shutter	32-63	Shutter open
			64-95	Strobe effect slow to fast
			96-127	shutter open
			128-159	Pulse-effect in sequences slow to fast
			160-191	shutter open
			192-223	Random strobe effect slow to fast
			224-255	shutter open
10	8	Dimmer	0-255	Dimmer 0%...100%
11	9	Focus	0-255	In(near) to out(far)
12	10	Prism & Rrotating	0-5	OFF
			6-127	ON
			128-255	Rrotating from slow to fast
13	11	Special function	0-19	No function
			20-29	No function
			30-39	No function
			40-79	No function
			80-84	All Motor reset
			85-87	Scan motor reset
			88-90	Colors motor reset
			91-93	Gobo motor reset
			94-96	Shutter&Dimmer motor reset
			97-99	Other motor reset
			100-119	Internal program 1
			120-139	Internal program 2
			140-159	Internal program 3
			160-179	Internal program 4
			180-199	Internal program 5
200-219	Internal program 6			
220-239	Internal program 7			
			240-255	Internal Sound program 1

10 **Wartung und Pflege**

Auf die folgenden Punkte müssen dringend beachtet werden:

- 1) Alle Schrauben zur Montage des Gerätes müssen gut angezogen sein und dürfen keine sichtbaren Beschädigungen aufweisen.
- 2) Es dürfen keine sichtbaren Beschädigungen an dem Gerät oder den vorgesehenen Montagepunkten vorhanden sein.
- 3) Mechanisch bewegbare Baugruppen dürfen keine auffälligen Geräusche von sich geben und sollten sauber ohne und ohne zu blockieren laufen .
- 4) Das Anschlusskabel darf keine sichtbare Beschädigung aufweisen.

Die Installation und Inbetriebnahme der Geräte darf nur durch sachkundiges Personal erfolgen.



ACHTUNG!

Immer die Spannungsversorgung trennen bevor an dem Gerät gearbeitet wird!



Um die Lebenserwartung und die Zuverlässigkeit des Produktes zu erhöhen, wird eine regelmäßige Reinigung des Gerätes empfohlen.


- 1) Die Linse sollte regelmäßig gereinigt werden um eine abnehmende Lichtausbeute zu verhindern.
- 2) Die Lüfter müssen regelmäßig gereinigt werden um ein Überhitzen zu vermeiden.
- 3) Eine ausführliche Elektrische Prüfung nach den örtlichen Vorgaben durch qualifiziertes Fachpersonal muss regelmäßig durchgeführt werden.

Eine regelmäßige Reinigung des Gerätes wird dringend empfohlen. Auf keinen Fall Lösemittel wie Alkohol oder Verdünnung auf den Oberflächen verwenden. Es befinden sich keine für den Anwender zu wartenden Bauteile im Gerät.

EXPOLITE

TourSpot 50 Mini

User Manual

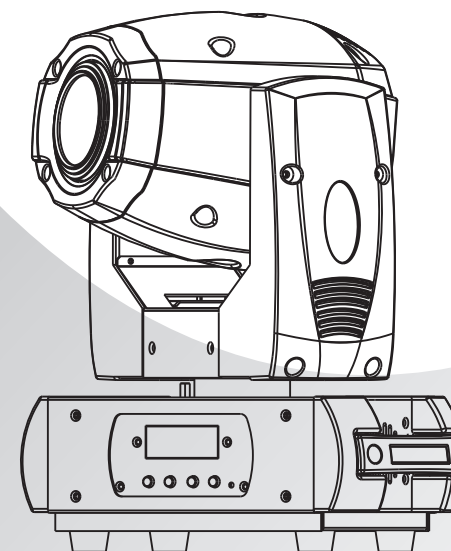

IP20: led21300