

Guitar System Controller GSC-3, GSC-2



- User Manual
- Instrukcja obsługi
- Bedienungsanleitung

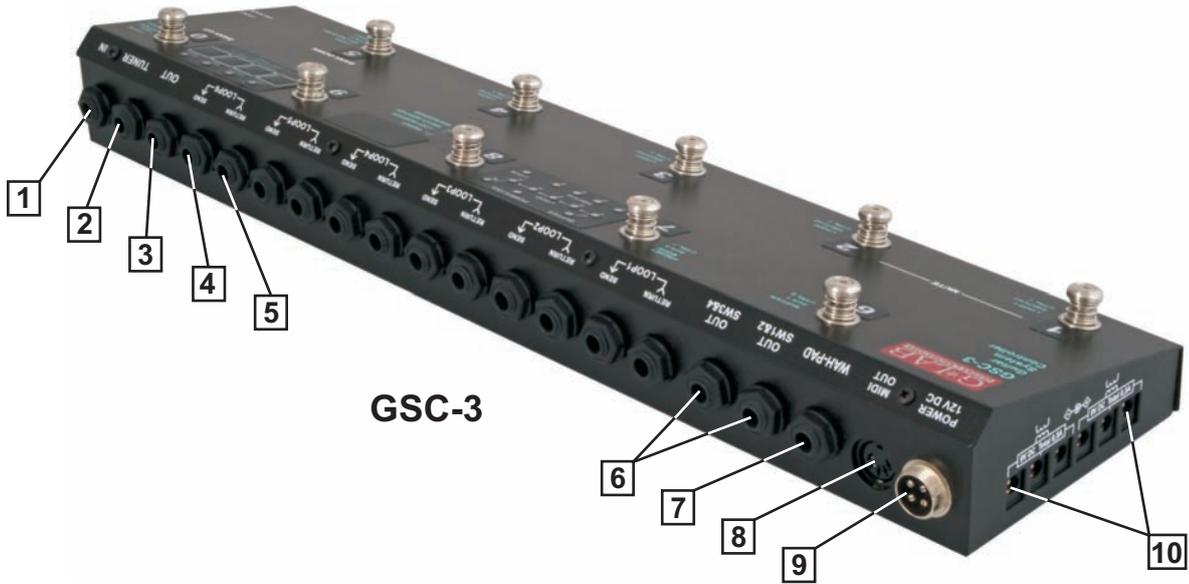


Table of contents

IMPORTANT SAFETY INSTRUCTIONS	2
EMC/EMI & CERTIFICATE OF CONFORMITY	2
PACKAGE CONTENT	3
STRUCTURE	4
SIGNAL'S PATH DIAGRAM	5
BANKS, PRESETS AND MODIFIERS	6
PRESET SELECTION	6
BANK SELECTION	6
SILENT TUNING (MUTE)	7
PRESET PROGRAMMING	7
LOOPS (LOOP1 TO LOOP6) PROGRAMMING	7
AMP SETTINGS PROGRAMMING	7
MIDI PROGRAM NUMBERS PROGRAMMING	8
PRESET'S COPYING	8
BANK COPYING	8
CC CONTROLLERS' VALUE PROGRAMMING	8
SENDING ADDITIONAL PROGRAM CHANGE COMMANDS	9
MODIFIERS PROGRAMMING	9
TAP TEMPO	10
SETTINGS	10
LOOP BUTTON SETTINGS	10
SWITCH BUTTON SETTINGS	11
MIDI CHANNELS SETTING	12
AMP'S CONTROL CONNECTING	12
G LAB WP WAH-PAD CONNECTING	12
G LAB TBWP TRUE BYPASS WAH-PAD CONNECTING	13
CONNECTING AUX BANK UP/DOWN WITH MIDI IN FOOTSWITCH	13
USB CONNECTING WITH PC	13
AUX CONNECTOR	13
MIDI 2 X LOOP CONNECTING	13
TECHNICAL PARAMETERS	14
MIDI IMPLEMENTATION CHART	15

Important safety instructions

- Read these instructions and follow them.
- Prevent this device against moisture or spilling liquid inside.
- Clean only with dry cloth.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus producing a lot of heat
- Protect the power supply cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this device during lightning storms or when unused for long periods of time.
- Do not open device or its power supply casing.
- The power supply adapter should be installed in the socket outlet and disconnection of the adapter should be easily accessible.
- To completely disconnect from AC mains disconnect the power supply adapter from the AC receptacle.

EMC/EMI & Certificate of conformity

EMC/EMI

This device has been designed and manufactured to conform with directives and standards in the field of safety operations and electromagnetic interference.

This device uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However in spite of performing below standards there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception which can be determined by turning the device on and off, the user is encouraged to try to correct the interference by one or more of the following operations:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Contact with the manufacturer (see: Before calling a service).
- Consult the dealer for help.

Certificate of Conformity

ELZAB S.A., ul. Kruczkowskiego 39, 41-813 Zabrze, Poland,
hereby declares on own responsibility that the following product:

GSC-3, GSC-2 – Guitar System Controller

that is covered by this certificate and marked with CE 07 label conforms with following standards:

PN-EN 60065:2004	Safety requirements for mains operated electronic and related apparatus for household and similar general use
PN-EN 55103-1:1998	Product family standard for audio, video, audio-visual and entertainment lighting control apparatus for professional use. Part 1: Emission.
PN-EN 55103-2:1998	Product family standard for audio, video, audio-visual and entertainment lighting control apparatus for professional use. Part 2: Immunity.

With reference to regulations in following directives:

73/23/EEC, 2004/108/EEC

Issued in Zabrze, March 2009

Jerzy Biernat

President of the ELZAB S.A. Board of Directors

Dear Customer,
Congratulations for choosing our G LAB product!

Guitar System Controller (GSC) is the programmable switching device of effects' loops (looper), the amp's switcher by footswitch input and the MIDI devices' controller in one. By pressing just a single footswitch (called preset) it enables:

- to activate selected effects (connected to LOOP1 up to LOOP6 loops),
- to set the amp channel (or the pre-amp one) and other amp's functions controlled by its footswitch input,
- to set by Program Change command the MIDI device's program No. of work (at three MIDI devices e.g. effects' processors).

The presets are stored in 10 banks. Depending on the method of changing the banks there are available eight or ten presets in each bank. Controller possesses presets programming function and presets and banks copying functions what enables quick "organising" of the presets in the banks. The GSC enables also to assign to its footswitches following functions instead of presets:

- to switch on/off the loop (loop modifier),
- to set the amp settings function (e.g. selecting a channel),
- to select the program No. (or numbers) of MIDI device (devices).

To avoid the incidental changing of the presets' settings the controller is equipped with the memory access lock. There are available two versions of the controller with different footswitches. The GSC-3 model possesses metal footswitches with backlighted descriptions and the GSC-2 model possesses silent, backlighted footswitches.

Basic characteristics:

- true passive signal path (except buffer),
- true bypassed (by relay), high impedance input buffer,
- TUNER output with the silent tuning function based on very high impedance circuit (no influence on a guitar signal),
- six TRUE BYPASS loops for connecting effects (using electro-mechanical relays),
- six 9V DC outputs (for supplying effects) in two separated sections (500mA each),
- 2 outputs (2 lines each, latching type) for controlling the amp through its footswitch input,
- MIDI output for controlling MIDI devices by Program Change and Control Change commands,
- AUX connector for connecting extension modules,
- USB connector for connecting to a PC, enabling downloading, editing and saving presets and settings, also firmware upgrades,
- two modes of bank selection (by BANK UP / BANK DOWN footswitches or by pressing and holding presets' footswitches) and an option "one bank mode",
- input for connecting a wah-wah effect pad (wah-pad) to control the system by placing the foot on the wah-wah,
- external power supply with 4 meters long and flexible cable


Package content

Controller
Power supply adapter
Three 9V 40 cm cables
Two 9V 80 cm cables
One 9V 120 cm cables
User's Manual

Structure

On the inner side of the instruction cover are placed the pictures with elements numerated below.

- 1 - IN – guitar signal input
- 2 - TUNER – guitar tuner connector
- 3 - OUT – amp's signal output connector
- 4 - SEND – effect's loop output connector
- 5 - RETURN – effect's loop input connector
- 6 - OUT SW1&2 and SW3&4 – output connectors for amp's switching by its footswitch input
- 7 - WAH-PAD – wah-pad connector
- 8 - MIDI OUT – MID output connector
- 9 - POWER 12V DC – 12V DC power supply connector
- 10 - OUT 9V DC – Effects' power supply connectors
- 11 - Presets selecting footswitches
- 12 - Indicators
- 13 - Display
- 14 - Programming buttons
- 15 - AUX connector
- 16 - Memory access lock switch
- 17 - USB connector

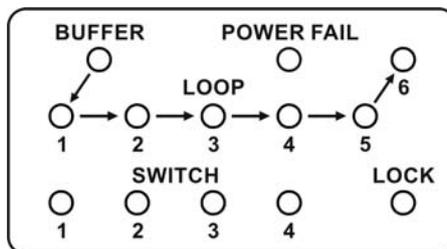


BUFFER – Buffer indicator

LOOP 1 to 6 – Indicators signalling switching on LOOPS

POWER FAIL – Voltage failure indicator (voltage below 11.2V or above 12,8V)

SWITCH 1 to 4 – SW1 to SW4 switch outputs' status indicators

LOCK – Memory access LOCK indicator

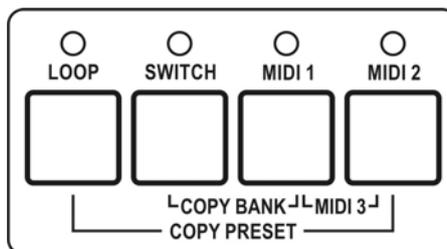


LOOP – loops programming button and indicator

SWITCH – amp's controlling outputs button and indicator

MIDI 1 – button and indicator for editing MIDI program of MIDI 1 device

MIDI 2 – button and indicator for editing MIDI program of MIDI 2 device

Signal's path diagram

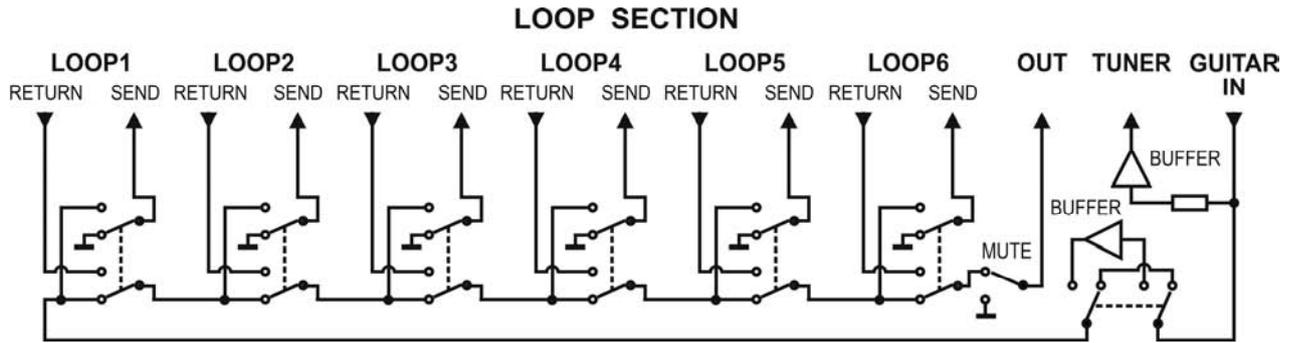


Guitar signal, thru very high impedance ($>10\text{ M}\Omega$) tuner buffer, is transmitted to TUNER output. It enables using of the tuner during playing.

Controller features a switchable, true bypass input buffer circuit. Buffer which's input impedance is consistent with tube amps boost the guitar signal power (without the voltage increase).

Adding the buffer between the guitar and the effect can improve guitar sound (due to low input impedance many of the effects change the guitar tone) and in case of using long cables (between the controller and the amp) it enables to avoid high tones loss caused by cables' parasitic capacitance appearing when all the effects are switched off.


SEND outputs should be connected with IN effects inputs and RETURN inputs should be connected with OUT outputs of particular effects. MUTE block silents the signal during the quiet tuning.

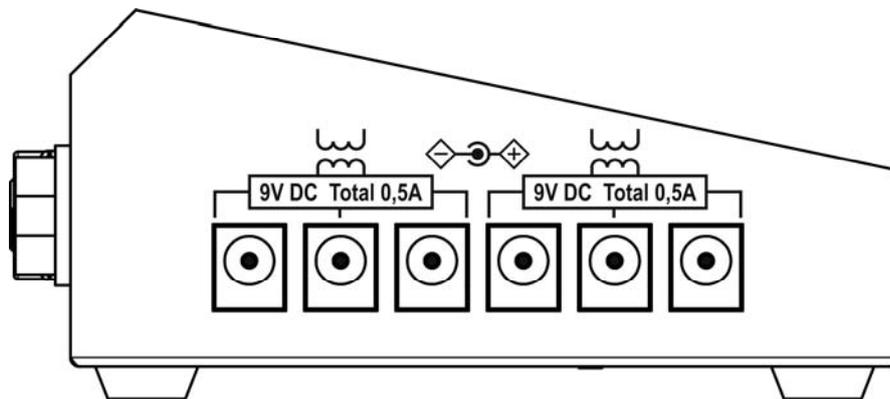

Controller has six 9V DC outputs for supplying the effects in two fully separated sections (500mA each). Before plugging the power supply the pin polarization coincidence should be checked.


Banks, presets and modifiers

Controller enables to program 10 presets (or 8 ones) in each of its 10 banks. There is information on the display about the bank and preset numbers. Banks and presets have got numbers from 0 to 9 range.

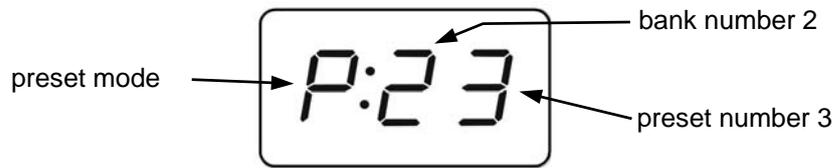

The **P** character in front of double dot says that the given footswitch in the given bank is a preset. The **L** character says that the given footswitch is a loop modifier (similarly **S** character for a SWITCH modifier and **n** character for a MIDI modifier). The loop modifier switches on and off the selected effects' loop. The SWITCH modifier sets the amp's channel. The MIDI modifier sends the Program Change and/or Control Change MIDI commands to selected MIDI devices. Such solution enables to program banks only with presets to switch all the system just by pressing a single footswitch and to program the banks where particular footswitches perform the selected functions e.g. to switch on the single effect, to set the amps channel. Also it is possible to program some banks where a part of footswitches are presets and the other are modifiers.

Below you will find the example of using presets and modifiers.

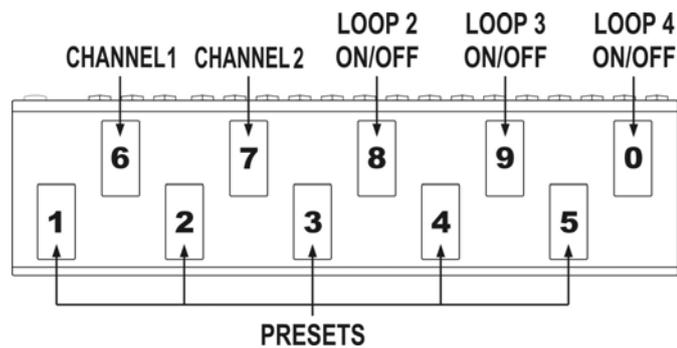

Preset selection

Press shortly (less than 1 second) the preset footswitch numbered from 1 to 5 (in the cb1 mode banks change from 0 to 9; in the cb2 mode banks change from 1 to 4 or from 6 to 9).

Bank selection

At the **cb1** mode (pressing and holding preset footswitch).

Press and hold (more than 1 second) the desired preset footswitch numbered from 0 to 9.

During switching there will be activated for 1 second the preset adequate to the previously selected bank.


Choosing this method enables to use 10 presets in each bank. It is recommended to organise presets in banks in such a way that all necessary presets used in a particular song will be located into just one bank.

At the **cb2** mode (using BANK UP / BANK DOWN buttons).

Select the bank number using BANK UP (footswitch 0) or BANK DOWN (footswitch 5) and then press the preset footswitch (from range 1 to 4 or 6 to 9).

Till the moment the preset footswitch is pressed the previous preset is active. It enables switching presets from the different banks while a song is played.

Choosing this method enables to use 8 presets in each bank.

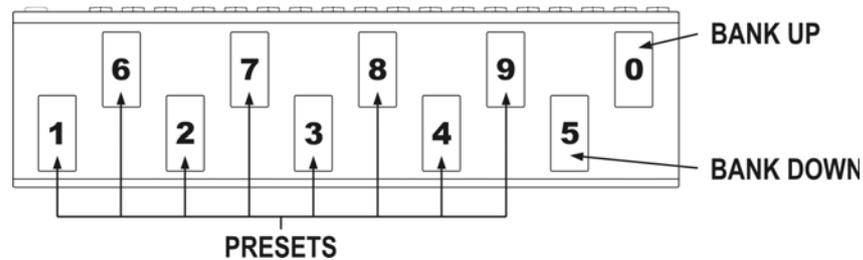

To escape from the bank selecting function press and hold 0 or 5 footswitch longer than 1 second. At the **cb3** mode (directly by using BANK UP/BANK DOWN footswitches for firmware 2.20 and higher). At this mode BANK UP and BANK DOWN footswitches cause correspondingly lowering and increasing bank number with immediate preset recalling (preset number in bank remains unchanged).

Silent tuning (MUTE)

Press simultaneously the footswitch No. 1 and 2 (blinking **tun** text will appear on the display). To exit from MUTE press the preset footswitch intended to be used.

Preset programming

A preset is defined by:

- switched on effects (connected to LOOP1 to LOOP6) and buffer switched on or off;
- amp's setting (amp channel and/or effect selecting) controlled by SW1 to SW4 outputs;
- MIDI Program Change numbers (and Control Change commands) transmitted to MIDI devices.

Loops (LOOP1 to LOOP6) programming

- a) Select bank and preset.
- b) Memory access lock switch to UNLOCK position (LOCK indicator not lit).
- c) Press LOOP button (LOOP indicator and preset number start to blink).
- d) Check if **P** character is displayed before the double dot. If not set it by footswitch No. 7 (PRESET MODE)
- e) By presets footswitches 1 to 5 and 0 set loops (effects) which should be active (indicators LOOP 1 to 6 lit mean effects are activated). Switch on/off the buffer by footswitch No. 6 (BUFFER indicator lit means the buffer is active).
- f) Press LOOP button to save. Displaying text **Stored** confirm saving.

In case of necessity of escape without saving while the point d) or e) it should be pressed SWITCH or MIDI 1 or MIDI 2 button.

REMARK:

In case of not plugging in a connector to a particular effect's loop RETURN the signal will skip such a loop despite of activating this loop. It allows to use presets despite of not connecting effects to such a loop.

Amp settings programming

- a) Select bank and preset.
- b) Memory access lock switch to UNLOCK position (LOCK indicator not lit).
- c) Press SWITCH button (SWITCH indicator and preset number start to blink).
- d) By footswitches 1 to 4 set SWITCH outputs (SW1 to SW4 indicators signalise amp settings).
- e) Press SWITCH button to save. Displaying text **Stored** confirm saving.

In case of necessity of escape without saving while the point d) it should be pressed LOOP or MIDI 1 or MIDI 2 button.

MIDI program numbers programming

The controller enables to control three MIDI devices (MIDI 1, MIDI 2 and MIDI 3) by the Program Change command. Before programming, the MIDI channels should be set (see: MIDI channel setting).

- a) Connect MIDI cable between MIDI OUT output connector and MIDI IN input connector of the controlled device.
- b) Select bank and preset.
- c) Memory access lock switch to UNLOCK position (LOCK indicator not lit).
- d) Press MIDI 1 button (MIDI 1 indicator will start to blink). Actual program No. or text **unused** (what means that command is not send) will appear on display.
- e) Enter program No. using footswitches (e.g. for program No. 24 press footswitch No. 2 and then footswitch No. 4). If you don't want to send Program Change command in this preset press footswitch No. 0 and hold for minimum 1 second (text **unu** will appear on display). Available program numbers are from 1 to 128 (transmitted values from 0 to 127). The text **Err** means the number is out of the range.
- f) Press MIDI 1 button to save. Displaying text **Stored** confirms saving.

In case of necessity of escape without saving while the point e) it should be pressed LOOP or SWITCH button.

For MIDI 2 device do it in similar way and for MIDI 3 device the MIDI 1 and MIDI 2 buttons should be pressed simultaneously. The MIDI 3 program number can be programmed in this way only when the setting at LOOP button (No. 6 footswitch) is set to **n3p** (MIDI 3, only Program Change command).

Preset's copying

- a) Select preset to copy.
- b) Memory access lock switch to UNLOCK position (LOCK indicator not lit).
- c) Press at simultaneously LOOP and MIDI 2 buttons (LOOP and MIDI 2 indicators start to blink and SWITCH and MIDI 1 indicators start to lit).
- d) Switch bank (if necessary) and choose preset No. where to past copied preset.
- e) Press simultaneously LOOP and MIDI 2 buttons to save preset. Text **Stored** confirms saving.

In case of necessity of escaping without saving while in the point d) should be pressed SWITCH or MIDI 1 button.

Bank copying

- a) Select any preset of the bank to copy.
- b) Memory access lock switch to UNLOCK position (LOCK indicator not lit).
- c) Press simultaneously SWITCH and MIDI 1 buttons (SWITCH and MIDI 1 indicators start to blink and LOOP and MIDI 2 indicators start to lit).
- d) Choose a bank where to past copied bank.
- e) Press simultaneously SWITCH and MIDI 1 buttons to save bank. Text **Stored** confirms saving.

In case of necessity of escaping without saving while in the point d) should be pressed LOOP or MIDI 2 button.

CC controllers' value programming

The GSC enables to control MIDI 3 device by Control Change commands. Before value programming at LOOP button settings (footswitch No. 6) set transmitting Control Change commands (**m3c**), and set controllers' numbers (see: Controllers' numbers setting for Control Change commands).

- a) Select bank and preset.
- b) Memory access lock switch to UNLOCK position (LOCK indicator not lit).
- c) Press simultaneously MIDI 1 and MIDI 2 buttons (MIDI 1 and MIDI 2 indicators start to blink). The text **ctl** will appear on display.

- d) Short pressing footswitches numbered from 1 to 7 will effect in short displaying text **CC** and the controllers No. e.g. **81** and after actual value of the controller will be displayed. Pressing No. 0 footswitch displays the actual program No. transmitted to the MIDI 3 device by Program Change command.
- e) Press and hold for longer than 1 second the controller footswitch intended to be changed (blinking "0" will appear on display).
- g) Enter the value of controller using footswitches. The controller value can be from 0 to 127 range, **unused** or **toggle**. Press and hold for longer than 1 second footswitch No. 0 to set the controller **unused** (not to be transmitted). To set the **toggle** function press and hold for longer than 1 second the footswitch No. 5. **Toggle** function means that successive pressing the footswitch **toggles** transmitted values 0 and 127 and effects in switching on/off a chosen parameter or a function of MIDI 3 device. In case when we programmed the footswitch as a MIDI modifier and the only transmitted command is **toggle** value controller we get the footswitch e.g. switching on and off a single effect at multieffect device. In this way we get the functionality of such a footswitch identical with loop modifier (for a single effect as stompbox connected to a loop). When at other preset or modifier the given controller is transmitted then **toggle** function will consider the previously transmitted value.
- g) Press MIDI 1 (or MIDI 2) button to accept the value. If you want to edit the value of other controller operate according to point d) and e).
- h) Press simultaneously MIDI 1 and MIDI 2 buttons to save entered vales. Text **Stored** confirms saving.

In case of necessity of escaping without saving while in the point d) should be pressed LOOP or SWITCH button.

Sending additional Program Change commands (for firmware 2.20 and higher)

Controller enables sending out four additional Program Change commands (named PC4 to PC7) instead of Control Change 4 to 7 commands. To use this option it is needed:

- to set at LOOP button settings (footswitch No. 6) transmitting three Control Change and five Program Change (m3A) commands,
- to set at SWITCH button settings the channel numbers for MIDI 4 to MIDI 7 instead of the controller numbers CTRL 4 to CTRL 7,
- to enter the program numbers to send in place of the controller values CTRL4 do CTRL7. On display, in place of the "CC" and controller's number, will appear the "PC" with the number of MIDI device to which will be sent the program number.

Modifiers programming

Modifiers enable to program the controller in such a way that the given footswitch in the chosen bank instead of preset function would serve one of the following functions:

- switching on and off an effect connected to an effect loop (LOOP MODIFIER),
- setting the amp at a chosen channel (SWITCH MODIFIER),
- sends the Program Change and/or Control Change MIDI commands to selected MIDI devices (MIDI MODIFIER).

To achieve it after selecting a bank and a footswitch which should be a modifier you have to enter **Loops (LOOP1 to LOOP6) programming** function and using footswitch No. 7 you have to select the modifier type: **L** – LOOP modifier, **S** – SWITCH modifier and **n** – MIDI modifier.

For a LOOP modifier you should select the loop which should be switched on and off (**toggled**) by successive pressing this footswitch. It means that if a given LOOP is switched off pressing this footswitch will effect in switching LOOP on. When LOOP is switched on – pressing this footswitch will switch LOOP off. It is recommended to program LOOP modifiers only for single loops.

For a SWITCH modifier you should enter **Amp settings programming** function and set states of lines SW1 to SW4 to achieve the desired amp settings. SWITCH modifier recalls desired amp settings so to switch e.g. between two channels it is needed to program two footswitches as SWITCH modifiers.

For a MIDI modifier you should apply the same procedure considering that you can program footswitch to control one of MIDI devices (or more) and by Control Change commands one of the function of selected MIDI device. This is possible by using **unused** function (not transmitting a given command) and **toggle** function (for Control Change commands).

Tap tempo

The GSC enables to send tempo to a MIDI 1 device. To achieve it the tap tempo function (in settings at footswitch No. 5) should be set to **tt1**. After selecting a preset by a footswitch next pressing of this footswitch effects in transmitting the CC command (Control Change) with the parameter 80 and its value **toggled** between 0 and 127. If this footswitch is a LOOP modifier then this command is not transmitted. The rest of modifiers transmit commands. It is recommended to tap tempo by pressing such a footswitch two or three times. It is possible to program a footswitch to solely be used for tapping tempo. In such a case this footswitch should be programmed as a MIDI modifier without transmitting program numbers (**unused**). You should remember that in such a case to tap tempo you need to press this footswitch three times. If you need to send to one device Control Change commands and tap tempo set the same transmission channel for the MIDI 1 and MIDI 3 devices.

Settings

Settings parameters have been divided between LOOP and SWITCH buttons. The setting parameters of MIDI channels transmission are assigned to the MIDI buttons. Factory settings in the tables below **are bolded**.

LOOP button settings

- a) Memory access lock switch to LOCK position (pressed, LOCK indicator lit).
- b) Press and hold LOOP button then memory access lock switch to UNLOCK position (LOCK indicator stops lit). The LOOP indicator starts to blink and SWITCH, MIDI 1 and MIDI 2 indicators start to light. Text **SP1** will appear on display.
- c) First pressing footswitches will effect in displaying status of particular settings, the next pressing effect in changing the status of particular settings.

1	cb0	change bank mode 0 – constantly selected bank No. 0
	cb1	change bank mode 1 –changing the bank by pressing and holding (over 1 second) footswitches;
	cb2	change bank mode 2 – changing the bank by using BANK UP footswitch to increase or BANK DOWN footswitch to decrease a bank number
	cb3	change bank mode 3 – changing the bank by using BANK UP footswitch to increase or BANK DOWN footswitch to decrease a bank number with immediate recalling of the preset (for firmware 2.20 and higher).
2	uP0	wah-pad 0 – wah-pad not active
	uP1	wah-pad 1 – WP type wah-pad connected
	uP2	wah-pad 2 – TBWP type wah-pad connected
3	uL1	wah loop 1 – wah-pad connected to the LOOP1 loop
	⋮	
	uL6	wah loop 6 – wah-pad connected to the LOOP6 loop. This setting is only important for adding to preset a wah-wah effect mode (Add).

4	ot0	one time mode 0 – mode of transmitting Program Change commands always when a preset footswitch is pressed
	ot1	one time mode 1 - mode of transmitting Program Change commands only when a given preset footswitch is pressed for the first time
5	tt0	tap tempo 0 – tap tempo function not active
	tt1	tap tempo 1 – tap tempo function active (Control Change 50h 00h/7Fh)
6	m3p	midi 3 program change – only Program Change command can be transmitted to a MIDI 3 device
	m3c	midi 3 control change and program change – to MIDI 3 device can be sent seven Control Change and one Program Change commands.
	m3A	midi 3 control change and program change – to MIDI 3 device can be sent three Control Change and one Program Change commands and there is a possibility to send four Program Change commands to devices MIDI 4 to MIDI 7 (PC4 to PC7)
7	tu1	tuner 1 – a guitar tuner connected to TUNER output
	tu2	tuner 2 – used tuner built in MIDI processor, (recalling program No. 100 with muted signal)
8	AF1	AUX function 1 – AUX output function No. 1 – controlling AUX 2 x LOOP, AUX A/B SWITCH, AUX SWITCH 5&6 OUT modules
	AF2	AUX function 2 – AUX output function No. 2 – working with AUX BANK UP/DOWN with MIDI IN footswitch (for firmware 2.20 and higher)

d) Pressing the LOOP button will effect in saving settings (text **Stored** confirms saving).

In case of necessity of escaping without saving while in the point c) should be pressed SWITCH, MIDI 1 or MIDI 2 button.

SWITCH button settings

Controller enables to transmit 7 controllers' numbers. In settings are programmed controllers' numbers and for a particular preset (or a MIDI modifier) are programmed values of controllers which should be transmitted.

- Memory access lock switch to LOCK position (pressed, LOCK indicator lit).
- Press and hold SWITCH button and while it is pressed switch memory access lock to UNLOCK position (LOCK indicator stops to light). SWITCH indicator will start to blink and LOOP, MIDI 1 and MIDI 2 indicators will start to light. Text **SP2** will appear on display
- Short pressing footswitches numbered from 1 to 7 will effect in displaying actual controller number assigned to a particular footswitch.
- Press and hold for longer than 1 second the controller footswitch intended to be changed (blinking "0" will appear on display). A controller number can be from 0 to 127 range. Press intended numbered footswitches.
- Pressing SWITCH button confirms entered number. To edit numbers of other controllers you should operate according to the points d) and e).
- Press SWITCH button to save settings (text **Stored** confirms saving).

In case of necessity of escaping without saving while in the point c) or e) should be pressed LOOP, MIDI 1 or MIDI 2 button.

MIDI channels setting

Controller enables to control (by a Program Change command) three MIDI devices marked as MIDI 1, MIDI 2 and MIDI 3. To set the connection between desired device at the GSC and connected device should be set the same MIDI channel.

MIDI 1 device channels setting:

- Memory access lock switch to LOCK position (pressed, LOCK indicator lit).
- Press and hold MIDI 1 button and while it is pressed switch memory access lock to UNLOCK position (LOCK indicator stops to light, MIDI 1 indicator starts to blink). The actually used channel No. will appear on display.
- Enter the desired channel No. by footswitches.
- Press the MIDI 1 button to save settings (text **Stored** confirms saving).


In case of necessity of escaping without saving while in the point c) should be pressed LOOP or SWITCH button.

For MIDI 2 device do it in similar way and for MIDI 3 device the MIDI 1 and MIDI 2 buttons should be pressed simultaneously.

Amp's control connecting

The SW1 to SW4 outputs are used to control an amp by its footswitch input. Depending on features of your amp they can be used for switching channels, switching on/off reverb or effects loop, BOOST function or other.

SW1&2 and SW3&4 outputs' circuit diagram is shown below.

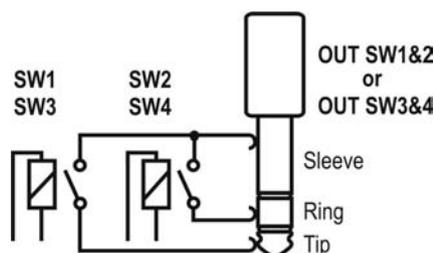

SW1 to SW4 lit indicators mean short-cutting of the adequate relay's contacts (latching type). This circuit is separated from the rest of the controller's circuits. It is recommended to use connectors with plastic shielding to avoid incidental connection with a signal grounding. Lot of amps are equipped with such type of a foot-switch input so if your amp is equipped with footswitch input connector you should contact your dealer or the manufacturer of your amp to settle if such type of connection is possible to apply. Depending on an amp model this connection have to be done using mono or stereo Jack/Jack cable, Y type cable (stereo Jack – 2 x mono Jack) or using a cable or an adapter offered by G LAB. The actual list of available cables and adapters you'll find at www.glab.com.pl

G LAB WP Wah-Pad connecting


The wah-pad enables switching on a wah-wah effect by placing a foot on it and switching off a wah-wah effect by removing a foot. The wah-pad should be placed beneath a wah-wah effect and the wah-pad's connector should be plugged into WAH-PAD connector. A wah-wah effect's input and output should be connected to LOOP1 up to LOOP6 connectors. Wah-pad settings are described at "LOOP button settings". At LOOP button settings footswitch No. 2 set **uP1** and set the loop No. to which your wah-wah effect is connected for footswitch No. 3.

Depending on WAH PAD MODE parameter the wah-pad enables to activate in any preset of given bank the loop your wah-wah effect is connected ("adding a wah-wah" mode) or to switch to preset No. 9 in given bank ("changing preset" mode). To program the WAH PAD MODE parameter press SWITCH button ("Amp settings programming" function) and use footswitch No. 5. **Add** means "adding a wah-wah" mode, **Pr9** means "changing preset" mode. In case of using "changing preset" mode you need to set at a loop to which a wah-wah effect is connected in a No. 9 preset of a given bank. Such solution enables to simultaneously control

other effects and amp by placing a foot on the wah-pad. It is recommended to use “changing preset” mode only for presets, or presets and modifiers with exclusion of modifiers transmitting Control Change type commands.

G LAB TBWP True Bypass Wah-Pad connecting

The TBWP is equipped with SEN (mini Jack) output which enables to connect it to the GSC (see diagram below).

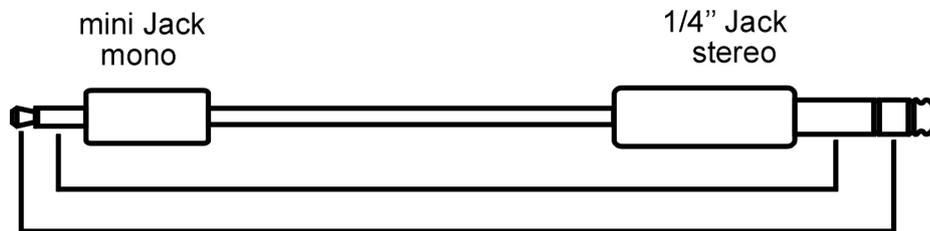

Connecting it enables for given banks to switch current preset to preset No. 9 when your wah-wah effect is active. At LOOP button settings footswitch No. 2 should be set **uP2** and in banks we intend to use in this way the WAH PAD MODE parameter should be set to **Pr9**.

Connecting AUX BANK UP/DOWN with MIDI IN footswitch

AUX BANK UP/DOWN with MIDI IN footswitch enables working in the mode of changing the banks by using BANK UP i BANK DOWN footswitches with ten presets in bank and also enables controlling the GSC by other device sending the Program Change commands. Before connecting it is needed to set AF2 at LOOP button settings (footswitch No. 8). The module should be connected to the AUX connector. MIDI receiving channel should be set on the rotatable switch situated on the left side of the module. The module receives Program Change commands in the range from 1 to 100 (program No. 100 corresponds with preset No. P00).

USB connecting with PC

Controller poses USB interface to connect with PC what enables fast programming of the controller.

On G LAB web site is available the G2SOFT program that enables reading from controller, writing to controller, saving to the file, reading from the file the single or all of presets, banks and settings also screen edition of all the parameters, presets and banks copying, printing of presets' tables etc.

Firmware works on Windows 98/ME/XP/2000/VISTA. GSC should be connected with PC by USB A-B cable.

Firmware and necessary tools with installation procedure are available on www.glab.com.pl.

PC connection enables also GSC firmware upgrade. It is recommended to check on the G LAB web site if the newer version of the firmware with functionality changes is available.

AUX connector


Controller poses AUX connector for additional modules to extend the controller functionality e.g.

AUX A/B SWITCH (to switch the input signal from two guitars). The actual list of modules you'll find in accessories for the controller at www.glab.com.pl.


MIDI 2 X LOOP connecting

MIDI 2 X LOOP enables controlling by GSC two additional effect loops connected for e.g. to amp effects loop or between OUT output and amp input. Looper has passive signal path (relay true bypass) and silent switching circuit. MIDI 2 X LOOP is controlled via MIDI connection by Program Change or Control Change commands. It enables to recall the program setting the loops or to switch separately the given loops by Control Change commands.

Looper poses MIDI THRU output. By connecting two MIDI 2 X LOOPS it possible to control two stereo devices. Schemes of possible MIDI 2 X LOOP connections.

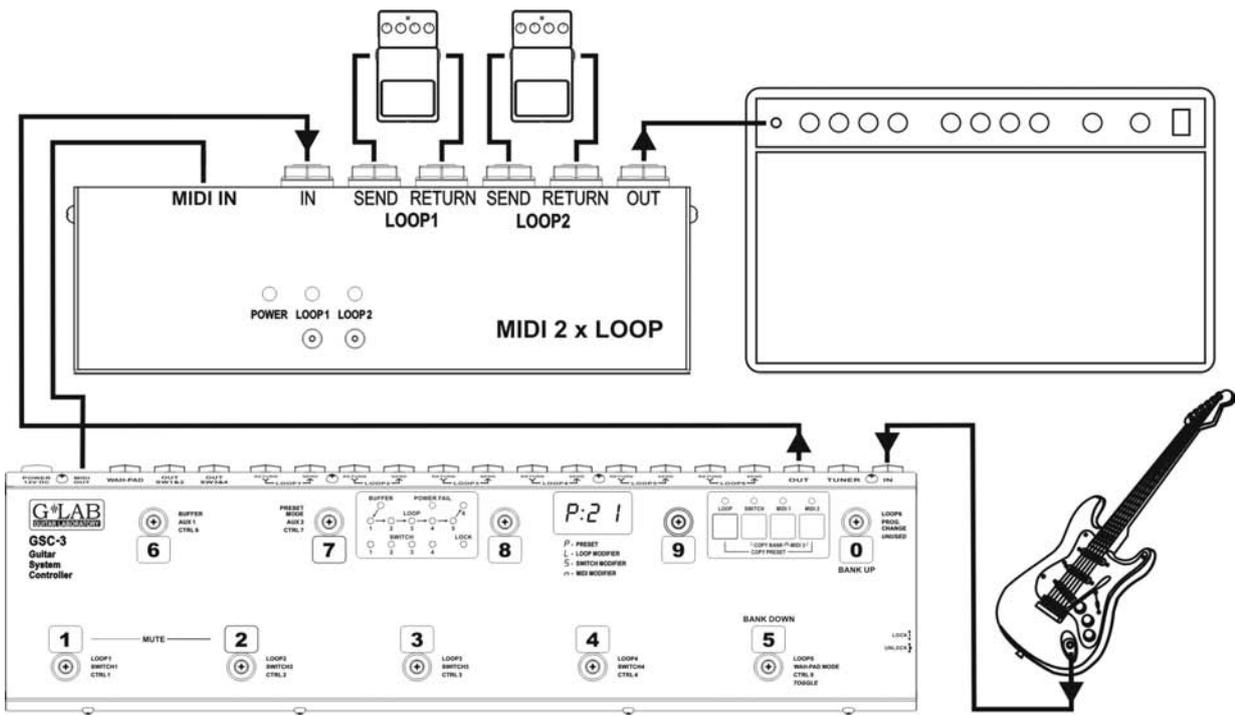

Scheme of extending GSC with two effect loops

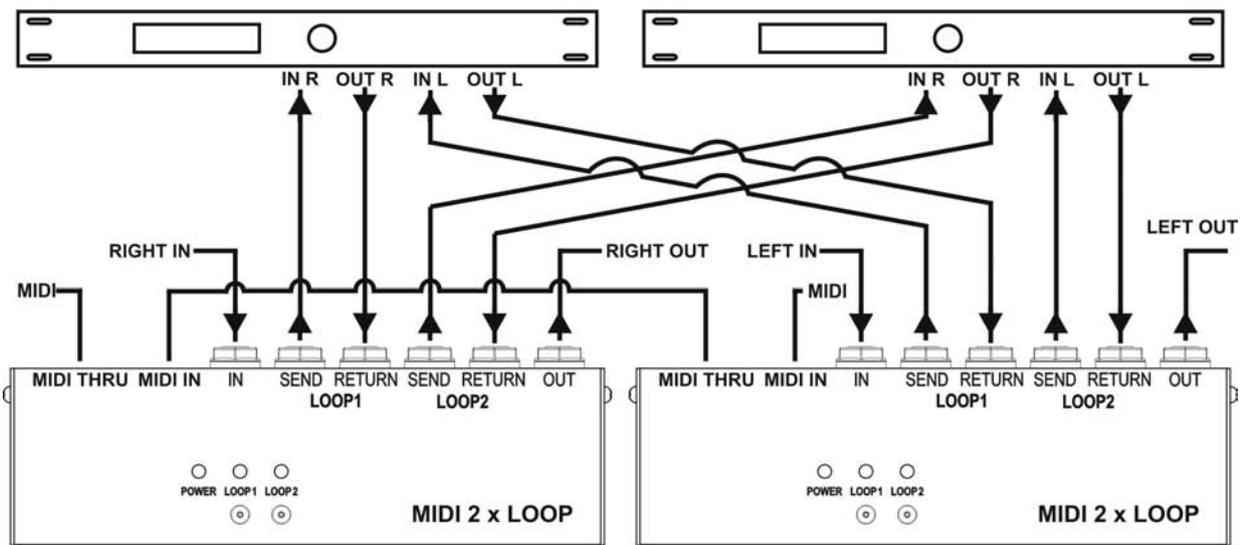

Two stereo effects' switcher (TRUE BYPASS)

Technical parameters

Dimensions:	width	441 mm
	depth	125 mm (without connectors)
	height	60 mm
Weight		1.9 kg
Buffer input impedance		1 MΩ
Buffer transmitted signal		15 dBu
Buffer output impedance		3 kΩ
Tuner buffer input impedance		10 MΩ
Power supply		12V DC 2A


MIDI implementation chart

G LAB Guitar System Controller GSC-3 and GSC-2 rev. 2.11

Function	Transmitted	Recognised
Basic Channel		
Default	1,2,3	X
Changed	1-16	X
Mode		
Default		
Messages	X	X
Altered		
Note Number	X	X
True Voice	X	X
Velocity		
Note ON	X	X
Note OFF	X	X
After Touch		
Keys	X	X
Channels	X	X
Pitch Bend	X	X
Control Change	X	
Prog Change	O	X
System Excl.	X	X
System Common		
Song Pos	X	X
Song Sel	X	X
Tune	X	X
System real time		
Clock	X	X
Commands	X	X
Aux Messages		
Local ON/OFF	X	X
All Notes OFF	X	X
Active Sense	X	X
Reset	X	X

O: YES

X: NO

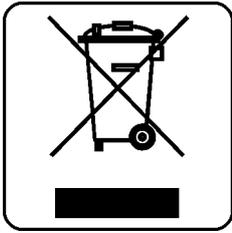

DO NOT PLACE THIS PRODUCT INTO THE WASTE CONTAINER !

This device is marked with a cross-lined waste container symbol according to 2002/96/EU Directive on Waste Electric and Electronic Equipment. Such marking informs that after usage equipment can not be trashed together with other household waste.

An user obligation is to return wasted equipment to a party collecting wasted electric and electronic equipment. Parties collecting such equipment organise a system, including local collection points, shops and other units, allowing to return such equipment. This Directive assures an user free of charge utilisation of such delivered equipment.

This device is made of materials which can be recycled or utilised after becoming out of use. Proper handling of wasted electric and electronic equipment reduce demand for raw materials and contribute in avoiding harmful consequences for environment and health of people caused by dangerous components and not proper storing and utilising of such equipment.



www.glab.com.pl

G LAB is a brand of ELZAB SA

COMPANY ADDRESS

ELZAB SA

ul. Kruczkowskiego 39, 41-813 Zabrze, Poland
phone: +48 32 272 20 21, fax: +48 32 272 81 90

Sales & Export Department

phone: +48 32 272 30 51 ext. 34, 39, 64
+48 32 272 20 21 ext. 308, 366, 468
e-mail: glab@glab.com.pl

Technical Support

phone: +48 32 272 30 51 ext. 64
+48 32 272 20 21 ext. 308
e-mail: help@glab.com.pl

www.glab.com.pl