
PEARL CONCERT SNARE STAND S-1030L / S-1030LS

Instruction Manual

Congratulations on your purchase! To get optimum performance from your S-1030L / S -1030LS Concert Snare Stand, please read this Instruction Manual before playing.

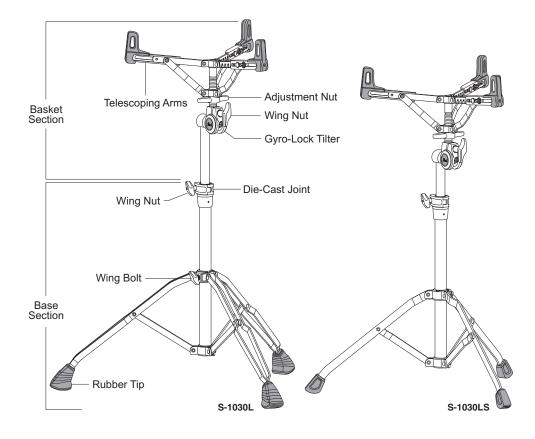


Base Section Assembly

Loosen the Wing Bolt on the Base Section and extend the legs to form a stable tripod (a minimum of 24" (60cm) is recommended for optimum stability). Tighten the Wing Bolt securely when set (Fig.1).


24" (60cm)

Basket Section Assembly

The Basket Section is packed with the Arms and the Upper Tube folded. Loosen the Wing Nut on the Gyro-Lock Tilter and turn the Upper Tube as shown (Fig.2).

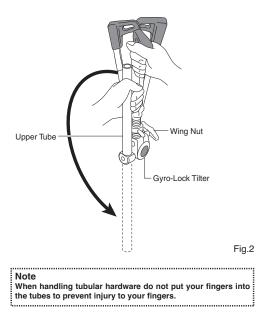


Loosen the Wing Nut on the Die Cast Joint on the Base Section and insert the Upper Tube of the Basket Section as shown. Adjust the height to your preference and tighten the Wing Nut on the Die-Cast Joint securely (Fig.3).

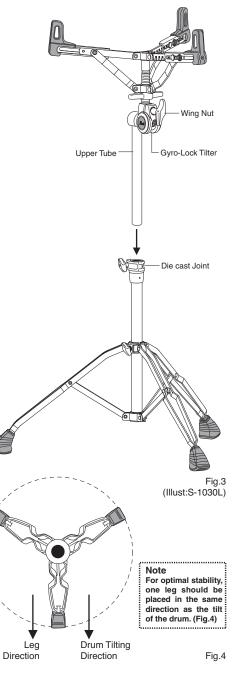


Telescoping Arms

The S-1030/S-1030LS features telescoping arms that accommodate drums from 10" to 16" in diameter. Loosen the Key Bolts and align the ends of the arms to the Index Marks that correspond to the diameter of your drum. Tighten the Key Bolts when the settings are completed (Fig.5).

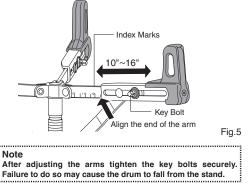


Adjustment Nut

Place the Snare Drum into the Basket with the Strainer positioned where it can be conveniently operated with your left hand. Tighten the Adjustment Nut to hold the Snare Drum securely (do not overtighten) (Fig.6).

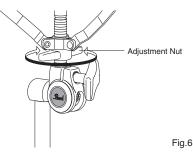

Gyro-Lock Tilter


The Gyro-Lock Tilter featured on the S-1030/S-1030LS is infinitely adjustable and allows the drum to be tilted fore/aft and left/right at the same time for precise placement (Fig.7). Loosen the Wing Nut to make tilt adjustments and tighten the Wing Nut securely after the adjustments have been made.

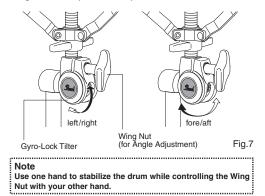

Optional Items (sold separately)

Convertible Spike / Rubber Tip (CVT-300/3)

The optional CVT-300/3 Convertible Spike/Rubber Tips replace the stock Rubber Tips and give you the choice of Rubber Tips or Spike Tips for greater stability. Push Button "A" to activate the Spike Tip (Fig.8). To retract, push Button "B" (Fig.9)

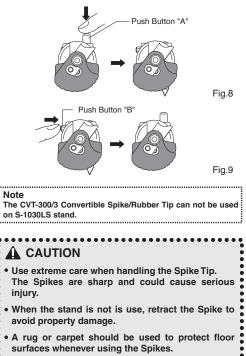

CAUTION When adjusting the height and tilt of the drum, support the drum with one hand while slowly making adjustments with your free hand to prevent the stand from falling and pinching fingers that may be in the way. When folding the tripod legs, be careful not to pinch your fingers between the legs and the stand. When handling tubular hardware, do not put your fingers into the tubes to prevent injury to your fingers.



http://www.pearldrum.com Products and specifications are subject to change without notice. Printed in China