



Hero Beam 100

User manual

moving head

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

21.04.2021, ID: 477540

Table of contents

1	General information	5
1.1	Further information.....	5
1.2	Notational conventions.....	5
1.3	Symbols and signal words.....	6
2	Safety instructions	8
3	Features	10
4	Installation	11
5	Starting up	13
6	Connections and controls	14
7	Operating	16
7.1	Starting the device.....	16
7.2	Main menu.....	16
7.3	Operating modes.....	17
7.4	Settings.....	21
7.5	System information.....	25
7.6	Gobos.....	25
7.7	Menu overview.....	26
7.8	Functions in 6-channel DMX mode.....	26
7.9	Functions in 19-channel DMX mode.....	28
8	Technical specifications	32
9	Plug and connection assignment	34
10	Troubleshooting	35
11	Cleaning	36
12	Protecting the environment	37



1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under www.thomann.de.

1.1 Further information

On our website (www.thomann.de) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: *[VOLUME]* control, *[Mono]* button.

Displays

Texts and values displayed on the device are marked by quotation marks and italics.

Examples: '24ch', 'OFF'.

Instructions

The individual steps of an instruction are numbered consecutively. The result of a step is indented and highlighted by an arrow.

Example:

1. ➤ Switch on the device.
2. ➤ Press [Auto].
⇒ Automatic operation is started.
3. ➤ Switch off the device.

Cross-references

References to other locations in this manual are identified by an arrow and the specified page number. In the electronic version of the manual, you can click the cross-reference to jump to the specified location.

Example: See ➤ 'Cross-references' on page 6.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
WARNING!	This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.

Warning signs	Type of danger
	Warning – high-voltage.
	Warning – dangerous optical radiation.

Warning signs	Type of danger
	Warning – suspended load.
	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended for use as a freely moving multifunctional spotlight. The device is designed for professional use and is not suitable for use in households. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



Extend the operating life of the device by regular breaks and by avoiding frequent switching on and off. The device is not suitable for continuous operation.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke! Never let children unattended use electrical devices.



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers. There are no user-serviceable parts inside. Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



WARNING!

Eye damage caused by high light intensity

Never look directly into the light source.



WARNING!

Risk of epileptic shock

Strobe lighting can trigger seizures in photosensitive epilepsy. Sensitive persons should avoid looking at strobe lights.



WARNING!

Risk of injury caused by falling objects

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain. The load capacity of trusses or other fixtures must be sufficient for the intended number of devices. Note that the movement of the head places additional loads on the load-bearing parts.

**CAUTION!****Risk of injury due to movements of the device**

The head of the device can move quickly (pan, tilt) and can produce very bright light. This is also valid immediately after you turn on the device, when the device operates in automatic mode or under remote control and when you turn off a DMX controller that is connected to the device. Persons staying near the device could be injured or frightened. Before you turn on the device and during the operation, always ensure that nobody stays close to the device. If work has to be performed in the area of movement or in the near vicinity of the device, it must remain turned off.

**NOTICE!****Risk of fire**

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.

**NOTICE!****Operating conditions**

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations. Only operate the device within the ambient conditions specified in the chapter 'Technical specifications' of this user manual. Avoid heavy temperature fluctuations and do not switch the device on immediately after it was exposed to temperature fluctuations (for example after transport at low outside temperatures). Dust and dirt inside can damage the unit. When operated in harmful ambient conditions (dust, smoke, nicotine, fog, etc.), the unit should be maintained by qualified service personnel at regular intervals to prevent overheating and other malfunction. The device must not be moved during use.

**NOTICE!****Power supply**

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user. Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

**NOTICE!****Risk of fire by exceeding the maximum current**

The device can power further devices via a lockable Power Twist output socket. The current consumption of all further devices connected in series must not exceed the value stated in the technical specifications, otherwise injuries and irreparable damage to the device can occur. Only connect as many devices to the output socket that the maximum current consumption is not exceeded. Pay attention to the correct dimensioning (core cross-section) of the power cables used for all devices connected in series.

**NOTICE!****Possible staining**

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains. In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

**NOTICE!****Risk of overheating**

The distance between light output and the illuminated surface must be more than 1.5 m (19.7in). Provide sufficient ventilation. The ambient temperature must always be below 40 °C (104 °F).

**NOTICE!****Risk of fire and overheating**

The distance between the light source and the combustible materials must be greater than 12 m. The distance to non-combustible materials must be greater than 2 m. Provide sufficient ventilation. The ambient temperature must always be below 104 °F (40 °C).

**NOTICE!****Possible damage due to installation of a wrong fuse**

The use of different types of fuses can cause serious damage to the unit. Fire hazard! Only fuses of the same type may be used.

3 Features

Special features of the device:

- 1 × 100 W LED
- Beam angle 2.5°
- Motorised focus
- Two moving axes
 - Tilt (250°)
 - Pan (540°)
- Control via DMX (6 or 19 channels) or buttons and display on the unit
- Built-in automatic show programmes
- Sound control
- Master / Slave mode
- Strobe effect
- Electronic dimmer
- Selectable dimmer curves
- Linear 6-facet prism and circular 16-facet prism
- Gobo wheel with 11 static gobos
- Colour wheel with 13 colours plus white
- Selectable split colours and rainbow flow effect
- Frost filter
- Fan with silent mode for noise-sensitive environments

For technological reasons, the light output of LEDs decreases over their lifetime. This effect increases with higher operating temperature. You can extend the service life of the illuminants by providing adequate ventilation and operating the LEDs with the lowest possible brightness.

4 Installation

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Lift the device only at the base. When lifted at the rotatable mounting, the device may be damaged.

You can install the device standing or hanging. When in use, the device must be mounted at a solid surface or clamped to an approved truss.

Work from a stable platform whenever you install or move the device or when you perform any kind of maintenance. Block access under the work area.



WARNING!

Risk of injury caused by falling objects

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.

The load capacity of trusses or other fixtures must be sufficient for the intended number of devices. Not that the movement of the head places additional loads on the load-bearing parts.



NOTICE!

Risk of overheating

The distance between light output and the illuminated surface must be more than 1.5 m (19.7in).

Provide sufficient ventilation.

The ambient temperature must always be below 40 °C (104 °F).




NOTICE!

Possible data transmission errors

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

Mounting options

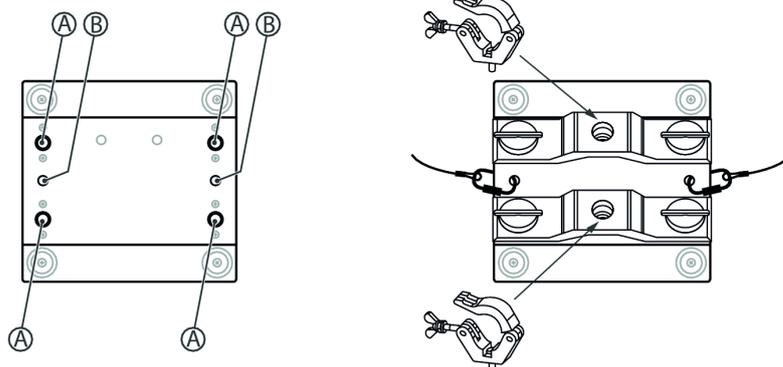

The Quick Lock openings on the bottom side of the housing (A) allow the secure attachment of the included mounting bracket. There, you can fasten adapters such as half couplers, trigger clamps, c-hooks etc. Safety cables are being threaded through the safety eyelets (B) on the bottom side of the housing.




Please note that this device must not be connected to a dimmer.

5 Starting up

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.

Connections in DMX mode

Connect the DMX input of the device to the DMX output of a DMX controller or another DMX device. Connect the output of the first DMX device to the input of the second one, and so on to form a daisy chain. Always ensure that the output of the last DMX device in the daisy chain is terminated with a resistor ($110\ \Omega$, $\frac{1}{4}\text{ W}$).

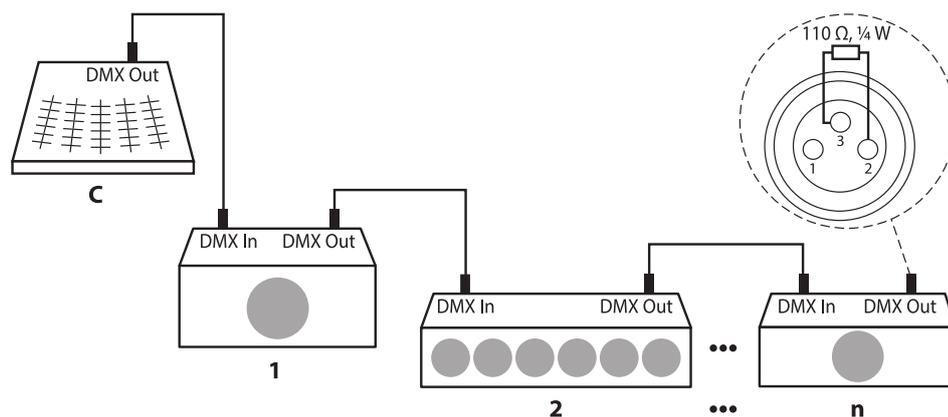


DMX indicator

When the device and the DMX controller are in operation and a DMX signal is received at the input, the status LED [DMX] lights up.

Connections in master/slave mode

When you configure a group of devices in master/slave mode, the first unit will control the other units for an automatic, sound-activated, synchronized show. This function is ideal when you want to start a show immediately. Connect the DMX output of the master device to the DMX input of the first slave device. Then connect the DMX output of the first slave device to the DMX input of the second slave device and so on.

6 Connections and controls

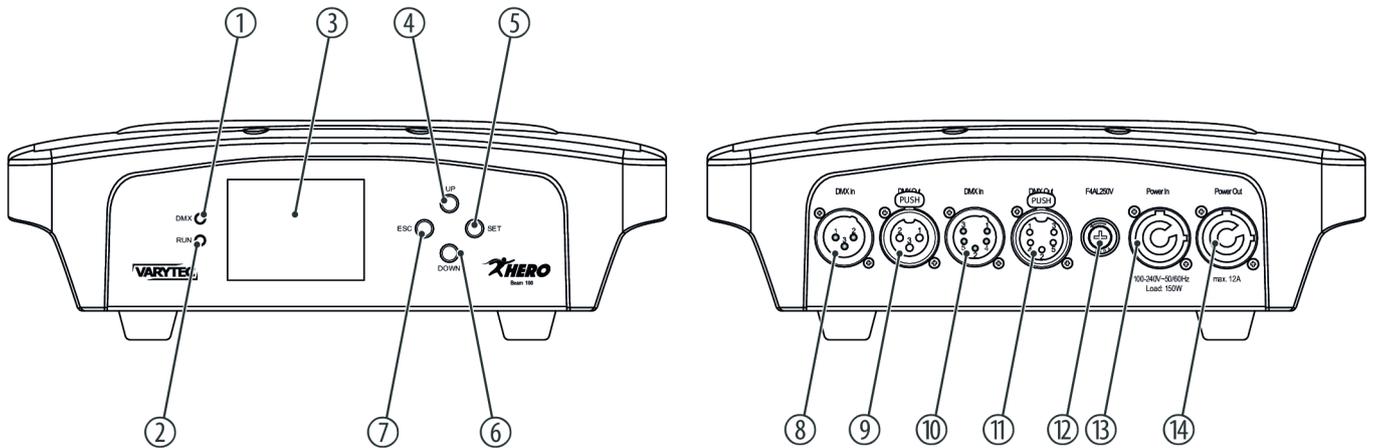

- | | |
|----|--|
| 1 | [DMX]
Status LED. The LED lights up as soon as a DMX signal is present. |
| 2 | [RUN]
Status LED. This LED lights up once the device is operational. |
| 3 | Display |
| 4 | [UP]
Increases the displayed value by one. |
| 5 | [SET]
Activates the main and settings menu. Selects an option of the respective operating mode, confirms the set value. |
| 6 | [DOWN]
Decreases the displayed value by one. |
| 7 | [ESC]
Closes an open submenu without saving any changes. |
| 8 | [DMX In]
DMX input, designed as XLR panel plug, 3-pin |
| 9 | [DMX Out]
DMX output, designed as XLR panel socket, 3-pin |
| 10 | [DMX In]
DMX input, designed as XLR panel plug, 5-pin |

11	<i>[DMX Out]</i> DMX output, designed as XLR panel socket, 5-pin
12	Fuse holder
13	<i>[Power In]</i> Lockable input socket (Power Twist) for mains power supply
14	<i>[Power Out]</i> Lockable output socket (Power Twist) for powering a connected device Output current 12 A max.

7 Operating

7.1 Starting the device



CAUTION!

Risk of injury due to movements of the device

The head of the device can move quickly (pan, tilt) and can produce very bright light. This is also valid immediately after you turn on the device, when the device operates in automatic mode or under remote control and when you turn off a DMX controller that is connected to the device. Persons staying near the device could be injured or frightened.

Before you turn on the device and during the operation, always ensure that nobody stays close to the device. If work has to be performed in the area of movement or in the near vicinity of the device, it must remain turned off.

Connect the device to the power supply to start operation. After a few seconds, the fans start to work, the head moves to the home positions for rotation (pan) and inclination (tilt). The device is now operational.

7.2 Main menu

1. ➤ Press *[SET]* to activate the main menu.
2. ➤ Press *[UP]* or *[DOWN]* to change the respectively displayed value.
3. ➤ When the display shows the desired value, press *[SET]*.
4. ➤ To exit a menu item without making changes, press *[ESC]*.

If you don't press any button for 60 seconds the display turns off. A short press on *[ESC]*, *[SET]*, *[UP]* or *[DOWN]* will then turn it back on.

All previous settings are retained even when you switch the device off and disconnect it from the mains.

Setting the DMX address

Use the 'DMX Address' menu to set the DMX address. This setting is only relevant if the device is controlled via a DMX controller.

1. ▶ Press [SET] to activate the main menu.
2. ▶ Press [UP] or [DOWN] until the display shows 'DMX Address' and confirm your selection with [SET].
3. ▶ Press [UP] or [DOWN] to select a value between 1 and 512 for the desired DMX address (display shows '001' ... '512') and confirm the selection with [SET].

Make sure that this number matches the configuration of your DMX controller. The following table shows the respective highest possible DMX address for the various DMX modes.

Mode	Highest possible DMX address
6-channel mode	507
19-channel mode	494

7.3 Operating modes

Use the 'Running Mode' menu to set the operating modes.

Setting the DMX mode

In this mode the device is controlled via a DMX controller.

1. ▶ Press [SET] to activate the main menu.
2. ▶ Press [UP] or [DOWN] until the display shows 'Running Mode' and confirm the selection with [SET].
3. ▶ Press [UP] or [DOWN] to select the desired DMX mode and confirm the selection with [SET].

The following DMX modes are available:

Menu level 2	Description
'DMX 6CH mode'	6-channel mode
'DMX 19CH Mode'	19-channel mode

Auto programmes

In this operating mode you select one of the automatic programmes and adjust the speed and the overall brightness of the automatic programme.

1. ➤ Press [SET] to activate the main menu.
2. ➤ Press [UP] or [DOWN] until the display shows 'Running Mode' and confirm the selection with [SET].
3. ➤ Press [UP] or [DOWN] until the display shows 'Auto' and confirm the selection with [SET].
4. ➤ Press [UP] or [DOWN] to select the desired submenu or the desired value and confirm the selection with [SET].

The following sub menus are available:

Menu level 3	Menu level 4	Description
'Program'	'Program 1... Program 8'	Automatic programme 1...8
'Speed'	'0...100'	Running speed from slow to fast
'Master Brightness'	'0...100%'	Overall brightness from dark to bright

Sound control

In this operating mode you select one of the sound controlled programmes and adjust the microphone sensitivity and the overall brightness of the programme.

1. ➤ Press [SET] to activate the main menu.
2. ➤ Press [UP] or [DOWN] until the display shows 'Running Mode' and confirm the selection with [SET].
3. ➤ Press [UP] or [DOWN] until the display shows 'Sound' and confirm the selection with [SET].
4. ➤ Press [UP] or [DOWN] to select the desired submenu or the desired value and confirm the selection with [SET].

The following sub menus are available:

Menu level 3	Menu level 4	Description
'Program'	'Program 1... Program 8'	Sound controlled programme 1...8
'Sensitivity'	'0...100'	Microphone sensitivity from low to high
'Master Brightness'	'0...100%'	Overall brightness from dark to bright

Master / slave mode

To use a device as the master device, select one of the automatic programmes, activate the sound control or the manual control. Connect the slave devices to the DMX output of the master device and select the DMX mode.

Manual control

This setting is only relevant if the device is not controlled via a DMX controller and not working as slave in a master / slave configuration. In this operating mode pan, tilt, focus, effects and colours can be set.

1. ➤ Press *[SET]* to activate the main menu.
2. ➤ Press *[UP]* or *[DOWN]* until the display shows 'Running Mode' and confirm the selection with *[SET]*.
3. ➤ Press *[UP]* or *[DOWN]* until the display shows 'Manual Control' and confirm the selection with *[SET]*.
4. ➤ Press *[UP]* or *[DOWN]* to select the desired submenu or the desired value and confirm the selection with *[SET]*.

The following sub menus are available:

Menu level 3	Menu level 4/5	Description
'Pan'	'0' ... '540'	Setting the angle of rotation
'Tilt'	'0' ... '250'	Setting the angle of inclination
'Pan/Tilt Speed'	'0' ... '255'	Setting the speed of pan and tilt, increasing speed
'Dimmer'	'0' ... '255'	Setting the dimmer intensity
'Strobe'	'0' ... '30'	Setting the strobe frequency
'Color'	Colour setting	Setting one of the 13 colours of the colour wheel or white (value ranges such as 19-channel DMX mode, see Chapter 7.9 'Functions in 19-channel DMX mode' on page 28)
	'color flow forward' '0' ... '255'	Speed for colour change clockwise, increasing speed
	'color flow backward' '0' ... '255'	Speed for colour change counter-clockwise, increasing speed
'Fixed Gobo'	Static Gobo wheel	Setting one of the static Gobos
	'gobo flow forward' '0' ... '255'	Speed for gobo pass clockwise, increasing speed
	'gobo flow backward' '0' ... '255'	Speed for gobo pass counterclockwise, increasing speed
'Frost'	'ON'	Activating frost filter
	'OFF'	Deactivating frost filter
'7 color wheel'	'ON'	Activating colour wheel effect

Menu level 3	Menu level 4/5	Description
	'OFF'	Deactivating colour wheel effect
'Focus'	'0' ... '255'	Setting the initial focus setting
'Prism circular'	'ON'	Activating the circular prism
	'OFF'	Deactivating the circular prism
'Prism circular rotation'	'stop'	Deactivating rotation of the circular prism
	'Forward' '0' ... '255'	Setting the rotation speed of the circular prism clockwise, increasing speed
	'Backward' '0' ... '255'	Setting the rotation speed of the circular prism counterclockwise, increasing speed
'Prism linear'	'ON'	Activating the linear prism
	'OFF'	Deactivating the linear prism
'Prism linear rotation'	'stop'	Deactivating rotation of the linear prism
	'Forward' '0' ... '255'	Setting the rotation speed of the linear prism clockwise, increasing speed
	'Backward' '0' ... '255'	Setting the rotation speed of the linear prism counterclockwise, increasing speed

7.4 Settings

Use the 'Setting' menu to adjust the device parameters.

1. ➤ Press [SET] to activate the main menu.
2. ➤ Press [UP] or [DOWN] until the display shows 'Setting' and confirm the selection with [SET].
3. ➤ Press [UP] or [DOWN] to select the desired submenu or the desired value and confirm the selection with [SET].

The following sub menus are available:

Menu level 2	Menu level 3/4	Description
'Pan Reverse'	Pan inversion	
	'YES'	reversed direction of rotation
	'NO'	normal direction of rotation
'Tilt Reverse'	Tilt inversion	
	'YES'	reversed direction of inclination
	'NO'	normal direction of inclination
'Pan Limit'	'Starting point' '0' ... '539'	Starting point of the rotation angle
	'Ending point' '1' ... '540'	Ending point of the rotation angle
'Tilt Limit'	'Starting point' '0' ... '249'	Starting point of the inclination angle
	'Ending point' '1' ... '250'	Ending point of the inclination angle
'Home Position'	Setting the start parameters Detailed information about this menu item can be found under ↪ 'Setting the start parameters' on page 24.	
'DMX Fail'	Behaviour on DMX control failure	
	'Hold'	last DMX signal is being held
	'Blackout'	Blackout on DMX failure
	'Auto Mode'	Automatic programmes mode on DMX failure
	'Manual Control'	Manual mode on DMX failure
	'Sound Mode'	Sound control on DMX failure
'Dimmer Curve'	Setting the dimmer curve	
	'Linear'	linear proportional course

Menu level 2	Menu level 3/4	Description
	'Exponential'	square curve with a flat course at the beginning and steep course at the end
	'Logarithmic'	Inverted square curve with a steep course at the beginning and a flat course at the end
	'S Curve'	Non-linear curve with a distinctive flat course at the beginning and end
'Fan Mode'	Fan setting	
	'Max'	maximum speed
	'Automatic'	temperature-dependent speed
	'Silent'	quiet mode with possible reduction of light output
'Blackout'	Blackout of the device	
	'No'	Blackout off
	'If XY run'	Blackout if Pan or Tilt active
	'If color wheel run'	Blackout if colour wheel active
	'If gobo wheel run'	Blackout if Gobo wheel active
'PWM'	Pulse-width modulation Options: '650Hz', '1530Hz', '3600Hz', '12KHz' or '25KHz'	
'Auto Correction'	Auto-correction Pan and Tilt	
	'ON'	Auto-correction activated. The device returns to its starting position if the moving head is unintentionally adjusted
	'OFF'	Auto-correction disabled (not recommended)
'Display Backlight'	Display illumination	
	'ON'	Illumination permanently on
	'OFF'	Illumination is switched off after 60 seconds
'Display Reverse'	Display reversal	
	'ON'	Text in the display appears upside down
	'OFF'	Text in the display appears normal
'Autolock'	Key lock	

Menu level 2	Menu level 3/4	Description
	'ON'	automatic lock switched on If the key lock is activated, all keys have no function after 60 seconds. To cancel the key lock, press [SET] for 5 seconds.
	'OFF'	automatic lock switched off
'Reset Motor'	Resetting the motor	
	'YES'	Motor reset
	'NO'	no motor reset
'Factory Reset'	Reset to factory defaults	
	'YES'	Reset to factory defaults
	'NO'	no reset to factory defaults

Setting the start parameters

1. ➤ Press *[SET]* to activate the main menu.
2. ➤ Press *[UP]* or *[DOWN]* until the display shows 'Setting' and confirm the selection with *[SET]*.
3. ➤ Press *[UP]* or *[DOWN]* until the display shows 'Home Position' and confirm the selection with *[SET]*.
 - ⇒ The device prompts you to enter a password.
 - Press *[UP]* or *[DOWN]* until the display shows '018' and confirm the selection with *[SET]*.
4. ➤ Use *[UP]* or *[DOWN]* to select the parameter you want to set and confirm the selection with *[SET]*.

The following sub menus are available:

Menu level 3	Menu level 4	Description
'Pan'	'-128' ... '127'	Setting the home position of the rotary movement
'Tilt'	'-128' ... '127'	Setting the home position of the inclination movement
'Pan/Tilt Speed'	'0' ... '255'	Setting the initial speed of pan and tilt, increasing speed
'Dimmer'	'0' ... '255'	Setting the initial dimmer intensity
'Color'	'-128' ... '127'	Setting the initial colour of the colour wheel (one of the 13 colours or white)
'Fixed Gobo'	'-128' ... '127'	Setting the home position of the static Gobo wheel (one of the 11 Gobos)
'Frost'	'-128' ... '127'	Specifying the initial frost filter setting
'7 color wheel'	'-128' ... '127'	Specifying the initial effect wheel setting
'Focus'	'-128' ... '127'	Specifying the initial focus setting
'Prism circular'	'-128' ... '127'	Specifying the initial circular prism setting
'Prism linear'	'-128' ... '127'	Specifying the initial linear prism setting


7.5 System information

1. ➤ Press *[SET]* to activate the main menu.
2. ➤ Press *[UP]* or *[DOWN]* until the display shows 'System Info' and confirm the selection with *[SET]*.
3. ➤ Use *[UP]* or *[DOWN]* to select the information you want to display and confirm with *[SET]*.


Menu level 2	Description
'Current Time'	Displays the current running time of the device.
'Total Time'	Displays the total running time of the device.
'LED on Time'	Displays the total running time of the LED.
'Current Mode'	Displays the current operating mode.
'Temperature Head'	Displays the current head temperature.
'Temperature Base'	Displays the current temperature of the device base.
'Software Version'	Displays the current software version.

7.6 Gobos

Static Gobo wheel

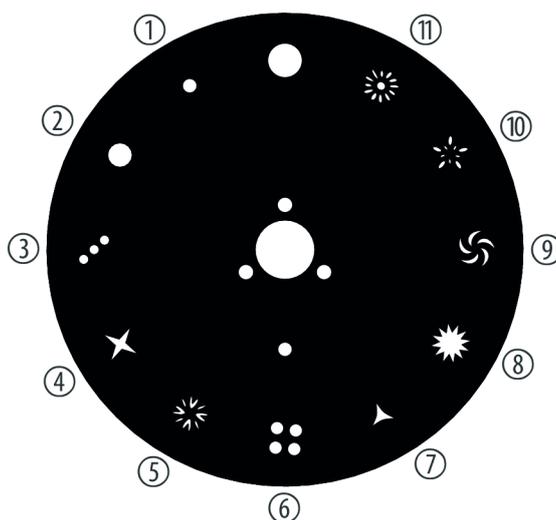

7.7 Menu overview

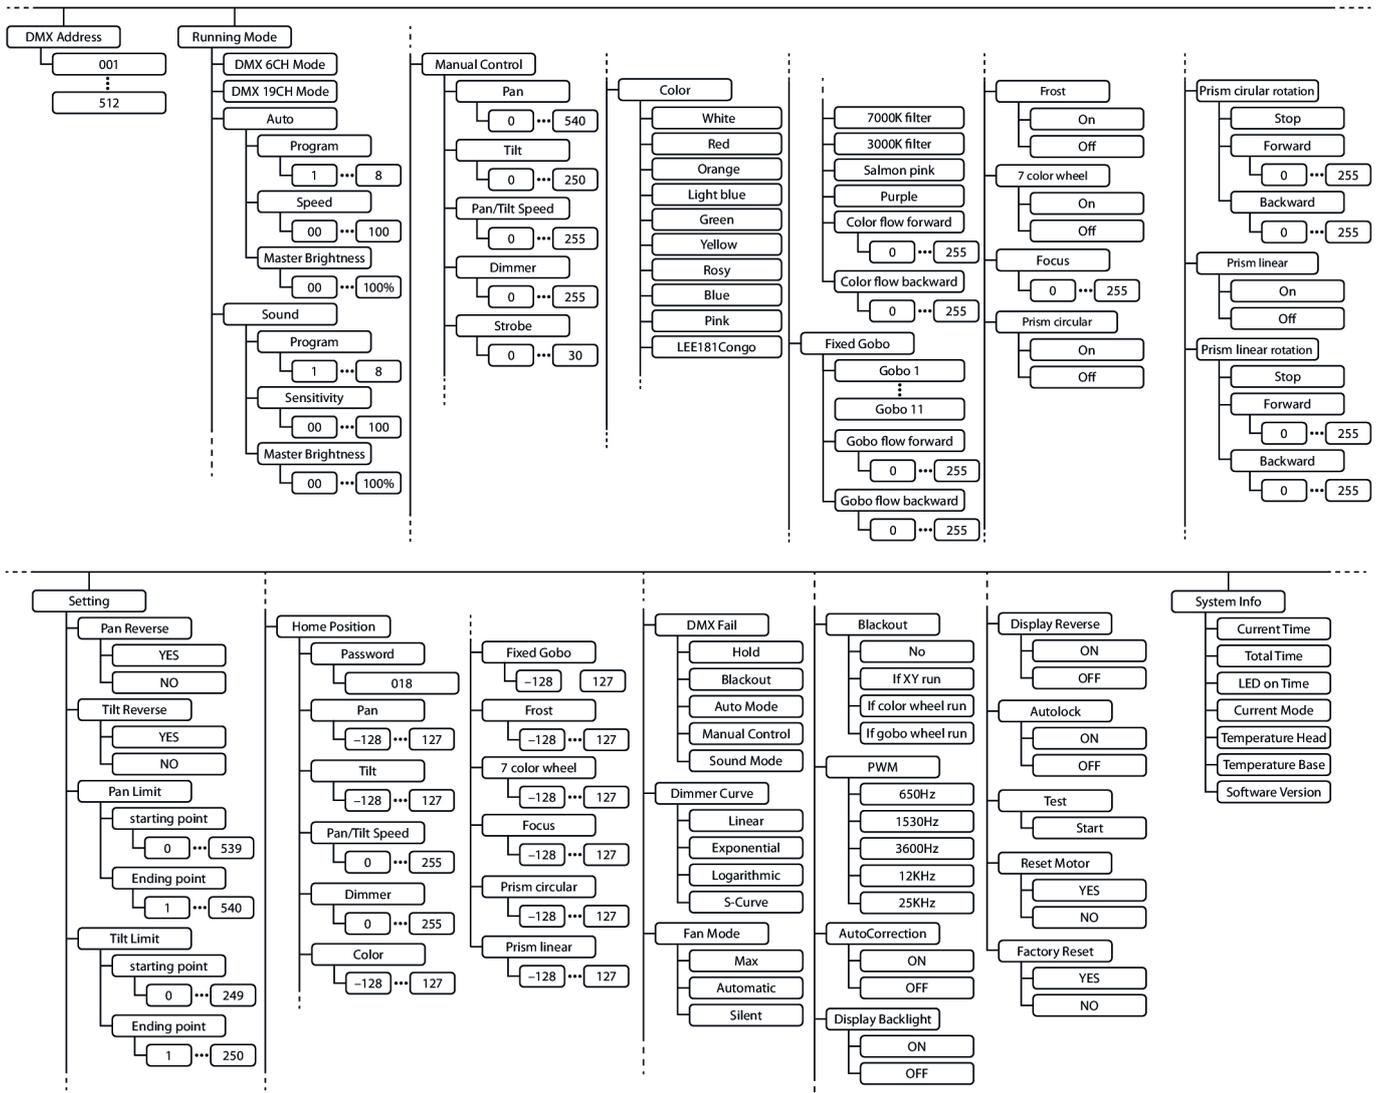

7.8 Functions in 6-channel DMX mode

Channel	Value	Function
1	0...255	Rotation (pan) (0° up to the maximum value of the Pan range)
2	0...255	Inclination (tilt) (0° up to the maximum value of the Tilt area)
3	0...255	Dimmer intensity from dark (0) to bright (255)
4	Stroboscope	

Channel	Value	Function
	0...10	LEDs off
	11...80	Constantly increasing brightness, increasing speed (dimmed bright, quickly dark)
	81...140	Constantly decreasing brightness, increasing speed (quickly bright, dimmed dark)
	141...200	Impulse effect, increasing speed (dimmed light and dark)
	201...250	Strobe effect, constant (0.5...20 Hz)
	251...255	LEDs on
5	0...7	No function
	8...47	Preprogrammed automatic show 1
	48...87	Preprogrammed automatic show 2
	88...127	Preprogrammed automatic show 3
	128...167	Preprogrammed automatic show 4
	168...207	Preprogrammed automatic show 5
	208...247	Preprogrammed automatic show 6
	248...255	Sound control colour wheel
6	0...7	No function
	8...32	Pan-Tilt auto programme 1
	33...58	Pan-Tilt auto programme 2
	59...84	Pan-Tilt auto programme 3
	85...110	Pan-Tilt auto programme 4
	111...136	Pan-Tilt auto programme 5
	137...162	Pan-Tilt auto programme 6
	163...188	Pan-Tilt auto programme 7
	189...214	Pan-Tilt auto programme 8
	215...255	Sound control Pan and Tilt

7.9 Functions in 19-channel DMX mode


Channel	Value	Function
1	0...255	Rotation (pan) (0° up to the maximum value of the Pan range)
2	0...255	Fine adjustment rotation (pan)
3	0...255	Inclination (tilt) (0° up to the maximum value of the Tilt area)
4	0...255	Fine adjustment inclination (tilt)
5	0...255	Speed of rotation (pan) and inclination (tilt), fast (0) to slow (255)
6	0...255	Dimmer intensity from dark (0) to bright (255)
7	Stroboscope	
	0...10	LEDs off
	11...80	Constantly increasing brightness, increasing speed (dimmed bright, quickly dark)
	81...140	Constantly decreasing brightness, increasing speed (quickly bright, dimmed dark)
	141...200	Impulse effect, increasing speed (dimmed light and dark)
	201...250	Strobe effect, constant (0.5...20 Hz)
	251...255	LEDs on
8	Colour wheel	
	0...4	Open (white)
	5...9	White / red
	10...14	Red
	15...19	Red / orange
	20...24	Orange
	25...29	Orange / light blue
	30...34	Bright blue
	35...39	Light blue / green
	40...44	Green
	45...49	Green / yellow
	50...54	Yellow
	55...59	Yellow / pink
	60...64	Pink
	65...69	Pink / blue
	70...74	Blue
	75...79	Blue / pink
80...84	Pink	

Channel	Value	Function
	85...89	Pink / LEE181Congo
	90...94	LEE181Congo
	95...99	LEE181Congo / 7000K filter
	100...104	7000K filter
	105...109	7000K filter / 3000K filter
	110...114	3000K filter
	115...119	3000K filter / salmon
	120...124	Salmon-coloured
	125...129	Salmon / purple
	130...134	Purple
	135...139	Purple / white
	140...149	Open (white)
	150...199	Rotation clockwise, decreasing speed
	200...205	Stop rotation
	206...255	Gobo wheel rotation counterclockwise, increasing speed
9	static Gobo wheel	
	0...9	Open (white)
	10...19	Gobo 1
	20...29	Gobo 2
	30...39	Gobo 3
	40...49	Gobo 4
	50...59	Gobo 5
	60...69	Gobo 6
	70...79	Gobo 7
	80...89	Gobo 8
	90...99	Gobo 9
	100...109	Gobo 10
	110...119	Gobo 11
	120...127	Gobo 1 shake, increasing speed
	128...135	Gobo 2 shake, increasing speed
	136...143	Gobo 3 shake, increasing speed
	144...151	Gobo 4 shake, increasing speed

Channel	Value	Function
	152...159	Gobo 5 shake, increasing speed
	160...167	Gobo 6 shake, increasing speed
	168...175	Gobo 7 shake, increasing speed
	176...183	Gobo 8 shake, increasing speed
	184...191	Gobo 9 shake, increasing speed
	192...199	Gobo 10 shake, increasing speed
	200...207	Gobo 11 shake, increasing speed
	208...230	Rotation clockwise, decreasing speed
	231...232	Stop rotation
	233...255	Gobo wheel rotation counterclockwise, increasing speed
10	0...255	Focus far to close
11	Circular prism	
	0...127	No function
	128...255	Circular prism activated
12	Circular prism rotation	
	0...63	0...400°
	64...126	Rotation clockwise, decreasing speed
	127...128	Stop rotation
	129...191	Gobo wheel rotation counterclockwise, increasing speed
	192...255	Circular rotation, increasing speed
13	Linear prism	
	0...127	No function
	128...255	Linear prism activated
14	Linear prism rotation	
	0...63	0...400°
	64...126	Rotation clockwise, decreasing speed
	127...128	Stop rotation
	129...191	Gobo wheel rotation counterclockwise, increasing speed
	192...255	Circular rotation, increasing speed
15	Frost filter	
	0...127	No function
	128...255	Frost filter activated

Channel	Value	Function
16	7 colours effect wheel	
	0	No function
	1...255	7 colours effect wheel activated
17	0...7	No function
	8...47	Preprogrammed automatic show 1
	48...87	Preprogrammed automatic show 2
	88...127	Preprogrammed automatic show 3
	128...167	Preprogrammed automatic show 4
	168...207	Preprogrammed automatic show 5
	208...247	Preprogrammed automatic show 6
	248...255	Sound control colour wheel
18	0...7	No function
	8...32	Pan-Tilt auto programme 1
	33...58	Pan-Tilt auto programme 2
	59...84	Pan-Tilt auto programme 3
	85...110	Pan-Tilt auto programme 4
	111...136	Pan-Tilt auto programme 5
	137...162	Pan-Tilt auto programme 6
	163...188	Pan-Tilt auto programme 7
	189...214	Pan-Tilt auto programme 8
	215...255	Sound control Pan and Tilt
19	Reset	
	0...25	No function
	26...76	Reset of the effects motor, if the value is transmitted for at least 3 seconds
	77...128	Reset of the Pan / Tilt motor, if the value is transmitted for at least 3 seconds
	129...255	Reset, if the value is transmitted for at least 3 seconds

8 Technical specifications

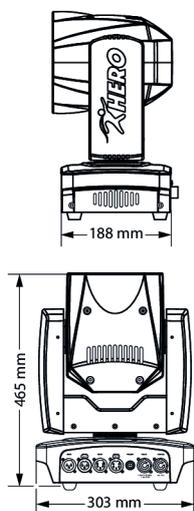

Light source		1 × LED, 100 W
Optical properties	Beam angle	2.5°
	Light output	80,000 Lux @ 5 m
Rotation angle (pan), max.		540°
Inclination angle (tilt), max.		250°
Control		DMX, buttons and display on the unit
Number of DMX channels		6, 19
Input connections	Voltage supply	lockable input socket (Power Twist)
	DMX control	XLR chassis plug, 3-pin XLR chassis plug, 5-pin
Output connections	Power supply for further devices	lockable output socket (Power Twist) Output current 12 A max.
	DMX control	XLR chassis socket, 3-pin XLR chassis socket, 5-pin
Power consumption		150 W, max
Operating supply voltage		100 - 240 V ~ 50/60 Hz
Fuse		5 mm × 20 mm, 4 A, 250 V, fast-acting
Protection class		IP20
Mounting options		hanging, standing
Dimensions (W × H × D)		303 mm × 465 mm × 188 mm
Weight		13.0 kg
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	20 %...80 % (non-condensing)

Further information

Type	Beam
Colour mixture	Colour wheel
Number of colour wheels	1
Gobo wheel, static Gobos	Yes
Rotating gobos	No
Motorized focus	Yes
Motorized zoom	No
Prism	Yes
Iris	No

9 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment so that a perfect light experience is guaranteed.

Please take our tips, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into a socket, the result of an incorrect connection may be a destroyed DMX controller, a short circuit or 'just' a not working light show!

DMX connections



The unit offers a 3-pin XLR socket for DMX output and a 3-pin XLR plug for DMX input. Please refer to the drawing and table below for the pin assignment of a suitable XLR plug.

Pin	Configuration
1	Ground, shielding
2	Signal inverted (DMX-, 'cold signal')
3	Signal (DMX+, 'hot signal')

DMX connections



A five-pin XLR socket serves as DMX output, a five-pin XLR plug serves as DMX input. The drawing below and the table show the pin assignment of a matching coupling.

Pin	Assignment
1	Ground (shielding)
2	Signal inverted (DMX-, 'cold')
3	Signal (DMX+, 'hot')
4	unused / second connection (DMX-)
5	unused / second connection (DMX+)

10 Troubleshooting



NOTICE!

Possible data transmission errors

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

In the following we list a few common problems that may occur during operation. We give you some suggestions for easy troubleshooting:

Symptom	Remedy
The unit does not work, no light, the fan does not run	Check the mains connection and main fuse.
No response to the DMX controller	1. The status LED [DMX] should light up. If it doesn't, check the DMX connectors and cables for proper connection.
	2. If the status LED [DMX] lights up and there is no reaction, check the address settings and the DMX polarity.
	3. Try using another DMX controller.
	4. Check whether the DMX cables run near or parallel to high-voltage cables that may cause damage or interference to a DMX interface circuit.

If the procedures recommended above do not succeed, please contact our Service Center. You can find the contact information at www.thomann.de.

11 Cleaning

Optical lenses

Clean the optical lenses, that are accessible from the outside, regularly in order to optimize the light output. The frequency of cleaning depends on the operating environment: wet, smoky or particularly dirty surroundings can cause more accumulation of dirt on the optics of the device.

- Clean with a soft cloth using our lamp and lens cleaner (item no. 280122).
- Always dry the parts carefully.

Fan grids

The fan grids of the device must be cleaned of any contamination, such as dust, etc. on a regular basis. Before cleaning, switch off the device and disconnect mains-operated devices from the mains. Only use pH-neutral, solvent-free and non-abrasive cleaning agents. Clean the unit with a slightly damp lint-free cloth.

12 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.

