

# **User Manual**



## **77451-70-POE**

### **Twisted Pair POE Extender**

## **SAFETY PRECAUTIONS**

To insure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.

**NOTICE:** Please read this user manual carefully before using this product.

This manual is only for operation instruction only, not for any maintenance usage. The functions described in this version are updated till September 13, 2016. Any changes of functions and parameters since then will be informed separately. Please refer to the dealers for the latest details.

# Table of Contents

1. Introduction .....	1
1.1 Introduction .....	1
1.2 Features .....	1
1.3 Package Contents .....	1
2. Product Appearance .....	2
2.1 Transmitter .....	2
2.2 Receiver .....	3
3. System Connection .....	4
3.1 Usage Precautions .....	4
3.2 System Diagram .....	4
3.3 Connection Procedure .....	4
3.4 Application .....	5
3.5 Twisted Pair Cable Connection .....	5
4. Specification .....	6
5. Troubleshooting & Maintenance .....	7

# 1. Introduction

## 1.1 Introduction

This is an HDMI/IR/RS232 twisted pair including transmitter and receiver. The Extender uses HDBaseT technology to deliver HDMI signal, max transmission distance up to 70 meters with CAT5e/CAT6 cable. CEC, bi-directional RS232&IR control, and POE are supported.

## 1.2 Features

- Support Full HD: Delivers high resolution image (1080p@60Hz@48 b/pixels/3D/4Kx2K).
- Max transmission distance is up to 70 meters over single CAT5e/CAT6 cable.
- High Bandwidth: 10.2Gps.
- HDTV Compatible, use HDMI 1.4 and HDCP compliant.
- Support PoE & CEC.
- Connect with a displayer to transmit EDID and HDCP signals constantly by using a CAT5e cable.
- Use HDBaseT technology.
- Bi-directional RS232/IR control.
- LED indicators show working status.
- Wall/table-mountable aluminium enclosure, PT case design.

**Note:** Please use a CAT5e cable with low impedance (Shielded twisted pair will be better and should be well grounded) for good transmission effect.


## 1.3 Package Contents

- 1 x Transmitter
- 1 x Receiver
- 4 x Mounting ears
- 8 x Plastic cushions
- 2 x RS232 cables
- 8 x Screws
- 1 x Power adapter (DC 24V 1.25A)
- 1 x User manual

**Note:** Please confirm if the product and the accessories are all included, if not, please contact with the dealers.

## 2. Product Appearance


### 2.1 Transmitter

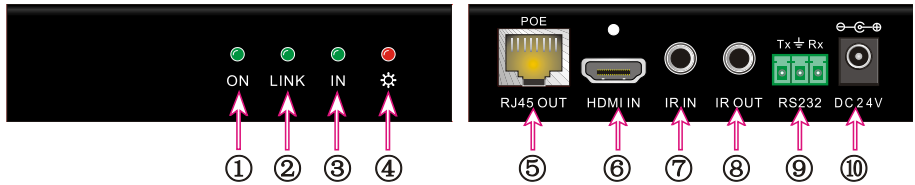

- 1) ON: Working status indicator of this device. When the device works fine, this green LED will keep blinking. And it will get off when the device stops work.
- 2) LINK: Twisted Pair Link status indicator, green LED. It will keep on when connection is successful.
- 3) IN: When connected with devices support HDCP and work normally this LED will keep on. If devices not support HDCP, this green LED will blink.
- 4) POWER LED: LED indicator of power. When connect with power, red LED will keep on.
- 5) HDBT OUT: Connect to the HDBT IN port of Receiver with a CAT5e cable.
- 6) HDMI IN: Connect to HDMI source.
- 7) IR IN: Connect with IR Receiver to collect infrared signal from IR Remote, work with far-end IR OUT port.
- 8) IR OUT: Connect with IR Emitter to send infrared signal, work with far-end IR IN port.
- 9) RS232: RS232 connector.
- 10) 24V DC: Connect with power supply (Not necessary if Receiver connects with power).

**Note:** Pictures shown on this manual are for reference only, different model and specifications are subject to real product.

## 2.2 Receiver

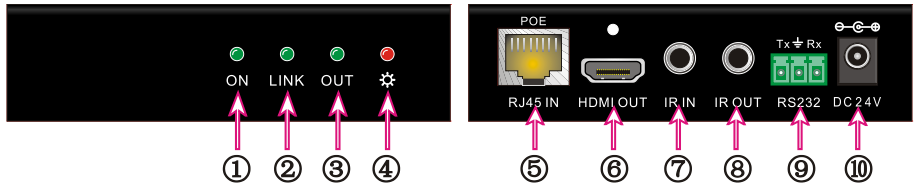

- 1) ON: Working status indicator of this device. When the device works fine, this green LED will keep blinking. And it will get off when the device stops work.
- 2) LINK: Twisted Pair Link status indicator, green LED. It will keep on when connection is successful.
- 3) OUT: When connected with devices support HDCP and work normally this LED will keep on. If devices not support HDCP, this green LED will blink.
- 4) POWER LED: When connect with power, red LED will keep on.
- 5) HDBT IN: Connect to the HDBT OUT port of Transmitter with a CAT5e cable.
- 6) HDMI IN: Connect to HDMI display device.
- 7) IR IN: Connect with IR Receiver to collect infrared signal, work with far-end IR OUT port.
- 8) IR OUT: Connect with IR Emitter to send infrared signal, work with far-end IR IN port.
- 9) RS232: RS232 connector.
- 10) 24V DC: Connect with power supply (Not necessary if Transmitter connects with power).


**Note:** Pictures shown on this manual are for reference only, different model and specifications are subject to real product.

## 3. System Connection

### 3.1 Usage Precautions

- 1) System should be installed in a clean environment and has a prop temperature and humidity.
- 2) All of the power switches, plugs, sockets and power cords should be insulated and safety.
- 3) All devices should be connected before power on.

### 3.2 System Diagram

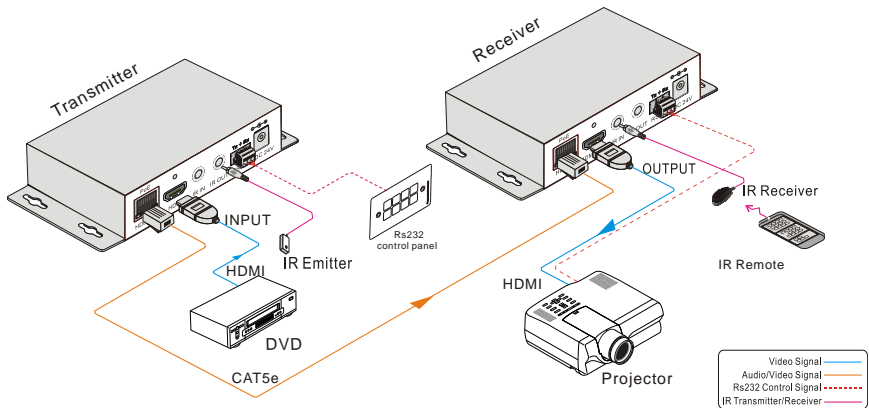

### 3.3 Connection Procedure

- Step1.** Connect HDMI source (such as Blue-ray DVD) to HDMI IN port of transmitter with HDMI cable.
- Step2.** Connect HDBT OUT port of Transmitter and HDBT IN port of Receiver, with single CAT5e/CAT6 cable.
- Step3.** Connect HDMI display (such as HDTV) to HDMI OUT port of Receiver with HDMI cable.
- Step4.** Both Transmitter and Receiver have IR IN and OUT. When one end is used as an IR receiver, the signal sent from the end can only be transmitted via the other end.  
**For example:** When "IR IN" of Transmitter connects with an IR receiver, the IR transmitter must connect to IR OUT of Receiver.
- Step5.** Connect the RS232 port of the devices to be controlled and the receiver or the transmitter.
- Step6.** Connect with DC24V power adaptor(s) (One is enough if any end of Transmitter and Receiver is connected with adapter as its PoE function).




### 3.4 Application

The Extender has a good application in various occasions, such as computer realm, monitoring, big screen displaying, meeting room, education and bank & securities institution etc.

### 3.5 Twisted Pair Cable Connection

The twisted pair used in this extender **MUST** be a straight-through cable.

TIA/EIA T568A		TIA/EIA T568B	
Pin	Cable color	Pin	Cable color
1	green white	1	orange white
2	green	2	orange
3	orange white	3	green white
4	blue	4	blue
5	blue white	5	blue white
6	orange	6	green
7	brown white	7	brown white
8	brown	8	brown
1st Ground	4--5	1st Ground	4--5
2nd Ground	3--6	2nd Ground	1--2
3rd Group	1--2	3rd Group	3--6
4th Group	7--8	4th Group	7--8

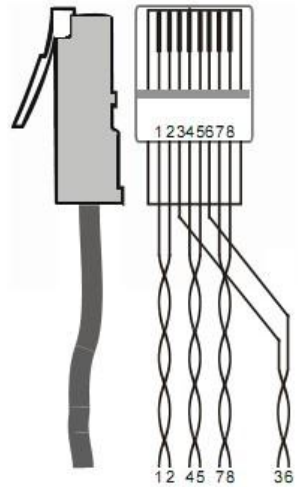

**Notice:** Cable connectors **MUST** be metal one, the shielded layer of cable **MUST** be connected to the connector's metal shell, to make a better transmission.

## 4. Specification

Spec \ Model	Transmitter	Receiver
<b>Input</b>		
Input Signal	1 HDMI, 1 IR & 1 RS232	1 IR, 1 RJ-45 & 1 RS232
Input Connector	HDMI female, 3.5mm mini jack, 3p captive screw connector	3.5mm mini jack, RJ-45, 3p captive screw connector
Video Signal	HDMI1.4	HDMI1.4
Audio	Digital audio, transmit through HDMI audio	Digital audio, transmit through HDMI audio
<b>Output</b>		
Output	1 RJ-45, 1 IR, 1 RS232	1 HDMI, 1 IR, 1RS232
Output Connector	RJ-45, 3.5mm mini jack, 3p captive screw connector	HDMI female, 3.5mm mini jack, 3p captive screw connector
Video signal	HDMI1.4	HDMI1.4
Transmission Mode	HDBaseT	
<b>General</b>		
Resolution Range	800x600 ~ 1920x1200, 3D, 4Kx2K	
Transmission Distance	Max distance 70M	
Gain	0dB ~ 10dB@100MHz	
Differential Phase Error	±10° @ 135MHz_100M	
SNR	>70dB@ 100MHz-100M	
Bandwidth	10.2Gbps	
Return Lost	< -30dB@5KHz	
THD	<0.005%@1KHz	
HDMI Standard	Support HDMI1.4 and HDCP	
Min. ~Max. Level	<0.3V ~ 1.45Vp-p	
Impedance	75Ω	
Temperature	-20 ~ +70°C	
Humidity	10% ~ 90%	
Power Supply	Input: 100VAC~240VAC, 50/60Hz Output: DC 24V, 1.25A	
Power Consumption	9.6W	
Case Dimension	W110.16xH28x D77 (mm)	W113.03xH28x D77 (mm)
Net Weight	0.5Kg	0.5Kg

**NOTE:** All nominal levels are at ±10%.

## 5. Troubleshooting & Maintenance

- 1) When images of terminal unit output with ghost, such as the projector output with ghost. Generally this is not a unit faulty, this may be caused by an incorrect setting on the projector or a bad quality of cable. Please check the projector's setting or try another high quality connection cable.
- 2) When there is a color losing or no video signal output, please check the input and output end connections of the cables.
- 3) When user cannot control the extender by computer through its COM port, please check the COM port number in the software and make sure the COM port is in good condition.
- 4) When switching, there is no output image:
  - Check with oscilloscope or multimeter if there is any signal at the input end. If there is no signal input, it may be the input connection cord broken or the connectors loosen.
  - Check with oscilloscope or multimeter if there is any signal at the output end. If there is no signal output, it may be the output connection cord broken or the connectors loosen.
  - If it is still the same after the above checking, maybe there is something wrong in the extender. Please send it to the dealer for fixing.
- 5) If the static becomes stronger when connecting the video connectors, it probably due to bad grounding, please check the grounding and make sure it connected well, otherwise it would damage the extender

**S-Impuls Handels GmbH**  
**Am Mühlberg 8**  
**91477 Markt Bibart**  
**Germany**  
**Tel:** 09162-98-96-0  
**Fax:** 09162-98-96-21  
**Email:** [info@s-impuls.de](mailto:info@s-impuls.de)  
**Website:** [www.s-impuls.de](http://www.s-impuls.de)