



Stage TRI LED Bundle Complete

LED Lighting Set

Thomann GmbH  
Hans-Thomann-Straße 1  
96138 Burgebrach  
Germany  
Telephone: +49 (0) 9546 9223-0  
Internet: [www.thomann.de](http://www.thomann.de)

18.07.2022, ID: 238663 (V7)

# Table of contents

<b>1</b>	<b>General information.....</b>	<b>6</b>
1.1	Further information.....	7
1.2	Notational conventions.....	7
1.3	Symbols and signal words.....	8
<b>2</b>	<b>Safety instructions.....</b>	<b>11</b>
<b>3</b>	<b>Features.....</b>	<b>15</b>
<b>4</b>	<b>Installation.....</b>	<b>16</b>
<b>5</b>	<b>Setup.....</b>	<b>21</b>
<b>6</b>	<b>Connections and operating elements.....</b>	<b>23</b>
<b>7</b>	<b>Operating.....</b>	<b>28</b>
7.1	Starting up the device.....	28
7.2	Main menu.....	28
7.3	Menu overview.....	35
7.4	Functions in 2-channel DMX mode (d.-P5).....	38
7.5	Functions in 3-channel DMX mode (d.-P1).....	40
7.6	Functions in 4-channel DMX mode (d.-P2).....	40
7.7	Functions in 7-channel DMX mode (d.-P7).....	41
7.8	Functions in 8-channel DMX mode (d.-P3) .....	43
7.9	Functions in 14-channel DMX mode (d.-P4).....	44

7.10	Functions in 15-channel DMX mode (d.-P6).....	45
7.11	Functions of foot switch.....	47
7.12	Remote control functions.....	47
7.13	Reset to factory defaults.....	49
<b>8</b>	<b>Technical specifications.....</b>	<b>50</b>
<b>9</b>	<b>Plug and connection assignment.....</b>	<b>52</b>
<b>10</b>	<b>Cleaning.....</b>	<b>53</b>
<b>11</b>	<b>Protecting the environment.....</b>	<b>54</b>



# 1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under [www.thomann.de](http://www.thomann.de).

## 1.1 Further information

On our website ([www.thomann.de](http://www.thomann.de)) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

## 1.2 Notational conventions

This manual uses the following notational conventions:

### Letterings

The letterings for connectors and controls are marked by square brackets and italics.

**Examples:** *[VOLUME]* control, *[Mono]* button.

### Displays

Texts and values displayed on the device are marked by quotation marks and italics.

**Examples:** *'24ch'*, *'OFF'*.

### Cross-references




References to other locations in this manual are identified by an arrow and the specified page number. In the electronic version of the manual, you can click the cross-reference to jump to the specified location.



Example: See ↗ *'Cross-references'* on page 8.

## 1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.



Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>WARNING!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in death or serious injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – high-voltage.
	Warning – hot surface.
	Warning – dangerous optical radiation.

Warning signs	Type of danger
	Warning – suspended load.
	Warning – danger zone.

## 2 Safety instructions

### Intended use

This device is intended for use as an electronic lighting effect by means of LED technology. The device is designed for professional use only and is not suitable for use in households. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



*Extend the operating life of the device by regular breaks and by avoiding frequent switching on and off. The device is not suitable for continuous operation.*

### Safety



#### **DANGER!**

#### **Danger for children**

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke! Never let children unattended use electrical devices.

**DANGER!****Electric shock caused by high voltages inside**

Within the device there are areas where high voltages may be present. Never remove any covers. There are no user-serviceable parts inside. Do not use the device if covers, protectors or optical components are missing or damaged.

**DANGER!****Electric shock caused by short-circuit**

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.

**WARNING!****Eye damage caused by high light intensity**

Never look directly into the light source.

**WARNING!****Risk of epileptic shock**

Strobe lighting can trigger seizures in photosensitive epilepsy. Sensitive persons should avoid looking at strobe lights.

**WARNING!****Risk of burns**

The surface of the device can become very hot during operation. Do not touch the device with bare hands during operation, and after switching off wait for at least 15 minutes.

**NOTICE!****Risk of fire**

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



**NOTICE!**

**Power supply**

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user. Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.



**NOTICE!**

**Operating conditions**

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations. Only operate the device within the ambient conditions specified in the chapter 'Technical specifications' of this user manual. Avoid heavy temperature fluctuations and do not switch the device on immediately after it was exposed to temperature fluctuations (for example after transport at low outside temperatures). Dust and dirt inside can damage the unit. When operated in harmful ambient conditions (dust, smoke, nicotine, fog, etc.), the unit should be maintained by qualified service personnel at regular intervals to prevent overheating and other malfunction.



**NOTICE!**

**Possible damage due to installation of a wrong fuse**

The use of different types of fuses can cause serious damage to the unit. Fire hazard! Only fuses of the same type may be used.



**NOTICE!**

**Risk of short-circuits**

Short-circuits may cause irreparable damages of the device. They can occur when you remove or change cables of the spots during operation. Disconnect the device from the power supply before you change the cabling.



**NOTICE!**

**Damages due to disconnection during operation**

Only operate the unit when all spotlights are connected. The disconnection of LED spotlights during operation may damage the unit. Disconnect the unit from the power supply before disconnecting LED spotlights.



### **NOTICE!**

#### **Fire hazard due to exceedance of the maximum current**

The device can power other devices of identical construction. The current consumption of all other devices connected in series must not exceed the values indicated in the technical specifications. Otherwise you risk injuries and irreparable damages to the device. Only connect so many identical devices that the maximum current consumption is not exceeded. Ensure the sufficient dimensioning (wire cross section) of the power cables used for all devices connected in series.



### **NOTICE!**

#### **Possible staining**

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your surface and after some time cause permanent dark stains. In case of doubt, do not put the rubber feet directly on the surface and use a suitable underlay if necessary, i.e. felt pads or similar.



### **NOTICE!**

#### **Risk of fire due to incorrect polarity**

Incorrectly inserted batteries may destroy the device or the batteries. Ensure that proper polarity is observed when inserting batteries.



### **NOTICE!**

#### **Possible damage by leaking batteries**

Leaking batteries can cause permanent damage to the device. Take batteries out of the device if it is not going to be used for a longer period.

### 3 Features

The LED lighting set is particularly suitable for professional lighting tasks, for example at events, on rock stages, in theatres and musicals. It's characterized by low power consumption and long service life.

Special features of the device:

- 4 LED spots each with 7 tricolour LEDs
- Control via DMX (7 different modes), via buttons and display on the unit, foot switch as well as infrared remote control (item no. 354223, optionally available)
- 14 preprogrammed automatic shows
- Sound control
- Master / slave mode
- The scope of delivery also includes a T-bar stand, a foot controller unit and a carrying bag

For technological reasons, the light output of LEDs decreases over their lifetime. This effect increases with higher operating temperature. You can extend the service life of the illuminants by providing adequate ventilation and operating the LEDs with the lowest possible brightness.

# 4 Installation

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.



### **WARNING!**

#### **Risk of injury caused by falling objects**

Make sure that the installation complies with the standards and rules that apply in your country. Always secure the device with a secondary safety attachment, such as a safety cable or a safety chain.



### **NOTICE!**

#### **Damages due to disconnection during operation**

Only operate the unit when all spotlights are connected.

The disconnection of LED spotlights during operation may damage the unit. Disconnect the unit from the power supply before disconnecting LED spotlights.



**NOTICE!****Risk of overheating**

The distance between light output and the illuminated surface must be more than 1.5 m (19.7in).

Provide sufficient ventilation.

The ambient temperature must always be below 40 °C (104 °F).

**NOTICE!****Use of stands**

When mounting the device onto a stand, ensure that the stand is in a safe and stable position and that the weight of the device does not exceed the maximum permissible load capacity of the stand.


**NOTICE!****Possible data transmission errors**

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

## Pre-mounted spots


The four spots (1 ... 4, left to right) are pre-mounted on the T-bar. Only the tripod is still to be attached and the foot switch unit has to be connected.

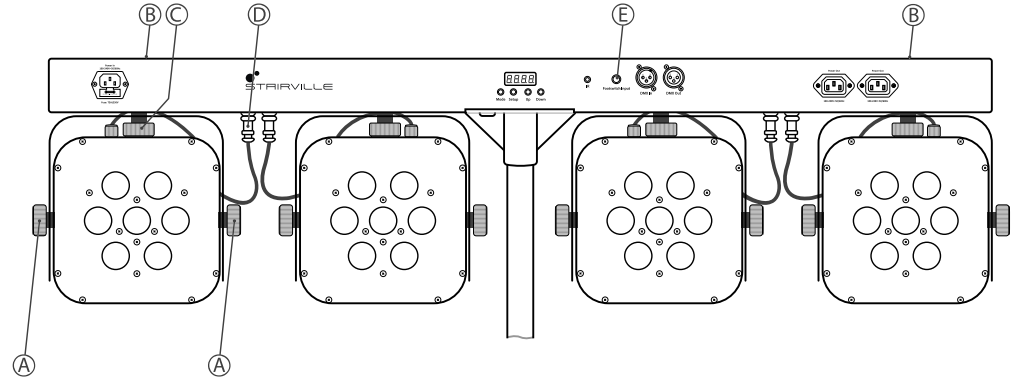

A	Locking screws to fix the height and inclination angle.
B	Threads for attaching additional effects units or for hanging the using C-hooks.
C	Locking screw for fixing the spots on the T-bar and the horizontal orientation (dispersion direction).

D	Electrical connection of the spot at the T-bar (pre-mounted).
E	1/4" phone socket to connect the foot controller unit The cable with the jack plug is pre-installed on the foot switch unit.

### Inserting the battery into the remote control

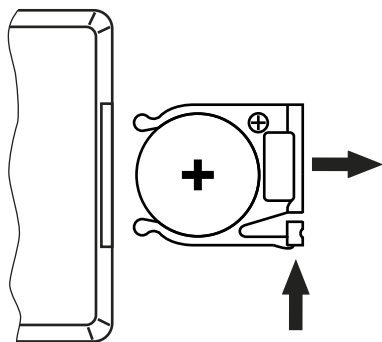

Press the lock of the battery holder to the centre of the housing and pull out the battery holder like a drawer. Insert the battery. The battery is correct if the positive pole points to the housing base of the remote control. Slide the battery holder back into the remote until it clicks into place.

When shipping, the battery is already installed in the remote and protected against discharge by a transparent plastic foil. Remove the plastic foil prior to first use.



#### **NOTICE!**

##### **Risk of fire due to incorrect polarity**

Incorrectly inserted batteries may destroy the device or the batteries.

Ensure that proper polarity is observed when inserting batteries.



#### **NOTICE!**

##### **Possible damage by leaking batteries**

Leaking batteries can cause permanent damage to the device.

Take batteries out of the device if it is not going to be used for a longer period.




*Please note that this device must not be connected to a dimmer.*

## 5 Setup

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.

### Connections in DMX mode

Connect the DMX input of the device to the DMX output of a DMX controller or another DMX device. Connect the output of the first DMX device to the input of the second one, and so on to form a daisy chain. Always ensure that the output of the last DMX device in the daisy chain is terminated with a resistor ( $110\ \Omega$ ,  $\frac{1}{4}\text{ W}$ ).

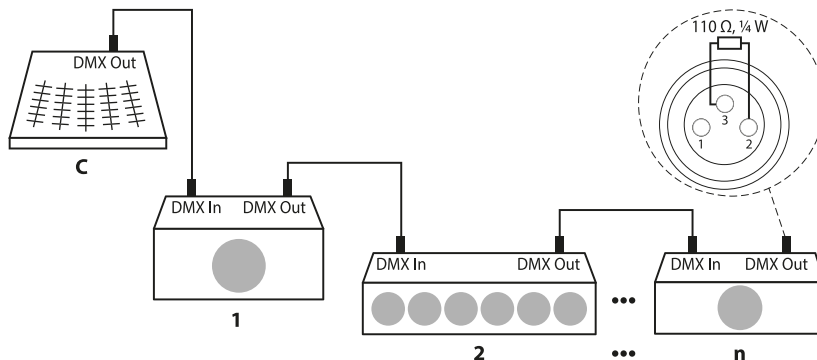


### **Connections in master/slave mode**

When you configure a group of devices in master/slave mode, the first unit will control the other units for an automatic, sound-activated, synchronized show. This function is ideal when you want to start a show immediately. Connect the DMX output of the master device to the DMX input of the first slave device. Then connect the DMX output of the first slave device to the DMX input of the second slave device and so on.


## 6 Connections and operating elements

### Front panel

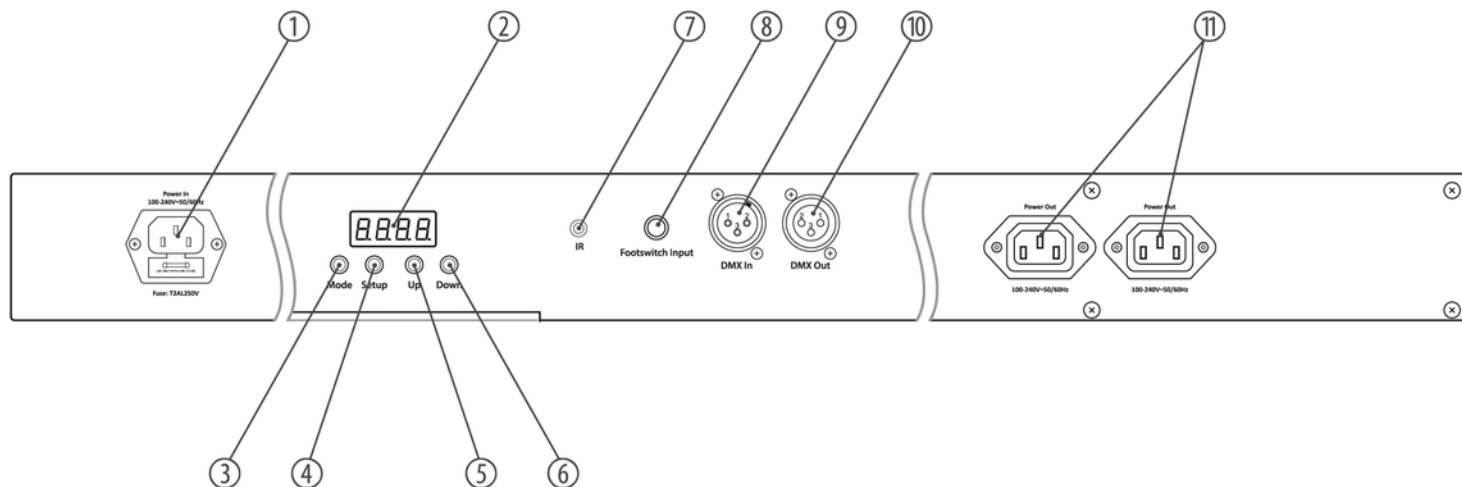

1	IEC chassis plug for power supply with fuse holder
2	Display
3	[Mode]   Activates the main menu and toggles between menu items. Closes an opened submenu.
4	[Setup]   Selects an option of the respective operating mode, confirms the set value.
5	[UP]   Increases the displayed value by one.
6	[DOWN]   Decreases the displayed value by one.
7	[IR]   Infrared sensor for the remote control signals. Make sure that the IR sensor is not obstructed.
8	[Footswitch Input]   1/4" jack socket to connect the foot switch unit
9	[DMX In]   DMX input
10	[DMX Out]   DMX output
11	[Power Out]   IEC chassis socket for the power supply cable to the next unit of the same type.

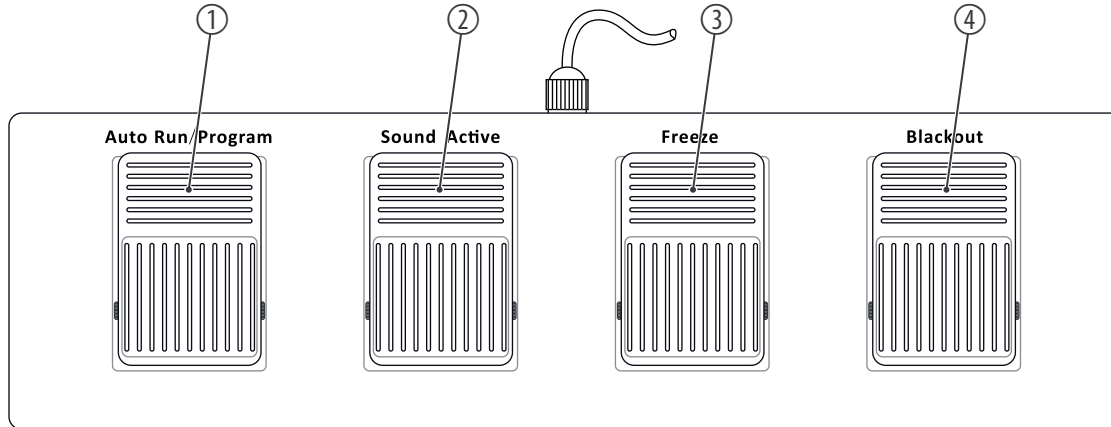


**Foot switch unit  
(Item no. 279058)**

- |   |  |
|---|--|
| 1 | <i>[Auto Run/Program]</i>   Activates the 'Automatic' mode (playback of preprogrammed automatic shows).    |
| 2 | <i>[Sound Active]</i>   Activates the 'Sound-control' mode (playback of sound-controlled automatic shows). |
| 3 | <i>[Freeze]</i>   Pauses the running show and resumes it after a break.                                    |
| 4 | <i>[Blackout]</i>   Blackouts all LEDs or turns them back on again.  |

### Infrared remote control (item no. 354223, optionally available)



*Since the universal remote control can be used for several device types, some buttons may not be assigned and therefore have no function.*

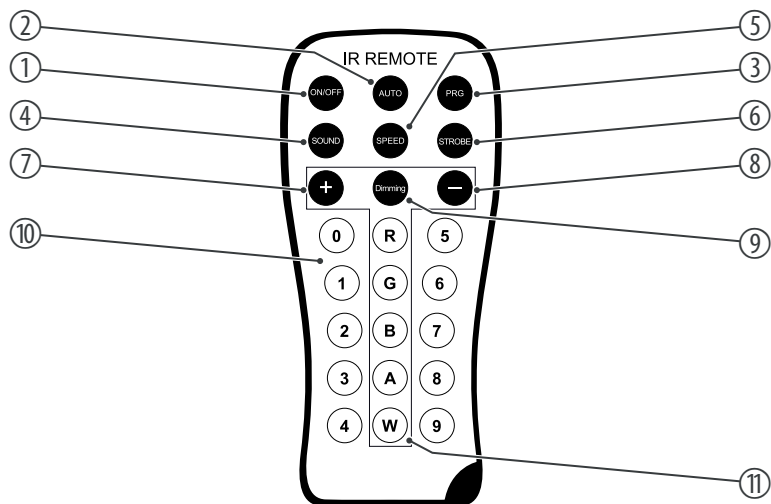

1	[ON/OFF]   turns the device on and off.
2	[AUTO]   activates the 'Automatic' mode.
3	[PRG]   activates the operating mode 'Preprogrammed automatic show'. Select the desired programme with [+] and [-].
4	[SOUND]   activates the 'Sound-control' mode. Set the sensitivity of the built-in microphone with [+] and [-].
5	[SPEED]   activates the setting mode for the programme speed. Adjust the speed using [+] and [-].
6	[STROBE]   activates the setting mode for the Strobe speed. Adjust the speed using [+] and [-].
7	[+]   increases the set value.
8	[-]   decreases the set value.
9	[Dimming]   activates the dimming function for fixed colours. Set the value for each fixed colour using [+] and [-].
10	[0 ... 9]   numeric buttons for direct selection of a fixed colour.
11	[R], [G], [B], [A], [W]   buttons to select the colour shade in dimmer mode.

## 7 Operating

### 7.1 Starting up the device

Connect the unit to the power grid to start the operation. After a few seconds the display shows a running reset. Then the unit is ready for use.

### 7.2 Main menu

Press *[Mode]* to activate the main menu and select an operating mode. Use *[Setup]* to select further options. Use *[Up]* and *[Down]* to change the respectively shown value. When the display shows the desired value, press *[Mode]*.

If you don't press any button for about 30 seconds, the display turns off. Press any key to reactivate the display showing the last menu.

The set values are retained even if you disconnect the device from the mains.

## Operating mode 'Built-in automatic show'

A built-in automatic show can only be activated if the unit is working in stand-alone mode or as master device in a master / slave combination. This setting is only relevant if the unit is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'Pr.xx'. Now you can select one of the preprogrammed automatic shows. Use *[Up]* and *[Down]* to select a value between 'Pr.01' and 'Pr.14'. The following table shows the programmes that are available.

Programme	Description
Pr.01	Static colours
Pr.02	Colour fading 1
Pr.03	Colour fading 2
Pr.04	Fade in / fade out
Pr.05	Colour change 1
Pr.06	Chase 1
Pr.07	Chase 2
Pr.08	Chase 3
Pr.09	Chase 4
Pr.10	Chase 5
Pr.11	Chase 6

Programme	Description
Pr.12	Colour change 2
Pr.13	Chase 7
Pr.14	Chase 8

### Settings for programme 01:

For 'Pr.01', you can choose from 7 colours or blackout. Press *[Setup]*. Now use *[Up]* and *[Down]* to select one of the colours.

Press *[Setup]* to set the strobe frequency. Now use *[Up]* and *[Down]* to select a value between 'FS00' (slow) and 'FS99' (fast).

### Settings for programmes 02 to 12:

To set the speed of the selected automatic show, repeatedly press *[Setup]* until the display shows 'SPxx'. Now use *[Up]* and *[Down]* to select a value between 'SP01' (slow) and 'SP99' (fast) or 'SPFL' (Flash effect).

To set the fade speed of the selected automatic show, repeatedly press *[Setup]* until the display shows 'Fdxx'. Now use *[Up]* and *[Down]* to select a value between 'Fd00' and 'Fd99'.

To set the strobe frequency, repeatedly press *[Setup]* until the display shows 'FSxx'. Now use *[Up]* and *[Down]* to select a value between 'FS00' (slow) and 'FS99' (fast).

### Settings for programmes 13 and 14:

In addition to the adjustment options for programmes 02 to 12 you can set the running colour and the background colour here.

To set the background colour, repeatedly press *[Setup]* until the display shows '1.xxx'. Now use *[Up]* and *[Down]* to select a background colour.

To set the running colour, repeatedly press *[Setup]* until the display shows '2.xxx'. Now use *[Up]* and *[Down]* to select a running colour.

### Operating mode 'Automatic'

Automatic operation can only be activated if the unit is working in stand-alone mode or as master device in a master / slave combination. This setting is only relevant if the unit is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'AUTO'. Press *[Setup]*. Now you can select the number of loops for the programmes to run. Use *[Up]* and *[Down]* to select a value between 'n.001' and 'n.100'.

Press *[Setup]* to adjust the speed. Use *[Up]* and *[Down]* to select a value between 'SP01' (slow) and 'SP99' (fast) or 'SPFL' (flash effect).

To adjust the fade speed, repeatedly press *[Setup]* until the display shows 'Fdxx'. Now use *[Up]* and *[Down]* to select a value between 'Fd00' and 'Fd99'.

To set the strobe frequency, repeatedly press *[Setup]*. Now use *[Up]* and *[Down]* to select a value between 'FS00' (slow) and 'FS99' (fast).

In the automatic operating mode, the built-in programmes run one after another. To start the automatic sequence from a specific programme, repeatedly press *[AUTO]*. However, it is not possible to set a certain programme permanently as start programme.

### DMX mode

This setting is only relevant if the unit is controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'd.xxx'.

Now you can set the number of the first DMX channel to be used by the device (DMX address). Use *[Up]* and *[Down]* to select a value between 1 and 512 (the display shows 'd.001' ... 'd.512').

Make sure that this number matches the configuration of your DMX controller. The following table shows the highest possible DMX address for the different DMX modes.

Mode	Highest possible DMX address
2-channel	511
3-channel	510
4-channel	509
7-channel	506
8-channel	505
14-channel	499
15-channel	498

Press *[Setup]*. Use *[Up]* and *[Down]* to select one of the following DMX operating modes:

- 'd.-P1' (3 channels)
- 'd.-P2' (4 channels)
- 'd.-P3' (8 channels)



- 'd.-P4' (14 channels)
- 'd.-P5' (2 channels)
- 'd.-P6' (15 channels)
- 'd.-P7' (7 channels)

### Operating mode 'Slave'

This setting is only relevant if the unit is operated as slave device in a master / slave configuration and is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'SLAv'.

### Sound-control

A sound-controlled automatic show can only be activated if the unit is working in stand-alone mode or as master device in a master / slave combination. This setting is only relevant if the unit is not controlled via DMX.

Press *[Mode]* repeatedly until the display shows 'SU.xx'. This will activate a sound-controlled automatic show.

Press *[Setup]*. Now you can adjust the sound-control sensitivity. Use *[Up]* and *[Down]* to select a value between 0 (low sensitivity) and 31 (high sensitivity), the display shows 'SU.00' ... 'SU.31'.

### Constant unicoloured pattern


A constant unicoloured pattern can only be activated if the unit is working in stand-alone mode or as master device in a master / slave combination. This setting is only relevant if the unit is not controlled via DMX.


Press *[Mode]* repeatedly until the display shows 'Colr'. Press *[Setup]*.


Use *[Up]* and *[Down]* to choose from the following options:

Display	Description
'r.000' ... 'r.255'	Red
'G.000' ... 'G.255'	Green
'b.000' ... 'b.255'	Blue

### 7.3 Menu overview

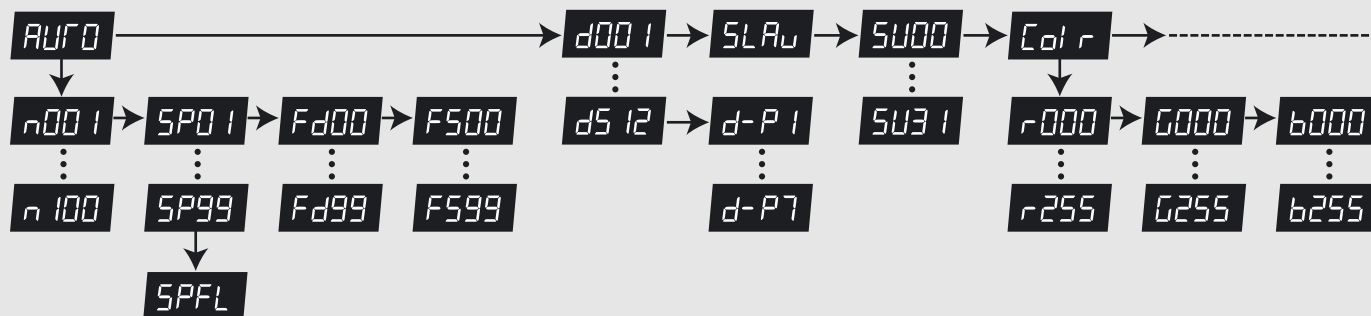

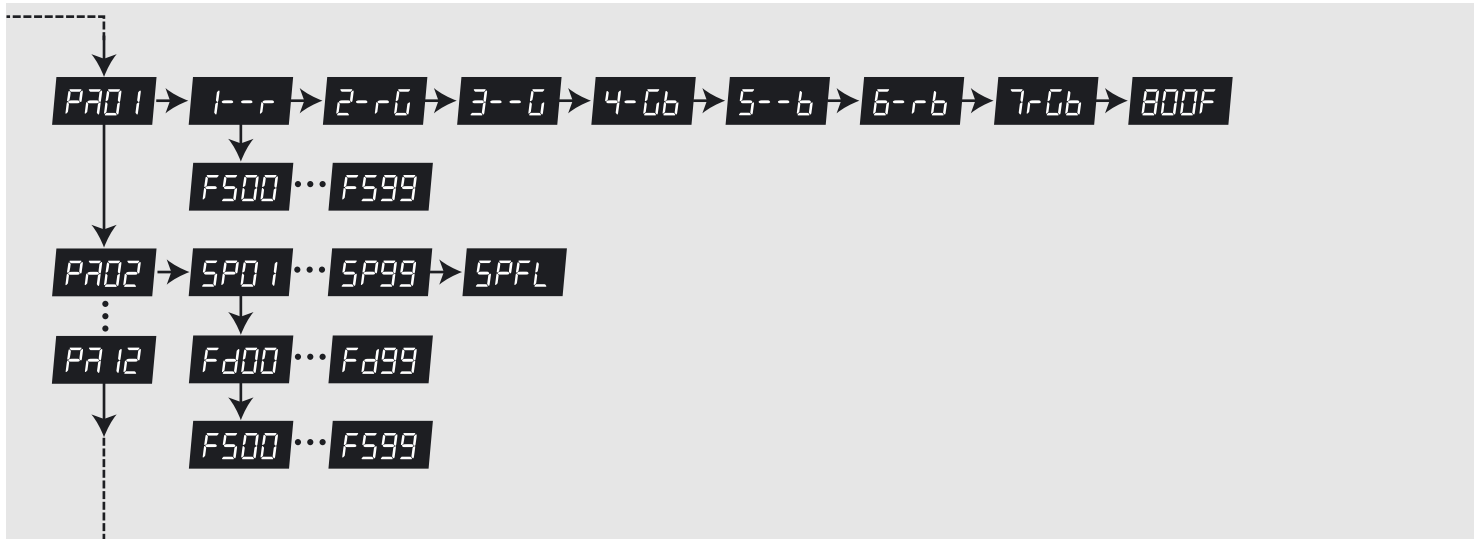

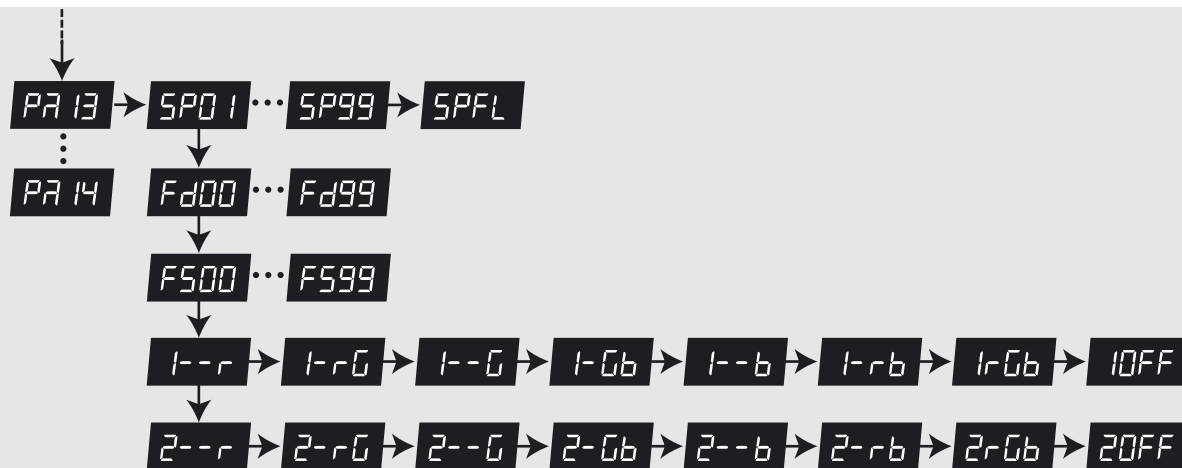

## 7.4 Functions in 2-channel DMX mode (d.-P5)

Channel	Value	Function
1	0...9	LEDs off
	10...19	Constant unicoloured pattern in red for all LEDs
	20...29	Constant unicoloured pattern in yellow for all LEDs
	30...39	Constant unicoloured pattern in green for all LEDs
	40...49	Constant unicoloured pattern in cyan for all LEDs
	50...59	Constant unicoloured pattern in blue for all LEDs
	60...69	Constant unicoloured pattern in purple for all LEDs
	70...79	Constant unicoloured pattern in white for all LEDs
	80...89	Preprogrammed automatic show no. 1
	90...99	Preprogrammed automatic show no. 2
		:
	180...189	Preprogrammed automatic show no. 11
	190...199	LEDs off
	200...209	Constant unicoloured pattern in red for all LEDs

Channel	Value	Function
	210...219	Preprogrammed automatic show no. 12
	220...229	Preprogrammed automatic show no. 13
	230...239	Preprogrammed automatic show no. 14
	240...255	Sound-controlled show
2	Function depends on channel 1 setting	
	Channel 1 = 0...79	
	No function	
	Channel 1 = 80...239	
	0...255	Increasing speed
	Channel 1 = 240...225	
	0...255	Increasing sensitivity

## 7.5 Functions in 3-channel DMX mode (d.-P1)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs
2	0...255	Intensity green (0 % to 100 %) for all LEDs
3	0...255	Intensity blue (0 % to 100 %) for all LEDs

## 7.6 Functions in 4-channel DMX mode (d.-P2)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs
2	0...255	Intensity green (0 % to 100 %) for all LEDs
3	0...255	Intensity blue (0 % to 100 %) for all LEDs
4	0...255	Dimmer (0 % to 100 %)



## 7.7 Functions in 7-channel DMX mode (d.-P7)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs
2	0...255	Intensity green (0 % to 100 %) for all LEDs
3	0...255	Intensity blue (0 % to 100 %) for all LEDs
4	0...9	LEDs off
	10...19	Constant unicoloured pattern in red for all LEDs
	20...29	Constant unicoloured pattern in yellow for all LEDs
	30...39	Constant unicoloured pattern in green for all LEDs
	40...49	Constant unicoloured pattern in cyan for all LEDs
	50...59	Constant unicoloured pattern in blue for all LEDs
	60...69	Constant unicoloured pattern in purple for all LEDs
	70...79	Constant unicoloured pattern in white for all LEDs
	80...89	Preprogrammed automatic show no. 1
	90...99	Preprogrammed automatic show no. 2
		:

Channel	Value	Function
	180...189	Preprogrammed automatic show no. 11
	190...199	LEDs off
	200...209	Constant unicoloured pattern in red for all LEDs
	210...219	Preprogrammed automatic show no. 12
	220...229	Preprogrammed automatic show no. 13
	230...239	Preprogrammed automatic show no. 14
	240...255	Sound-controlled show
5	Function depends on channel 4 setting	
	Channel 4 = 0...79	
	No function	
	Channel 4 = 80...239	
	0...255	Increasing speed
	Channel 4 = 240...255	
	0...255	Increasing sensitivity
6	Function depends on channel 4 setting	
	Channel 4 = 0...9	

Channel	Value	Function
	No function	
	Channel 4 = 10...255	
	0...255	Strobe effect, increasing speed
7	0...255	Dimmer (0 % to 100 %)

## 7.8 Functions in 8-channel DMX mode (d.-P3)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs of spots 1 and 2
2	0...255	Intensity green (0 % to 100 %) for all LEDs of spots 1 and 2
3	0...255	Intensity blue (0 % to 100 %) for all LEDs of spots 1 and 2
4	0...255	Intensity red (0 % to 100 %) for all LEDs of spots 3 and 4
5	0...255	Intensity green (0 % to 100 %) for all LEDs of spots 3 and 4
6	0...255	Intensity blue (0 % to 100 %) for all LEDs of spots 3 and 4

Channel	Value	Function
7	0...255	Strobe effect, increasing speed
8	0...255	Dimmer (0 % to 100 %)

### 7.9 Functions in 14-channel DMX mode (d.-P4)

Channel	Value	Function
1	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 1
2	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 1
3	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 1
4	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 2
5	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 2
6	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 2
7	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 3
8	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 3
9	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 3

Channel	Value	Function
10	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 4
11	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 4
12	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 4
13	0...255	Strobe effect, increasing speed
14	0...255	Dimmer (0 % to 100 %)

## 7.10 Functions in 15-channel DMX mode (d.-P6)

Channel	Value	Function
1	0...9	RGB mode for channels 2 to 15
	10...249	Preprogrammed automatic shows
	250...255	Sound-controlled show
Functions of channels 2 to 15 depend on the setting of channel 1, 0...9		
2	0...255	Dimmer (0 % to 100 %)
3	0...9	No function

Channel	Value	Function
	10...255	Strobe effect, increasing speed
4	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 1
5	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 1
6	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 1
7	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 2
8	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 2
9	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 2
10	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 3
11	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 3
12	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 3
13	0...255	Intensity red (0 % to 100 %) for all LEDs of spot 4
14	0...255	Intensity green (0 % to 100 %) for all LEDs of spot 4
15	0...255	Intensity blue (0 % to 100 %) for all LEDs of spot 4

## 7.11 Functions of foot switch

<b>Operating mode 'Automatic'</b>	Press the foot switch [ <i>Auto Run</i> ] to start the playback of the preprogrammed automatic shows. Each time you press the switch, the next show will be called up.
<b>Operating mode 'Sound-control'</b>	Press the foot switch [ <i>Sound Active</i> ] to start the playback of the sound-controlled automatic shows. Each time you press the switch, the next show will be called up.
<b>Operating mode 'Freeze'</b>	Press the foot switch [ <i>Freeze</i> ] to freeze or unfreeze the show that is currently running.
<b>Operating mode 'Blackout'</b>	Press the foot switch [ <i>Blackout</i> ] for a blackout (all LEDs off). Press it again to return to normal operation.

## 7.12 Remote control functions

The button functions of the remote control are described in section .

**Direct selection of a static colour** Use the numeric keys of the remote control to select a static colour directly. This setting is only relevant if the device is not controlled via DMX.

Value	Static colour
0	Cyan
1	Purple
2	Pink
3	Orange
4	Cool white
5	Light red
6	Light green
7	Light blue
8	Yellow
9	Warm white
10	Red
11	Green



Value	Static colour
12	Blue
13	Amber

## 7.13 Reset to factory defaults

Proceed as follows to reset the device to factory defaults:

1. ➤ Switch off the device.
2. ➤ Switch the device on again and hold the buttons *[Mode]* and *[Setup]* pressed for about 2 seconds.

## 8 Technical specifications

Light source	28 × 3in1 LED, 3 W each	
Optical properties	Beam angle	approx. 40°
Control	DMX	
	Foot switch	
	IR remote (optional)	
Number of DMX channels		2, 3, 4, 7, 8, 14, 15
Input connections	Voltage supply	IEC chassis plug C14
	DMX control	XLR chassis socket, 3-pin
	Foot switch unit	1/4" phone socket
Output connections	Voltage supply	2 × IEC chassis plug C13
	DMX control	XLR chassis socket, 3-pin
Power consumption		100 W
Operating supply voltage		100 - 240 V ~ 50/60 Hz
Fuse		5 mm × 20 mm, 2 A, 250 V, slow-blow
Battery of the remote control		Lithium-ion button cell CR2025, 3 V

Protection class		IP20
Mounting options		Tripod
Dimensions	T-bar width	1200 mm
	max. Height T-bar plus tripod	2400 mm
Weight		16 kg
Ambient conditions	Temperature range	0 °C...40 °C
	relative humidity	20 %...80 % (non-condensing)

## Further information

Spotlights included	yes
Effect units included	no
LED bars included	no
Controller included	Foot switch
Tripod included	yes
Case / bag included	yes
Remote control	optionally available (item no. 354223)

# 9 Plug and connection assignment

## Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment so that a perfect light experience is guaranteed.

Please take our tips, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into a socket, the result of an incorrect connection may be a destroyed DMX controller, a short circuit or 'just' a not working light show!

## DMX connections



The unit offers a 3-pin XLR socket for DMX output and a 3-pin XLR plug for DMX input. Please refer to the drawing and table below for the pin assignment of a suitable XLR plug.

Pin	Configuration
1	Ground, shielding
2	Signal inverted (DMX-, 'cold signal')
3	Signal (DMX+, 'hot signal')

## 10 Cleaning

### Optical lenses

Clean the optical lenses, that are accessible from the outside, regularly in order to optimize the light output. The frequency of cleaning depends on the operating environment: wet, smoky or particularly dirty surroundings can cause more accumulation of dirt on the optics of the device.

- Clean with a soft cloth using our lamp and lens cleaner (item no. 280122).
- Always dry the parts carefully.

## 11 Protecting the environment

### Disposal of the packaging material



For the packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

### Disposal of batteries



Batteries must not be thrown away or incinerated; they must be disposed of in accordance with local regulations for the disposal of hazardous waste. Use the existing collection points for this.

Only dispose of lithium batteries when they are discharged. Remove replaceable lithium batteries from the device before disposal. Protect used lithium batteries against short circuits, for example by covering the poles with adhesive tape. Permanently built-in lithium batteries must be disposed of together with the device. Please inquire about an appropriate collection point.

### Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.











