



# DDC-6, DDC-12 LCD DMX controller

Musikhaus Thomann  
Thomann GmbH  
Hans-Thomann-Straße 1  
96138 Burgebrach  
Germany  
Telephone: +49 (0) 9546 9223-0  
E-mail: [info@thomann.de](mailto:info@thomann.de)  
Internet: [www.thomann.de](http://www.thomann.de)

07.03.2019, ID: 389945, 389946 (V2)

# Table of contents

<b>1</b>	<b>General information</b> .....	<b>4</b>
	1.1 Further information.....	5
	1.2 Notational conventions.....	6
	1.3 Symbols and signal words.....	6
<b>2</b>	<b>Safety instructions</b> .....	<b>8</b>
<b>3</b>	<b>Features</b> .....	<b>13</b>
<b>4</b>	<b>Starting up</b> .....	<b>14</b>
<b>5</b>	<b>Connections and controls</b> .....	<b>17</b>
<b>6</b>	<b>Technical specifications</b> .....	<b>25</b>
<b>7</b>	<b>Plug and connection assignment</b> .....	<b>27</b>
<b>8</b>	<b>Protecting the environment</b> .....	<b>28</b>

# 1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under [www.thomann.de](http://www.thomann.de).

## 1.1 Further information

On our website ([www.thomann.de](http://www.thomann.de)) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

## 1.2 Notational conventions

This manual uses the following notational conventions:


### Letterings

The letterings for connectors and controls are marked by square brackets and italics.

**Examples:** *[VOLUME]* control, *[Mono]* button.

## 1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
<b>DANGER!</b>	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
<b>NOTICE!</b>	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.
Warning signs	Type of danger
	Warning – danger zone.

## 2 Safety instructions

### **Intended use**

This device is used to control spotlights, dimmers, lighting effects equipment or other DMX-controlled devices. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.



**Safety**



**DANGER!**

**Danger for children**

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard!

Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke!

Never let children unattended use electrical devices.



**NOTICE!**

**Risk of fire**

Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.



### **NOTICE!**

#### **Operating conditions**

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations.

Only operate the device within the ambient conditions specified in the chapter 'Technical specifications' of this user manual. Avoid heavy temperature fluctuations and do not switch the device on immediately after it was exposed to temperature fluctuations (for example after transport at low outside temperatures).

Dust and dirt inside can damage the unit. When operated in harmful ambient conditions (dust, smoke, nicotine, fog, etc.), the unit should be maintained by qualified service personnel at regular intervals to prevent overheating and other malfunction.



**NOTICE!**

**External power supply**

The device is powered by an external power supply. Before connecting the external power supply, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly the user.

Unplug the external power supply before electrical storms occur and when the device is unused for long periods of time to reduce the risk of electric shock or fire.



**NOTICE!**

**Risk of fire due to incorrect polarity**

Incorrectly inserted batteries may destroy the device or the batteries.

Ensure that proper polarity is observed when inserting batteries.



### **NOTICE!**

#### **Possible damage by leaking batteries**

Leaking batteries can cause permanent damage to the device.

Take batteries out of the device if it is not going to be used for a longer period.



### **NOTICE!**

#### **Possible staining**

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your parquet, linoleum, laminate or PVC floor and after some time cause permanent dark stains.

In case of doubt, do not put the rubber feet directly on the floor, but use felt-pad floor protectors or a carpet.

## 3 Features

Special features of this monitor speaker:

- 6 channel faders (DDC-6 item no. 389945)
- 12 channel faders (DDC-12 item no. 389946)
- Master fader
- Display to indicate the settings.
- Compact design
- Simple operation
- Power supply from a 9-V battery (not included in scope of delivery) or from the supplied external 9-V power adapter.

## 4 Starting up

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.

### **Power supply**

You can use either a 9-V battery or the 9-V connector for external power supply. Before connecting check for correct polarity.

### **Changing the battery**

To insert or change the battery, switch off the device first. Take off the battery compartment cover carefully. Change the battery. Replace the battery compartment cover and press it gently until you hear it click into position.



**NOTICE!**


**Possible data transmission errors**

For error-free operation make use of dedicated DMX cables and do not use ordinary microphone cables.

Never connect the DMX input or output to audio devices such as mixers or amplifiers.

### Connections in DMX mode


Connect the DMX input of the device to the DMX output of a DMX controller or another DMX device. Connect the output of the first DMX device to the input of the second one, and so on to form a daisy chain. Always ensure that the output of the last DMX device in the daisy chain is terminated with a resistor ( $110\ \Omega$ ,  $\frac{1}{4}\text{ W}$ ).

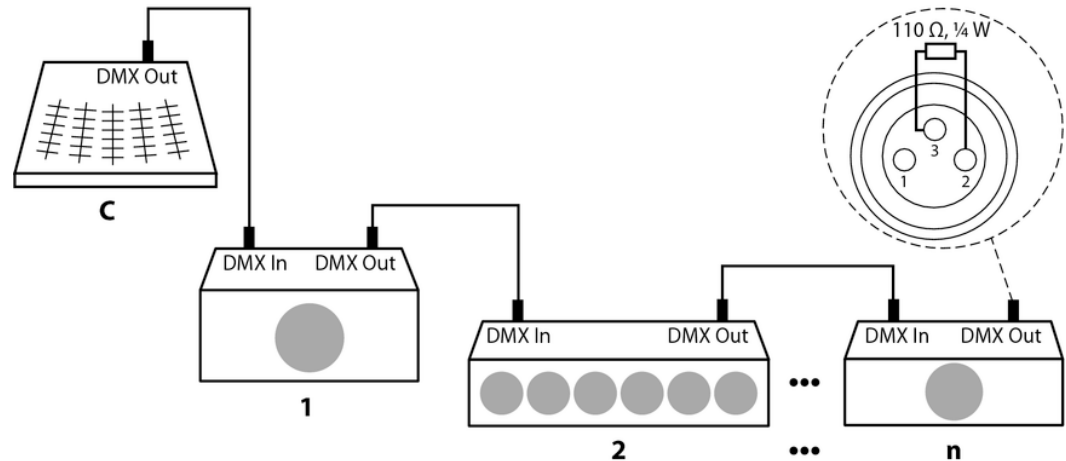




## 5 Connections and controls

### Top view

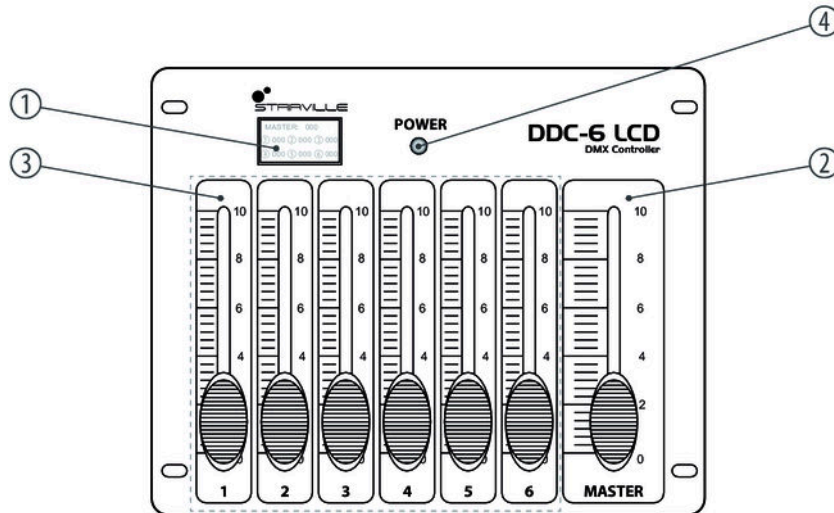

DDC-6, DDC-12 LCD


1	<i>[DISPLAY]</i> DMX channel display and value display of the values set with the faders.
2	<i>[MASTER]</i> Master fader The master fader controls all channels simultaneously.
3	<i>[1] ... [6]</i> Channel faders 1 through 6. The channel faders allow up to six DMX channels to be controlled individually. In the device software, assign each connected DMX devices a channel in accordance with its position in the daisy chain: first device = 1 ... last device = 6.
4	<i>[POWER]</i> Power indicator

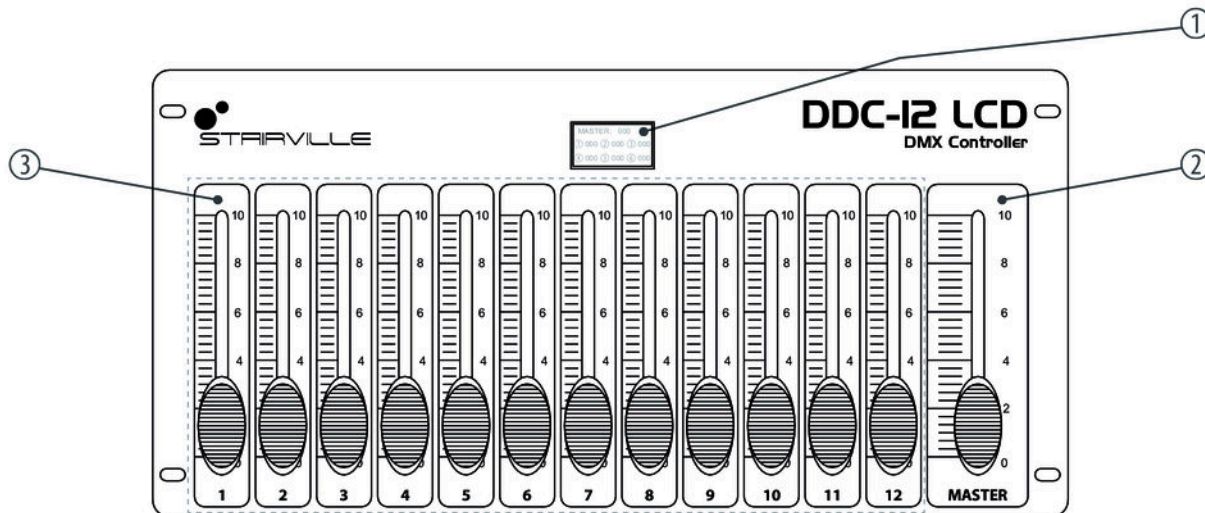

DDC-6, DDC-12 LCD

1	<i>[DISPLAY]</i> DMX channel display and value display of the values set with the faders
2	<i>[MASTER]</i> Master fader The master fader controls all channels simultaneously.
3	<i>[1] ... [6]</i> Channel faders 1 through 12. The channel faders allow up to six DMX channels to be controlled individually. In the device software, assign each connected DMX devices a channel in accordance with its position in the daisy chain: first device = 1 ... last device = 12.


Rear side DDC-6

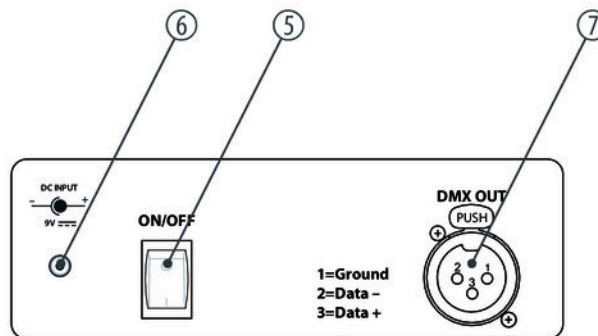

DDC-6, DDC-12 LCD

5	<i>[ON/OFF]</i> Main switch. Turns the device on and off.
6	<i>[DC INPUT]</i> Connection socket for the power adapter
7	<i>[DMX OUT]</i> DMX output

Rear side DDC-12


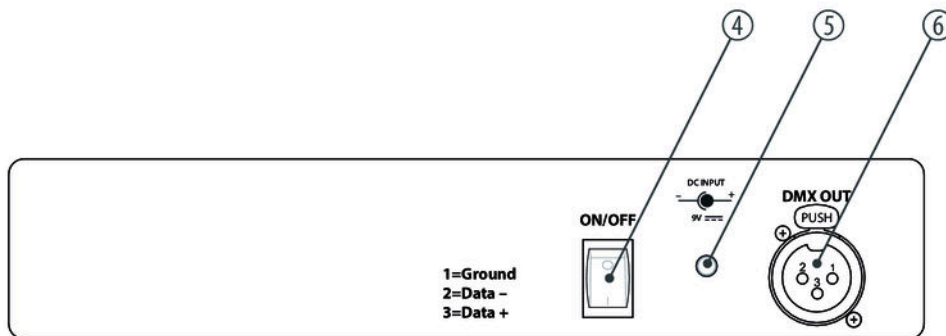


DDC-6, DDC-12 LCD

4	<i>[POWER]</i> Main switch. Turns the device on and off.
5	<i>[DC INPUT]</i> Connection socket for the power adapter
6	<i>[DMX OUT]</i> DMX output



## 6 Technical specifications

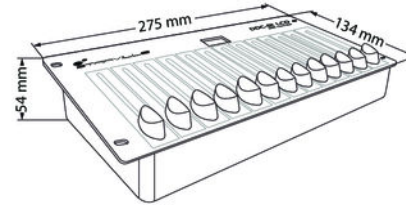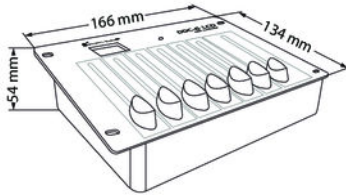

		<b>DDC-6 item no. 389945</b>	<b>DDC-12 item no. 389946</b>
Input connections	Voltage supply	Connection socket for the power adapter	
Output connections	DMX control	XLR chassis socket, 3-pin	
Voltage supply		Plug-in power supply (9 V $\overline{\text{---}}$ / 100mA, centre positive)	
Battery (optional)	Battery type	Block battery 6LR61 or 6LF22, 9 V	
Dimensions (W × H × D)		166 mm × 54 mm × 134 mm	275 mm × 54 mm × 134 mm

DDC-6, DDC-12 LCD

		<b>DDC-6 item no. 389945</b>	<b>DDC-12 item no. 389946</b>
Weight		0.8 kg	1.3 kg
Ambient conditions	Temperature range	0 °C...40 °C	
	Relative humidity	50 %, non-condensing	

### Further information

		<b>DDC-6 item no. 389945</b>	<b>DDC-12 item no. 389946</b>
Preset function		No	No
External storage option		No	No
DMX universes		1	1
Max. number of control channels		6	12
Ethernet		No	No

## 7 Plug and connection assignment

### Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment so that a perfect light experience is guaranteed.

Please take our tips, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into a socket, the result of an incorrect connection may be a destroyed DMX controller, a short circuit or 'just' a not working light show!

### DMX connections

The unit offers a 3-pin XLR socket for DMX output and a 3-pin XLR plug for DMX input. Please refer to the drawing and table below for the pin assignment of a suitable XLR plug.



Pin	Configuration
1	Ground, shielding
2	Signal inverted (DMX-, 'cold signal')
3	Signal (DMX+, 'hot signal')

## 8 Protecting the environment

### Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are fed to a recovery. Please follow the notes and markings on the packaging.

### Disposal of batteries



Batteries must not be disposed of as domestic waste or thrown into fire. Dispose of the batteries according to national or local regulations regarding hazardous waste. To protect the environment, dispose of empty batteries at your retail store or at appropriate collection sites.

### Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.





Musikhaus Thomann · Hans-Thomann-Straße 1 · 96138 Burgebrach · Germany · [www.thomann.de](http://www.thomann.de)