Harley Benton

HB-80B

bass combo

Thomann GmbH

Hans-Thomann-Straße 1

96138 Burgebrach Germany

Telephone: +49 (0) 9546 9223-0

Internet: www.thomann.de

18.08.2022, ID: 417214 (V5)

Table of contents

1	General information	5
	1.1 Further information	. 6
	1.2 Notational conventions	. 6
	1.3 Symbols and signal words	. 7
2	Safety instructions	. 9
3	Features	12
4	Installation and starting up	13
5	Connections and operating elements	14
6	Technical specifications	18
7	Plug and connection assignment	21
8	Protecting the environment	24



1 General information

This user manual contains important information on the safe operation of the device. Read and follow all safety notes and all instructions. Save this manual for future reference. Make sure that it is available to all persons using this device. If you sell the device to another user, be sure that they also receive this manual.

Our products and user manuals are subject to a process of continuous development. We therefore reserve the right to make changes without notice. Please refer to the latest version of the user manual which is ready for download under <u>www.thomann.de</u>.

1.1 Further information

On our website (<u>www.thomann.de</u>) you will find lots of further information and details on the following points:

Download	This manual is also available as PDF file for you to download.
Keyword search	Use the search function in the electronic version to find the topics of interest for you quickly.
Online guides	Our online guides provide detailed information on technical basics and terms.
Personal consultation	For personal consultation please contact our technical hotline.
Service	If you have any problems with the device the customer service will gladly assist you.

1.2 Notational conventions

This manual uses the following notational conventions:

Letterings

The letterings for connectors and controls are marked by square brackets and italics.

Examples: [VOLUME] control, [Mono] button.

1.3 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this manual.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
CAUTION!	This combination of symbol and signal word indicates a possible dangerous situation that can result in minor injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.

Warning signs	Type of danger
A	Warning – high-voltage.
\triangle	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended to be used for amplification and playback of signals from musical instruments with electromagnetic pickups. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Danger for children

Ensure that plastic bags, packaging, etc. are disposed of properly and are not within reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the unit. They could swallow the pieces and choke! Never let children unattended use electrical devices.



DANGER!

Electric shock caused by high voltages inside

Within the device there are areas where high voltages may be present. Never remove any covers. There are no user-serviceable parts inside. Do not use the device if covers, protectors or optical components are missing or damaged.



DANGER!

Electric shock caused by short-circuit

Always use proper ready-made insulated mains cabling (power cord) with a protective contact plug. Do not modify the mains cable or the plug. Failure to do so could result in electric shock/death or fire. If in doubt, seek advice from a registered electrician.



CAUTION!

Possible hearing damage

The device can produce volume levels that may cause temporary or permanent hearing impairment. Over an extended period of time, even levels that seem to be uncritical can cause hearing damage. Decrease the volume level immediately if you experience ringing in your ears or hearing impairment. If this is not possible, keep a greater distance or use sufficient ear protectors.



CAUTION!

Possible hearing damage

Using headphones for a prolonged period and at high volume can cause hearing damage. Avoid using the device at high volume, especially when using headphones.



CAUTION!

Risk of injury due to heavy weight

Due to the heavy weight of the device, at least two persons are required for transport and installation.



NOTICE!

Risk of fire



Do not block areas of ventilation. Do not install the device near any direct heat source. Keep the device away from naked flames.

NOTICE!

Operating conditions

This device has been designed for indoor use only. To prevent damage, never expose the device to any liquid or moisture. Avoid direct sunlight, heavy dirt, and strong vibrations. Only operate the device within the ambient conditions specified in the chapter 'Technical specifications' of this user manual. Avoid heavy temperature fluctuations and do not switch the device on immediately after it was exposed to temperature fluctuations (for example after transport at low outside temperatures). Dust and dirt inside can damage the unit. When operated in harmful ambient conditions (dust, smoke, nicotine, fog, etc.), the unit should be maintained by qualified service personnel at regular intervals to prevent overheating and other malfunction.

NOTICE!

Power supply

Before connecting the device, ensure that the input voltage (AC outlet) matches the voltage rating of the device and that the AC outlet is protected by a residual current circuit breaker. Failure to do so could result in damage to the device and possibly injure the user. Unplug the device before electrical storms occur and when it is unused for long periods of time to reduce the risk of electric shock or fire.

NOTICE!

Possible damage due to installation of a wrong fuse

• The use of different types of fuses can cause serious damage to the unit. Fire hazard! Only fuses of the same type may be used.

NOTICE!

Possible staining

The plasticiser contained in the rubber feet of this product may possibly react with the coating of your surface and after some time cause permanent dark stains. In case of doubt, do not put the rubber feet directly on the surface and use a suitable underlay if necessary, i.e. felt pads or similar.

3 Features

Special features of the device

- Output power
 - 80 watt @ 4 Ω (external speaker)
 - 40 watt @ 8 Ω (internal speaker)
- 1 × 12" Celestion speaker
- Aux input for connecting an MP3 or CD player
- Inputs
 - Instrument
 - Effects loop
 - Foot switch
- Outputs
 - Line
 - External speaker box
 - Balanced DI output
- Built-in compressor
- Standby function

4 Installation and starting up

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.



NOTICE!


Possible property damage by magnetic fields



Loudspeakers produce a static magnetic field. Therefore, maintain an appropriate distance to devices that can be adversely affected or damaged by an external magnetic field.

5 Connections and operating elements

Front panel

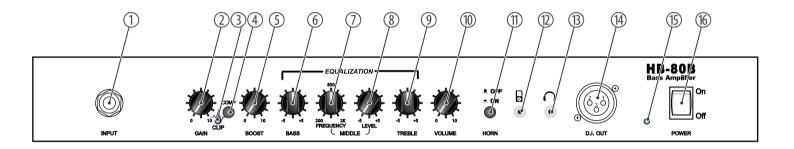


1	[INPUT] 1/4" jack socket to connect an instrument. You can also connect other active signal sources like CD or MP3 players, keyboards, mixers etc. to this input.
2	[GAIN] control to adjust the signals preamp gain
3	[CLIP] indicator LED (blue). This LED lights up once the compressor is active
4	[COMP] toggle switch for enabling the built-in compressor
5	[BOOST] control to boost the bass frequency range
6	[BASS] control to adjust the low frequencies
7	[MIDDLE FREQUENCY] \mid control to boost or lower the mid frequencies from 200 Hz 2 kHz
8	[MIDDLE LEVEL] control to adjust the mid frequencies
9	[TREBLE] control to adjust the high frequencies
10	[VOLUME] control to adjust the volume
11	[HORN] turns the horn speaker on or off
12	3.5 mm input socket for connecting an active signal source, e.g. CD or MP3 player
13	3.5 mm output socket to connect headphones. Connecting headphones automatically mutes the built-in speaker.
14	[D.I. OUT] balanced DI output for connecting a mixing console or recording device

Connections and operating elements

15	Standby indicator If there is no signal at the instruments input [INPUT] for 30 minutes, the device will automatically enter standby mode (LED green). As soon as the device receives a signal again at the instruments input [INPUT], the device automatically switches back to normal mode (LED red).
16	[POWER] main switch to turn the device on and off

Rear panel

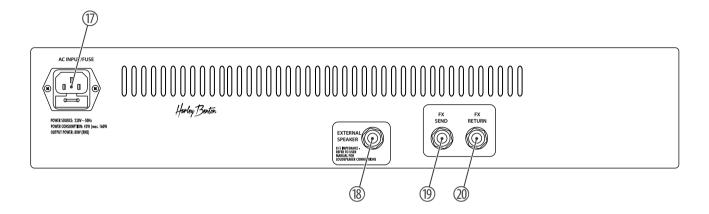

17	IEC chassis plug with fuse holder
18	[EXTERNAL SPEAKER] 1/4" output socket for connecting an external speaker box (recommended impedance: 8 Ω). The internal speaker will not be turned off when this connector is used.
19	[FX SEND] 1/4" output socket for looping in an effects processor
20	[FX RETURN] 1/4" input socket for looping in an effects processor

6 Technical specifications

Speaker	1×12 " Celestion speaker	
Input connections	Power supply	IEC chassis plug C14
	Instruments	1/4" jack socket
	AUX	3.5 mm phone socket
	Effect device	1/4" jack socket
Output connections	Headphones	3.5 mm phone socket
	Mixer or recording device	XLR chassis socket, 3-pin
	external speaker (min. impedance 8 Ω)	1/4" phone socket
	Effect device	1/4" jack socket
Input impedance	220 kΩ	
Operating voltage	max. 1 V (RMS)	
Output power	80 W (RMS) @ 4 Ω (external speaker)	
	40 W (RMS) @ 8 Ω (internal speaker)	
Frequency range	50 Hz8 kHz	
Signal-to-noise ratio	75 dB	

Total harmonic distortion (THD)	0.5 %	
Power consumption	Power consumption max. 100 W	
Supply voltage	230 V ∼ 50 Hz	
Fuse	5 mm \times 20 mm, 1 A, 250 V, slow-blow	
Dimensions (W \times H \times D)	510 mm 510 mm × 354 mm	
Weight	21 kg	
Ambient conditions	Temperature range	0 °C40 °C
	Relative humidity	20 %80 % (non-condensing)

Technical specifications

Further information

HF horn	yes
Equalizer	3-band
Compressor	yes
Limiter	no
Effects device	no
External speaker connector	yes
Headphone connection	yes
DI output	yes
CD/MP3 input	yes

7 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!

Balanced and unbalanced transmission

Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is transmitted through the core.

Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.

In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conductors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.

Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

1/4" TS phone plug (mono, unbalanced)



1	Signal
2	Ground, shielding

1/4" TRS phone plug (mono, balanced)




1	Signal (in phase, +)
2	Signal (out of phase, –)
3	Ground

Three-pole 1/8" mini phone jack (stereo, unbalanced)



1	Signal (left)
2	Signal (right)
3	Ground, shielding

XLR plug (balanced)



1	Ground, shielding
2	Signal (in phase, +)
3	Signal (out of phase, –)
4	Shielding on plug housing (option)

8 Protecting the environment

Disposal of the packaging material



For the transport and protective packaging, environmentally friendly materials have been chosen that can be supplied to normal recycling.

Ensure that plastic bags, packaging, etc. are properly disposed of.

Do not just dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the notes and markings on the packaging.

Disposal of your old device



This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) in its currently valid version. Do not dispose with your normal household waste.

Dispose of this device through an approved waste disposal firm or through your local waste facility. When discarding the device, comply with the rules and regulations that apply in your country. If in doubt, consult your local waste disposal facility.