

User Manual



DSP 4x4 Mini Pro

Controller

Thomann GmbH

Hans-Thomann-Straße 1

96138 Burgebrach

Germany

Telephone: +49 (0) 9546 9223-0

Internet: www.thomann.de

26.06.2024, ID: 555772 (V2)

Table of contents

1	General information.....	5
	1.1 Symbols and signal words.....	5
2	Safety instructions.....	7
3	Features.....	9
4	Installation and starting up.....	10
5	Connections and controls.....	12
6	Operating on a PC.....	13
7	Technical specifications.....	29
8	Plug and connection assignment.....	32
9	Protecting the environment.....	34



1 General information



This document contains important instructions for the safe operation of the product. Read and follow the safety instructions and all other instructions. Keep the document for future reference. Make sure that it is available to all those using the product. If you sell the product to another user, be sure that they also receive this document.

Our products and documentation are subject to a process of continuous development. They are therefore subject to change. Please refer to the latest version of the documentation, which is ready for download under www.thomann.de.

1.1 Symbols and signal words

In this section you will find an overview of the meaning of symbols and signal words that are used in this document.

Signal word	Meaning
DANGER!	This combination of symbol and signal word indicates an immediate dangerous situation that will result in death or serious injury if it is not avoided.
NOTICE!	This combination of symbol and signal word indicates a possible dangerous situation that can result in material and environmental damage if it is not avoided.

Warning signs	Type of danger
 A yellow triangular warning sign with a black border and a black lightning bolt symbol in the center.	Warning – high-voltage.
 A yellow triangular warning sign with a black border and a black exclamation mark in the center.	Warning – danger zone.

2 Safety instructions

Intended use

This device is intended to be used for amplification, mixing and playback of signals from musical instruments and microphones. Use the device only as described in this user manual. Any other use or use under other operating conditions is considered to be improper and may result in personal injury or property damage. No liability will be assumed for damages resulting from improper use.

This device may be used only by persons with sufficient physical, sensorial, and intellectual abilities and having corresponding knowledge and experience. Other persons may use this device only if they are supervised or instructed by a person who is responsible for their safety.

Safety



DANGER!

Risk of injury and choking hazard for children!

Children can suffocate on packaging material and small parts. Children can injure themselves when handling the device. Never allow children to play with the packaging material and the device. Always store packaging material out of the reach of babies and small children. Always dispose of packaging material properly when it is not in use. Never allow children to use the device without supervision. Keep small parts away from children and make sure that the device does not shed any small parts (such knobs) that children could play with.



DANGER!

Danger to life due to electric current!

Within the device there are areas where high voltages may be present. Never remove any covers. There are no user-serviceable parts inside. Do not use the device when covers, safety equipment or optical components are missing or damaged.



NOTICE!

Damage to the external power supply due to high voltages!

The device is powered by an external power supply. The external power supply can be damaged if it is operated with the incorrect voltage or if high voltage peaks occur. In the worst case, excess voltages can also cause a risk of injury and fires. Make sure that the voltage specification on the external power supply matches the local power grid before plugging in the power supply. Only operate the external power supply from professionally installed mains sockets that are protected by a residual current circuit breaker (FI). As a precaution, disconnect the power supply from the power grid when storms are approaching or if the device will not be used for a longer period.



NOTICE!

Risk of fire due to covered vents and neighbouring heat sources!

If the vents of the device are covered or the device is operated in the immediate vicinity of other heat sources, the device can overheat and burst into flames. Never cover the device or the vents. Do not install the device in the immediate vicinity of other heat sources. Never operate the device in the immediate vicinity of naked flames.



NOTICE!

Damage to the device if operated in unsuitable ambient conditions!

The device can be damaged if it is operated in unsuitable ambient conditions. Only operate the device indoors within the ambient conditions specified in the "Technical specifications" chapter of this user manual. Avoid operating it in environments with direct sunlight, heavy dirt and strong vibrations. Avoid operating it in environments with strong temperature fluctuations. If temperature fluctuations cannot be avoided (for example after transport in low outside temperatures), do not switch on the device immediately. Never subject the device to liquids or moisture. Never move the device to another location while it is in operation. In environments with increased dirt levels (for example due to dust, smoke, nicotine or mist): Have the device cleaned by qualified specialists at regular intervals to prevent damage due to overheating and other malfunctions.

3 Features

- Ultra compact 4-channel DSP
- Inputs: 4 × XLR (balanced)
- Outputs: 4 × XLR (balanced)
- USB connection for control via PC using the supplied software
- Comprehensive setting options for optimal sound
 - Parametric equalizer
 - Graphic equalizer
 - High- and low-pass filters
 - Noise gate
 - Limiter
 - Phase inversion


4 Installation and starting up

Unpack and check carefully there is no transportation damage before using the unit. Keep the equipment packaging. To fully protect the product against vibration, dust and moisture during transportation or storage use the original packaging or your own packaging material suitable for transport or storage, respectively.

Create all connections while the device is off. Use the shortest possible high-quality cables for all connections. Take care when running the cables to prevent tripping hazards.


Configuration example

The schematic in the figure shows how the device can be controlled via the USB port of a PC.

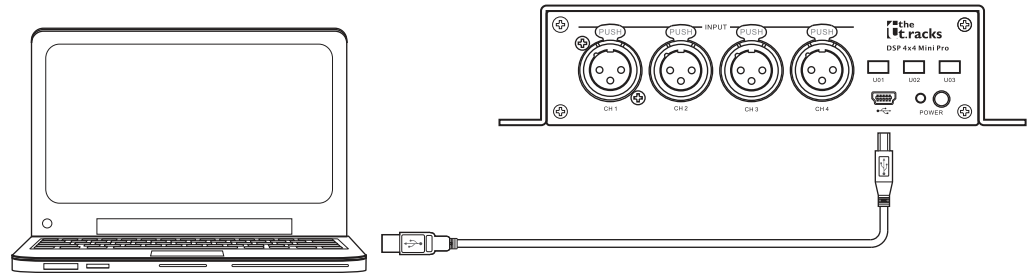

1 RU for rack mounting

The figure shows two different ways to attach the left and right rack angles for rack mounting.

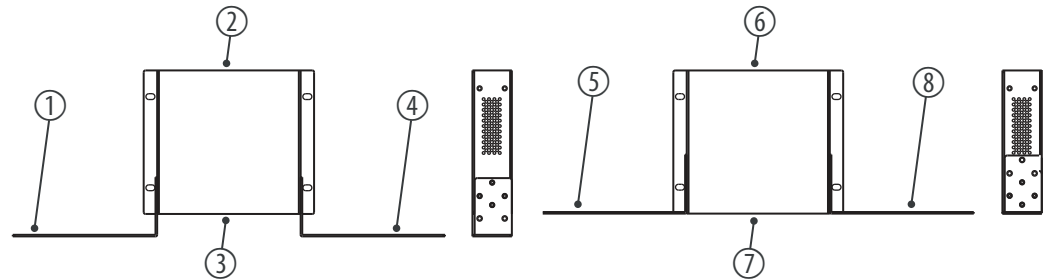


Version 1		Version 2	
1	Left rack angle	5	Left rack angle
2	Back	6	Back
3	Front	7	Front
4	Right rack angle	8	Right rack angle

Firmware update

The current firmware is available for download on the product page at www.thomann.de.

5 Connections and controls

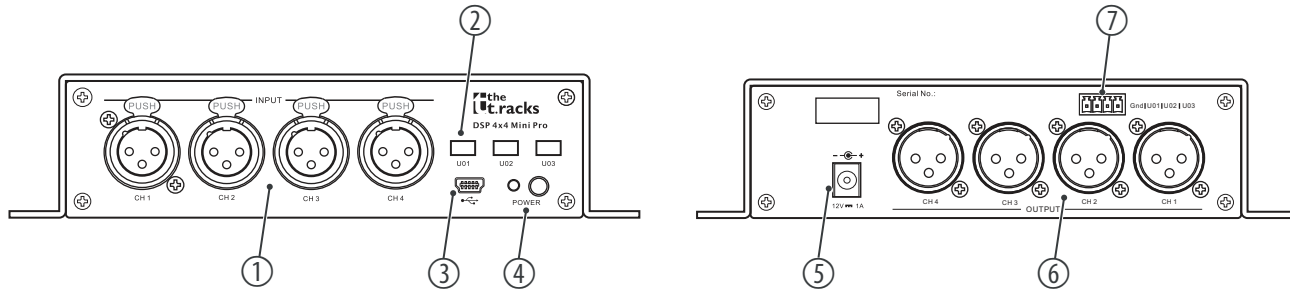

- | | |
|---|---|
| 1 | Inputs [CH 1]...[CH 4], designed as XLR (balanced). |
| 2 | [U01]...[U03] Buttons for switching between presets. Press the buttons for 2 seconds to call up a preset. |
| 3 | [USB] USB port |
| 4 | [POWER] Main switch and indicator LED. The LED lights up if the device is connected to the power supply. |
| 5 | Connection socket for the power adapter for power supply |
| 6 | Outputs [CH 1]...[CH 4], designed as XLR (balanced). |
| 7 | Control connection for [U01]...[U03] Potential-free bridging of [GND] and [U01]...[U03] calls up the relevant preset. |

6 Operating on a PC

Installing and starting the software

1. ➤ Insert the software CD into the disk drive of your Windows PC and start the installation programme that matches the device version.
2. ➤ Follow the instructions of the installation programme to completion.
3. ➤ Connect your PC to the device via a USB cable and turn on the device.
 - ⇒ The operating system detects the newly added USB device.
4. ➤ Open the programme. It automatically detects the connected device.
 - ⇒ In the upper right corner of the programme window the *'Online'* marking appears.

Exiting the software

1. ➤ Click the *'Online'* button in the programme window.
2. ➤ Close the programme window.

Components of the programme window

All tabs of the programme window have a similar structure and are divided into the following areas:



- | | |
|---|---|
| 1 | Tab for selecting a function group |
| 2 | Main menu |
| 3 | Button for the status of the connection to the PC |

4	Display area
5	Control area
6	Buttons for quick access to important presets

Main menu

Menu item	Meaning
'File'	Loading user presets and saving them on the PC
'Link'	Assignment of input to output channels
'Copy'	Copying parameter settings from one input or output channel to another
'Lock'	Changing the device password
'Test Tone'	Internal test tone generator: pink noise, white noise, sine wave 20 Hz...20 kHz
'Language'	Language for the user interface of the programme (English or German)
'About'	Information about the programme version

Buttons for quick access to important presets


Area	Meaning
'Address'	Display of the marking of the device
'Preset'	Display of the current user's preset
'Store'	Saving a user preset
'Recall'	Recalling a user preset

“Gain” tab




Area	Meaning
Display area	Waveform of the input and output channels: Use the radio buttons ' <i>Inx</i> ' and ' <i>Outx</i> ' to determine the inputs and outputs to be displayed.
Control area	Drag the faders with the mouse to adjust the levels for the input and output channels. The ' <i>Mute</i> ' button mutes or unmutes the respective channel. The ' <i>Normal</i> ' / ' <i>Inverse</i> ' button inverts the phase of the respective channel by 180° when needed.

"Gate" tab

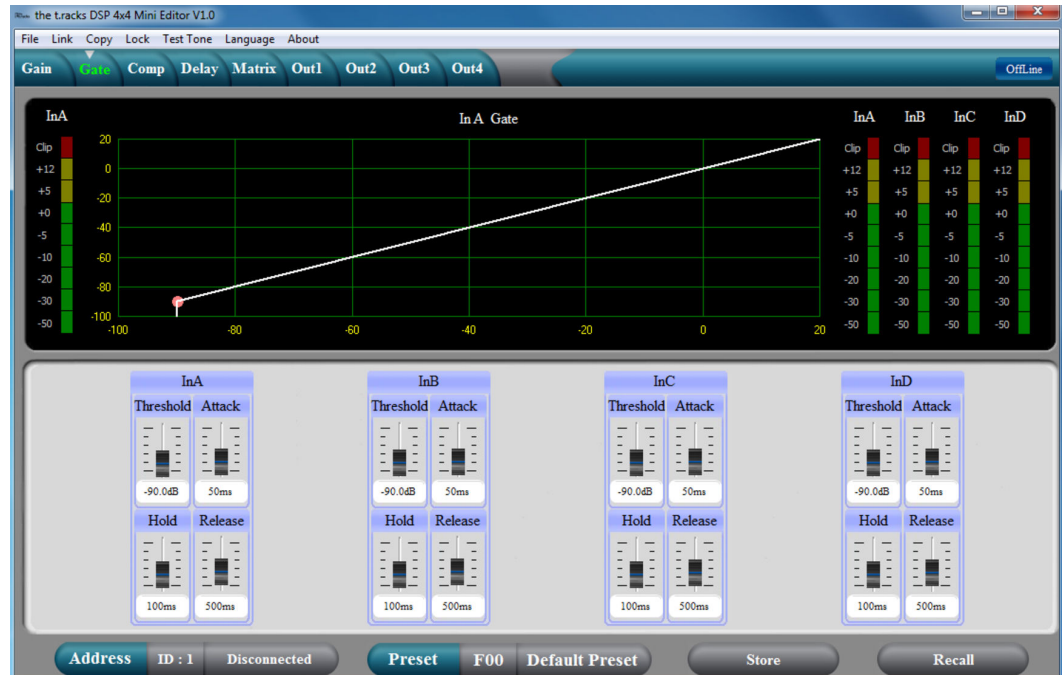


Area	Meaning
Display area	Shows the current settings of the noise gate for the respective channel, with a symbolic level indicator symbol appearing next to it for the input channels. The red dot marks the threshold level (<i>'Threshold'</i>) at which the noise gate opens.
Control area	Drag the faders with the mouse to set the noise gate parameters for all input and output channels: <i>'Threshold'</i> , <i>'Hold'</i> , <i>'Attack'</i> , <i>'Release'</i> .

“Comp” tab

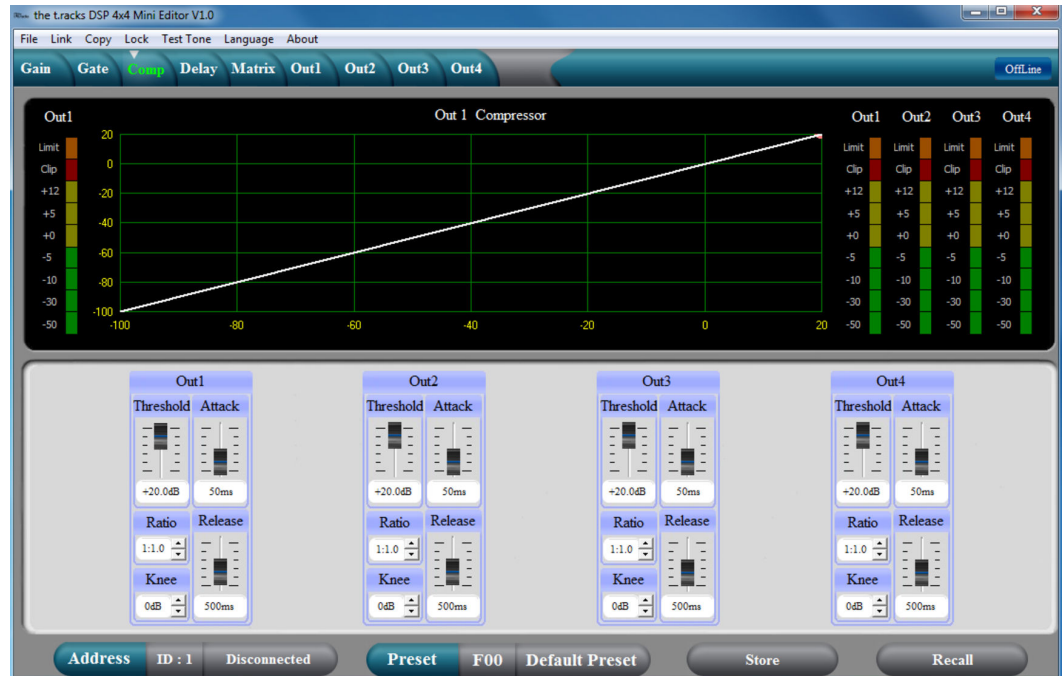

Area	Meaning
Display area	Shows the current settings of the compressor function for the respective output channel, with a symbolic level indicator symbol appearing next to it for all output channels. The red dot marks the threshold level (<i>Threshold</i>) from which the compressor operates.
Control area	Drag the faders with the mouse to set the compressor parameters for the output channels: <i>Threshold</i> , <i>Ratio</i> , <i>Knee</i> , <i>Attack</i> , <i>Release</i> .

“Delay” tab

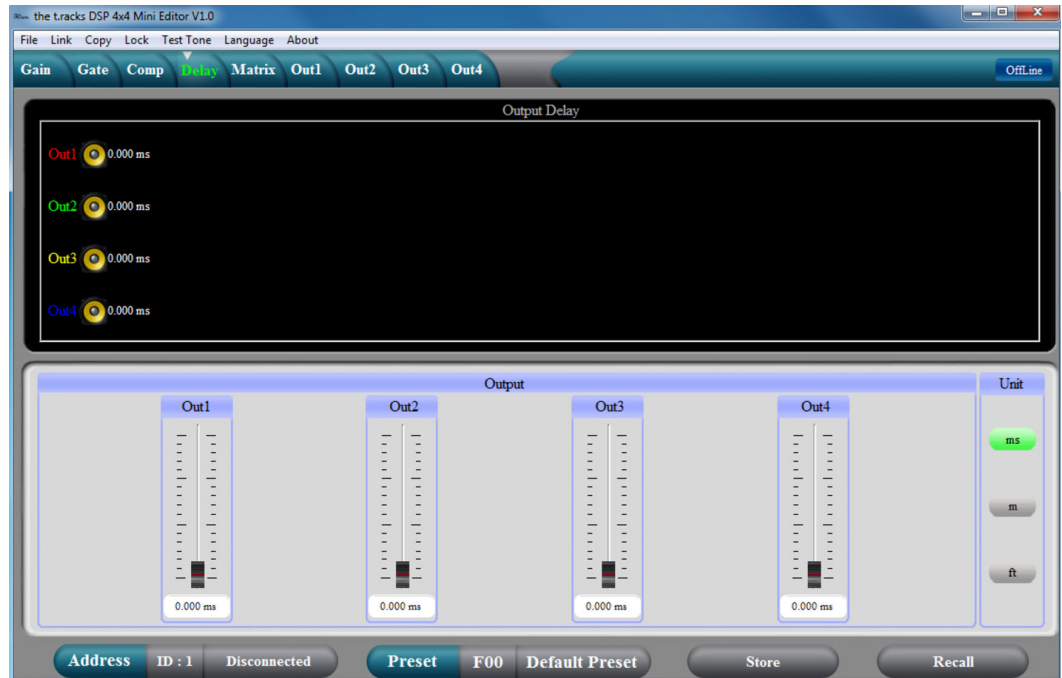

Area	Meaning
Display area	Shows the set delays for all output channels.
Control area	Drag the faders with the mouse to adjust the delay for the respective channel. In the ' <i>Unit</i> ' area, you can select the measuring unit milliseconds (' <i>ms</i> '), metres (' <i>m</i> ') or feet (' <i>ft</i> ').

“Matrix” tab



Area	Meaning
Display area	<p>Shows the current interconnection of input to output channels.</p> <p>Input and output channels can be renamed. Click on a function area (such as <i>'PEQ'</i> or <i>'DELAY'</i>) to open the tab. Here you can enter the corresponding parameters directly.</p>
Control area	<p>With a mouse click you can interconnect each input with each output channel. An input channel or the mix of several input channels can be freely assigned to each output channel. The green input channels are assigned to the respective output channel. You can adjust the level for each combination of input and output channel.</p>

Tabs "Out 1" - "Out 4"



Area	Meaning
Display area	<p>Use the radio buttons <i>'Mag'</i> or <i>'Phase'</i> to switch the diagram from Cartesian coordinates (level vs. frequency) to polar coordinates (angle vs. frequency).</p> <p>Use the radio button <i>'SHOW ALL EQ'</i> to show the parameters for all seven of the frequency bands.</p> <p>The corner points of the equalizer can be moved in the display area with the mouse.</p>
Control area	<p>You can enter the parameters of the parametric equalizer for each input channel and all seven frequency bands (numbered with <i>'PEQ'</i>) in the left part of the window directly as numerical values: Centre frequency, filter quality, slope, filter type. The <i>'Bypass'</i> button can be used to temporarily turn off the equalizer for the respective frequency band and the respective channel.</p> <p>In the middle part of the window (<i>'PEQ Parameter'</i>) you can set the parameters centre frequency, filter quality, and slope using the faders. The setting refers to the frequency band that is highlighted green in the left part of the window.</p> <p>You can select the cut-off frequency and the filter type for the low pass and the high pass filter. Use the <i>'Bypass'</i> button to temporarily turn off the filter.</p> <p>Drag the fader in the right part of the window using the mouse to set the level for the input channel. The <i>'Mute'</i> button mutes or unmutes the respective channel. The <i>'Normal'</i> / <i>'Inverse'</i> button inverts the phase of the respective channel by 180° when needed.</p>

7 Technical specifications

Input connections	Audio signal	Type	4 × XLR, balanced
		Level	+9 dBu
		Impedance	1 M Ω (stereo), 500 k Ω (mono)
Output connections	Audio signal	Type	4 × XLR, balanced
		Level	+9 dBu
		Impedance	< 500 Ω
Frequency response		20 Hz ... 20 kHz −0.3 dB	
Total harmonic distortion (THD)		−87 dB (1 kHz, +4 dBu)	
Signal-to-noise ratio		92 dB	
Crosstalk		> 80 dB 20 Hz ... 20 kHz	
Digital signal processing	Digital signal processor		32 bit
	A/D-D/A converter		24 bit
	Sampling rate		48 kHz

Technical specifications

Power supply	External power adapter, 100 - 240 V ~ 50/60 Hz	
Operating voltage	12 V $\overline{\text{---}}$ / 1 A , centre positive	
Dimensions (W × H × D)	Without rack angle: 190 mm × 44 mm × 160 mm With rack angle: 482 mm × 44 mm × 160 mm	
Weight	1.2 kg	
Ambient conditions	Temperature range	0 °C...40 °C
	Relative humidity	20%...80% (non-condensing)

Further information

2-way stereo	Yes
3-way stereo	No
Digital	Yes
Delay	Yes
EQ	Yes
Limiter	Yes
Computer remote	Yes
Suitable for rack mounting	Yes

8 Plug and connection assignment

Introduction

This chapter will help you select the right cables and plugs to connect your valuable equipment in such a way that a perfect sound experience is ensured.

Please note these advices, because especially in 'Sound & Light' caution is indicated: Even if a plug fits into the socket, an incorrect connection may result in a destroyed power amp, a short circuit or 'just' in poor transmission quality!

Balanced and unbalanced transmission

Unbalanced transmission is mainly used in semi-professional environment and in hifi use. Instrument cables with two conductors (one core plus shielding) are typical representatives of the unbalanced transmission. One conductor is ground and shielding while the signal is transmitted through the core.

Unbalanced transmission is susceptible to electromagnetic interference, especially at low levels, such as microphone signals and when using long cables.

In a professional environment, therefore, the balanced transmission is preferred, because this enables an undisturbed transmission of signals over long distances. In addition to the conductors 'Ground' and 'Signal', in a balanced transmission a second core is added. This also transfers the signal, but phase-shifted by 180°.


Since the interference affects both cores equally, by subtracting the phase-shifted signals, the interfering signal is completely neutralized. The result is a pure signal without any noise interference.

1/4" TRS phone plug (mono, balanced)



1	Signal (in phase, +)
2	Signal (out of phase, -)
3	Ground


XLR plug (balanced)

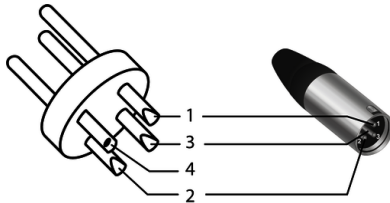

1	Ground, shielding
2	Signal (in phase, +)
3	Signal (out of phase, -)
4	Shielding on plug housing (option)


9 Protecting the environment

Disposal of the packing material

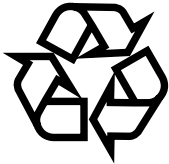


Environmentally friendly materials have been chosen for the packaging. These materials can be sent for normal recycling. Ensure that plastic bags, packaging, etc. are disposed of in the proper manner.

Do not dispose of these materials with your normal household waste, but make sure that they are collected for recycling. Please follow the instructions and markings on the packaging.

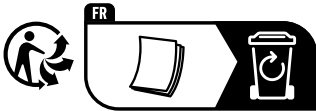

Observe the disposal note regarding documentation in France.

Disposal of your old device

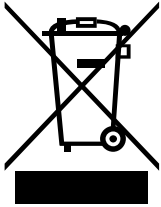

This product is subject to the European Waste Electrical and Electronic Equipment Directive (WEEE) as amended.

Do not dispose of your old device with your normal household waste; instead, deliver it for controlled disposal by an approved waste disposal firm or through your local waste facility. If in doubt, consult your local waste management facility. You can also return the device to a retailer if they offer to take the device back for free or if they are legally obliged to do so. When disposing of the device, comply with the rules and regulations that apply in your country. You can also return your old device to Thomann GmbH at no charge. Check the current conditions on www.thomann.de.

Proper disposal protects the environment as well as the health of your fellow human beings. This is because the proper handling of old devices negates the potential negative effects of hazardous substances, and because it conserves resources by recycling them.

Also note that waste avoidance is a valuable contribution to environmental protection. Repairing a device or passing it on to another user is an ecologically valuable alternative to disposal.

If your old device contains personal data, delete those data before disposing of it.

